


RASSON 锐胜

220V/AC
12' SNOOKER
斯诺克球臺

马格南 MAGNUM II

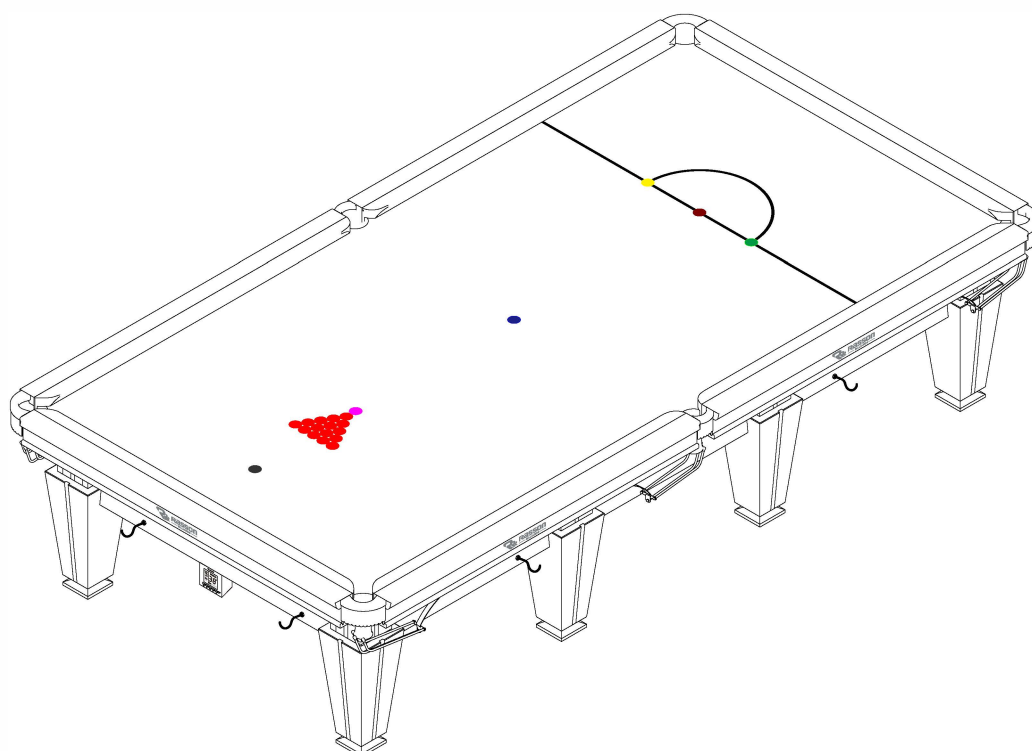

BILLIARDS INSTRUCTION MANUAL

Product Safety Information:



















Manufacturer:
RASSON BILLIARDS MFG
No.18th Floor, Weiyangyipin Building,
Leying Plaza, Bali Lake New District,
Jiujiang City, Jiangxi Province, China
<https://www.rasson.cn/>

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 

Responsible Person:
Dynamic Billard Organisation GmbH
Konrad-Zuse-Str. 15
66459 Kirkel-Limbach
Deutschland
E-Mail: vertrieb@dynamic-billard.de

Jan.2024

WWW.RASSON.CN
Junny@rasson.cn

HARDWARE/五金單

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	H1		HEX HEAD BOLT 1/2" X 5-1/2"(M12X 140mm)	24
	H2		FLAT WASHER 1/2" I.D.	24
	H3		HEX HEAD CROSS BOLT 3/8" X 3-1/8"(M10 X 80mm)	36
	H4		FLAT WASHER 3/8" I.D.	36
RAIL/POCKET/FRAME/SLATE 扶手 / 球袋 / 圍板 / 石板	H5		MACHINE SCREW 1/4" X 2"(M6X50mm)	24
	H6		FLAT HEAD SCREW 1/4" X 2-9/16"(M6X65mm)	50
	H7		HEX HEAD CROSS BOLT PRE-ASSEMBLED IN SLATE	36
	H8		SPRING LOCK WASHER PRE-ASSEMBLED IN SLATE	36
	H9		FLAT WASHER PRE-ASSEMBLED IN SLATE	36
	H10		CROSS ROUND BOLT-COLOR 1/4" X 3/4"(D6-20G X 18MM彩鋅)	18
	H11		HEX HEAD CROSS BOLT 5/16" X 1"(M8 X 25mm)	4
	H12		FLAT WASHER 5/16" I.D.	4
	H13		HEX HEAD BOLT (built-in rails)	/
	H14		SPRING LOCK WASHER (built-in rails)	/
	H15		FLAT WASHER (built-in rails)	/
	H16		FLAT HEAD SCREW-COLOR 8# X 1"(M4X25mm彩鋅)	4
	H17		CABLE CLIP 纜纜夾	15
	H18		WOOD JOINT 1/2" X 2"(D12 X 50mm)木梢	16

PARTS LIST/ 配件單				
PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	1		CORNER LEG 底腳	4
	2		MIDDLE LEG 中腳	4
CABINET/FRAME 大框 / 圍板	3		SIDE APRON 長圍板	2
	4		END APRON 短圍板	2
	5		LEG BEAM FOR MIDDLE LEGS 中腳板	2
	6		CENTER BEAM 中長梁	1
TOP RAIL 扶手	7		LEFT STEEL CUSHION	2
	8		RIGHT STEEL CUSHION	2
	9		END STEEL CUSHION	2
	10		TOP RAIL LEFT SIDE 左扶手	2
	11		TOP RAIL RIGHT SIDE 右扶手	2
	12		TOP RAIL END 端扶手	2
POCKET 球袋	13		CORNER POCKET 角袋	4
	14		SIDE POCKET 中袋	2
	15		RING FOR CORNER POCKETS 角袋棉網環	4
	16		RING FOR SIDE POCKETS 中袋棉網環	2
	17		SLATE (LEFT) 石板(左)	2

 
 












 
 
PARTS LIST/ 配件單				
PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
SLATE 石板	18		SLATE (MIDDLE) 石板(中)	2
	19		SLATE (CENTER) 石板(中心)	1
WOOD FRAME 釘布板	20		WOOD FRAME (END) 釘布板(端邊)	2
	21		WOOD FRAME (SIDE) 釘布板(長邊)	4
	22		WOOD FRAME (SIDE POCKET) 釘布板(中袋)	2
	23		WOOD FRAME (CORNER POCKET) 釘布板(底袋)	4
HOOK 掛鈎	24		SIDE APRON 長邊裙板	4
	25		END APRON 端裙板	2
	26		CLOTH 臺尼	1
	27		HOOK 掛鈎	8
	28		UNDER-TABLE TACKLE RACK 波浪条掛鈎	2
	29		WOOD BEAM 木支架	8
	30		WOOD BLOCK 脚連木	4
	31		HEATING BOARD 加熱板	6
	32		THERMOSTAT 温控器	1
	33		LEVELBOX PLUS 水平調整器	30

FIG.1

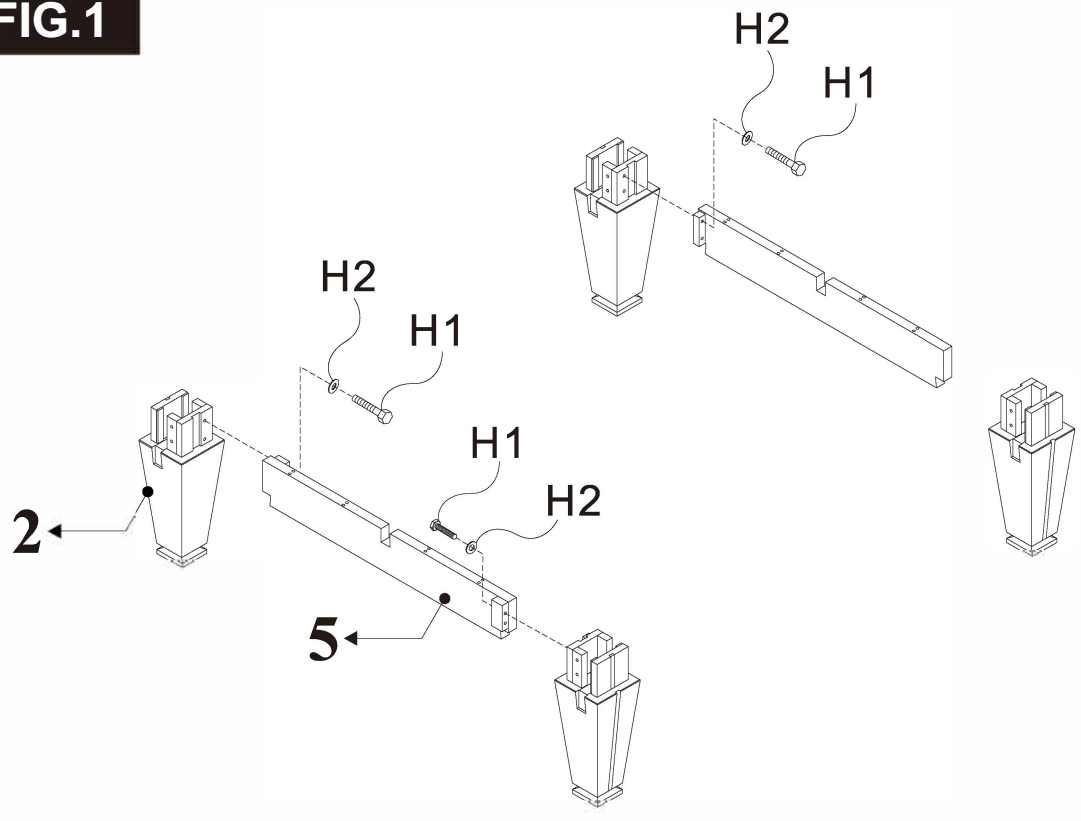


FIG.2



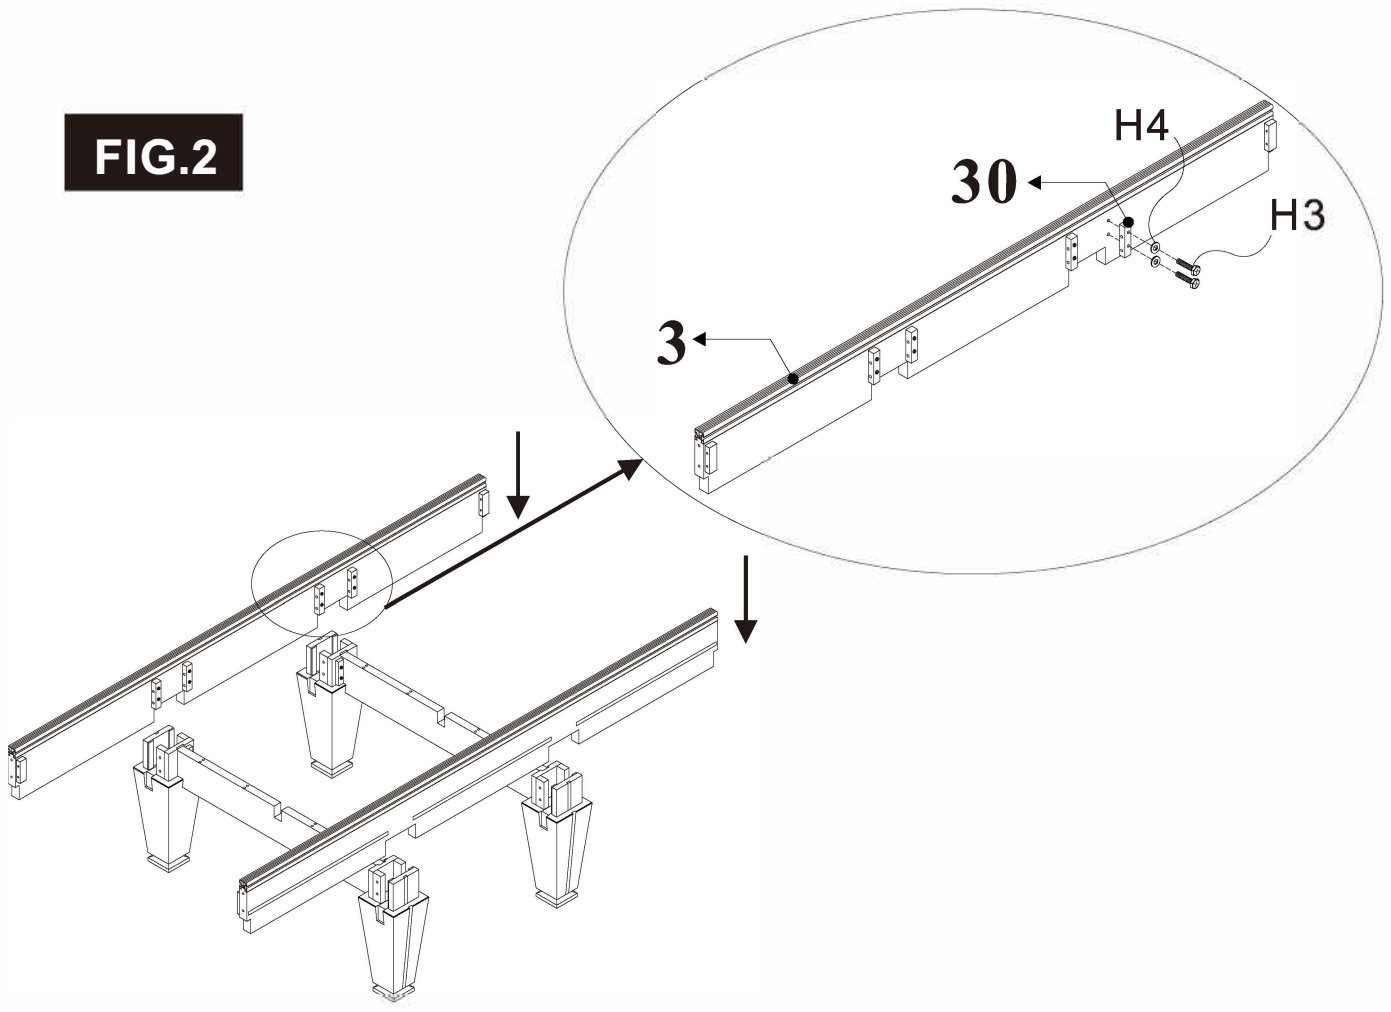


FIG.3

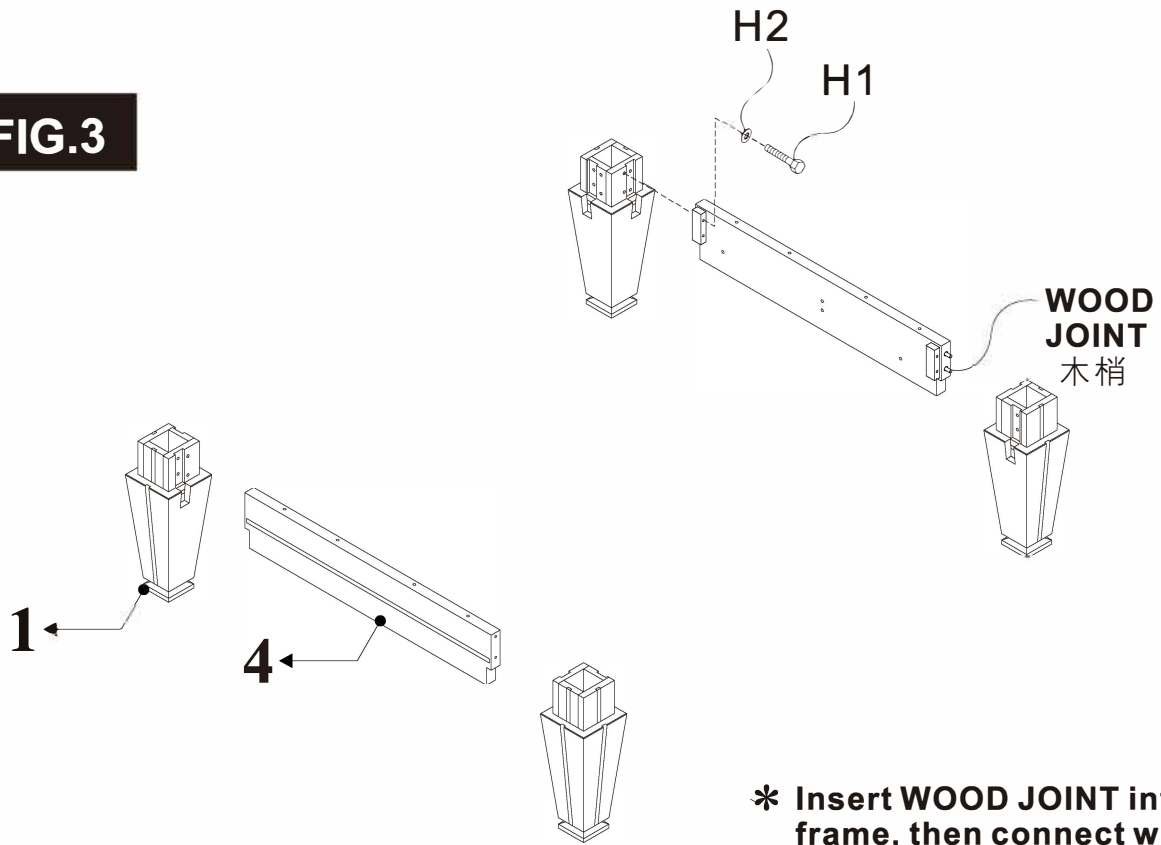

*** Insert WOOD JOINT into frame, then connect with H1**
 圍板插入木梢，然后用H1螺杆連接

FIG.4

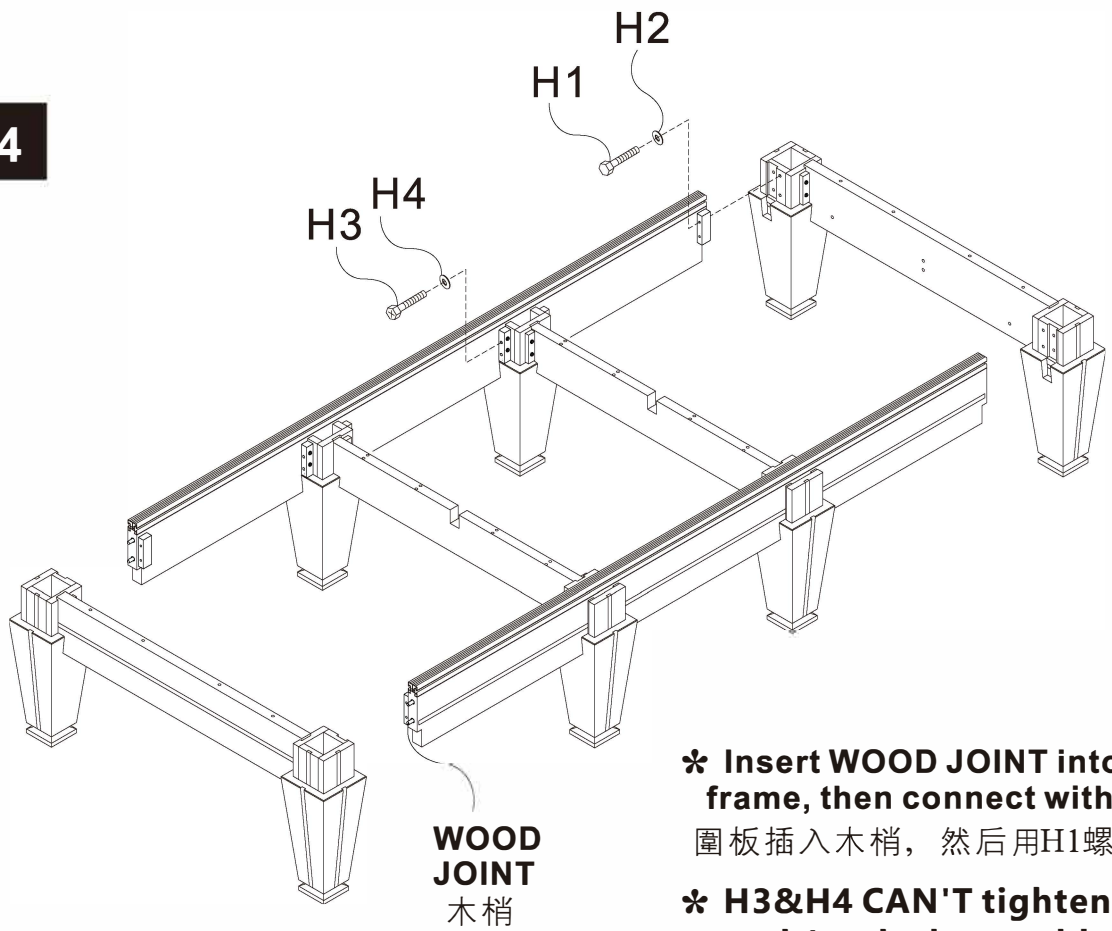


*** Insert WOOD JOINT into frame, then connect with H1**
 圍板插入木梢，然后用H1螺杆連接

*** H3&H4 CAN'T tighten too much(or the leg could split)**

H3 & H4 不能太緊很多(否則腿會裂開)

FIG.5

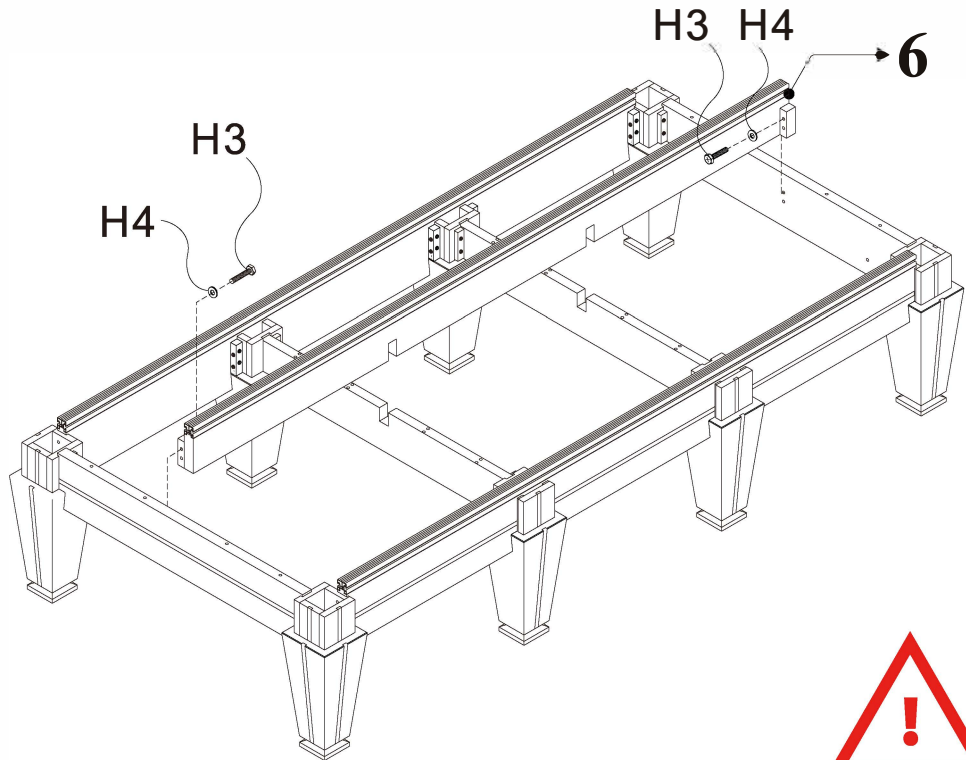

*** Please assemble the drawer first as per instructions on Page 17 before moving on next step of assembly.**

FIG.6

下一步請參考P17頁安裝抽屜

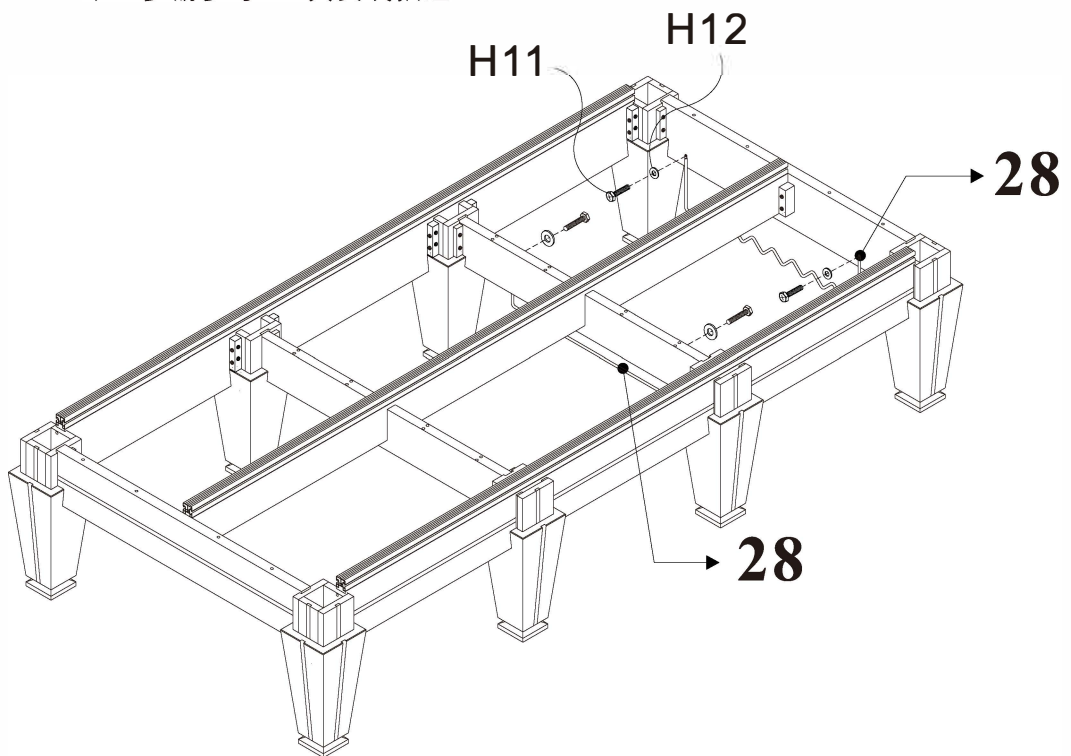


FIG.7

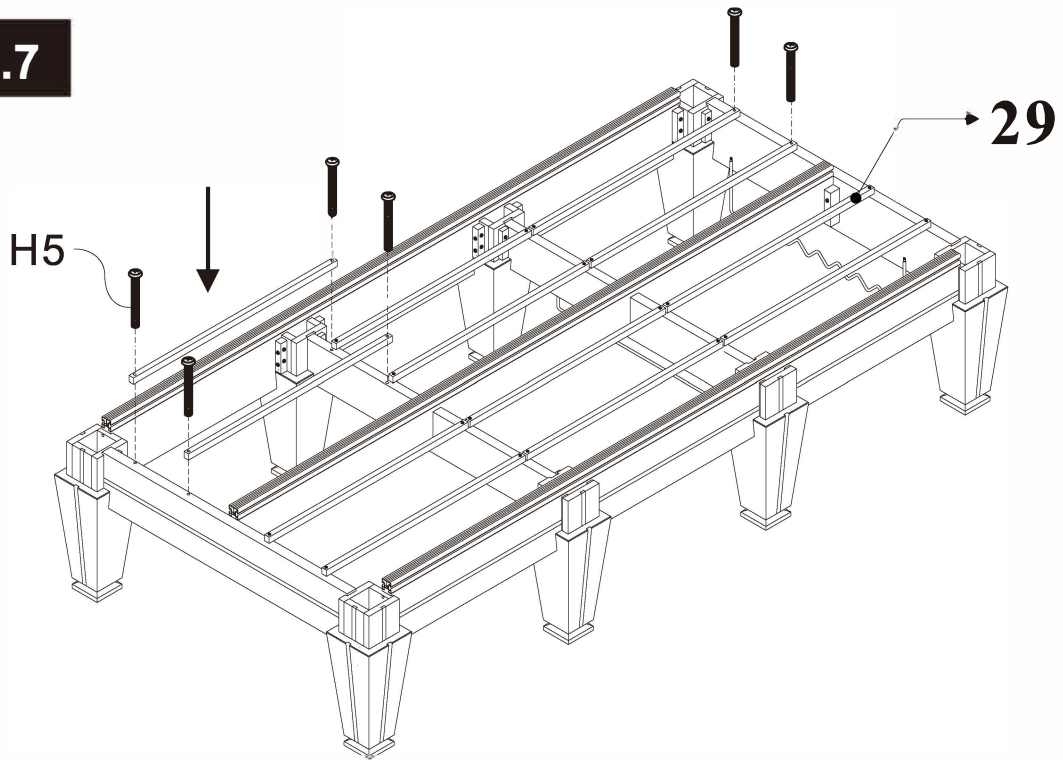


FIG.8


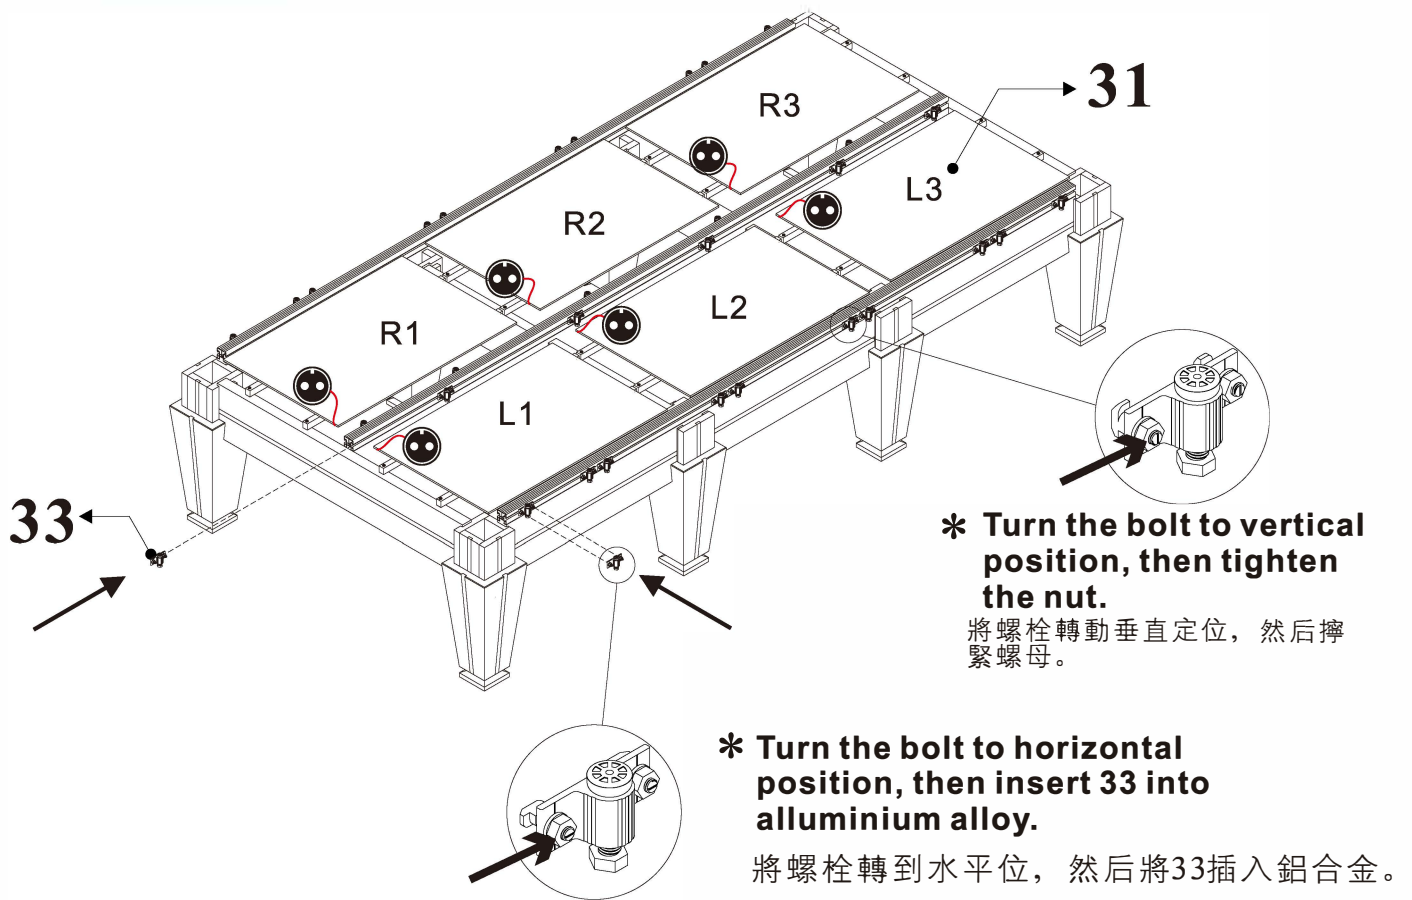


FIG.9

* For non-UK Standard Plug country/area, please add the 34(Travel Plug Adapter) before connecting to AC POWER PLUG


* 非英國標準插頭國家/地區，在連接到交流電源之前請接入旅行插頭適配器。

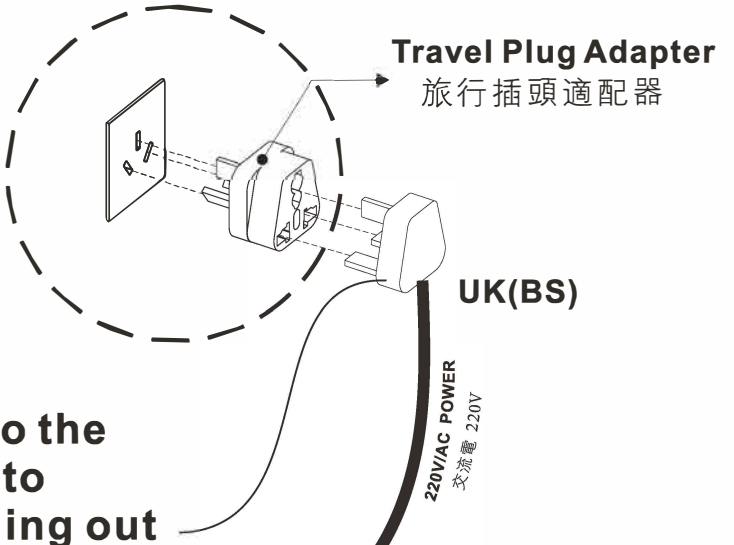

MAKE SURE insert the Plug to the Power Transformer properly to avoid the heating board burning out

Please refer to the attachment.
請參考附件。

32

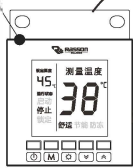


Temperature Sensor (White)
溫控器傳感器 (白)

Temperature Sensor (White)
溫控器傳感器(白)




* Use Cable Clip H18 to secure the cable underneath the Center Beam.

使用電纜夾 H17 固定電纜到中長梁底部。

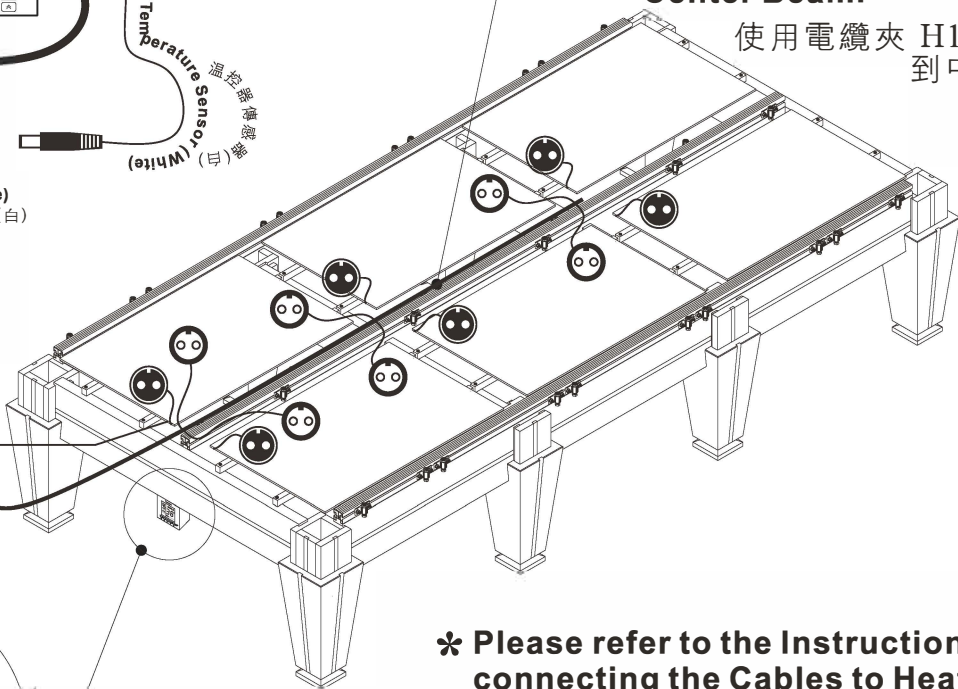

* Please refer to the Instructions for connecting the Cables to Heating Board.

請參閱使用說明將電纜連接到加熱板。

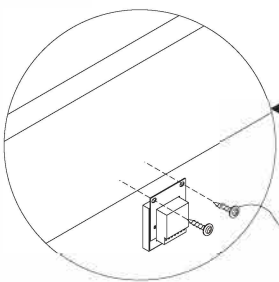

H16


Fix the Thermostat with screws to the backside of Cabinet.

用自攻絲將溫控器安裝到圍板背面

FIG.10

* Take off H7-H9 from slates and keep for future use.

從石板取下H7 - H9待后安裝使用

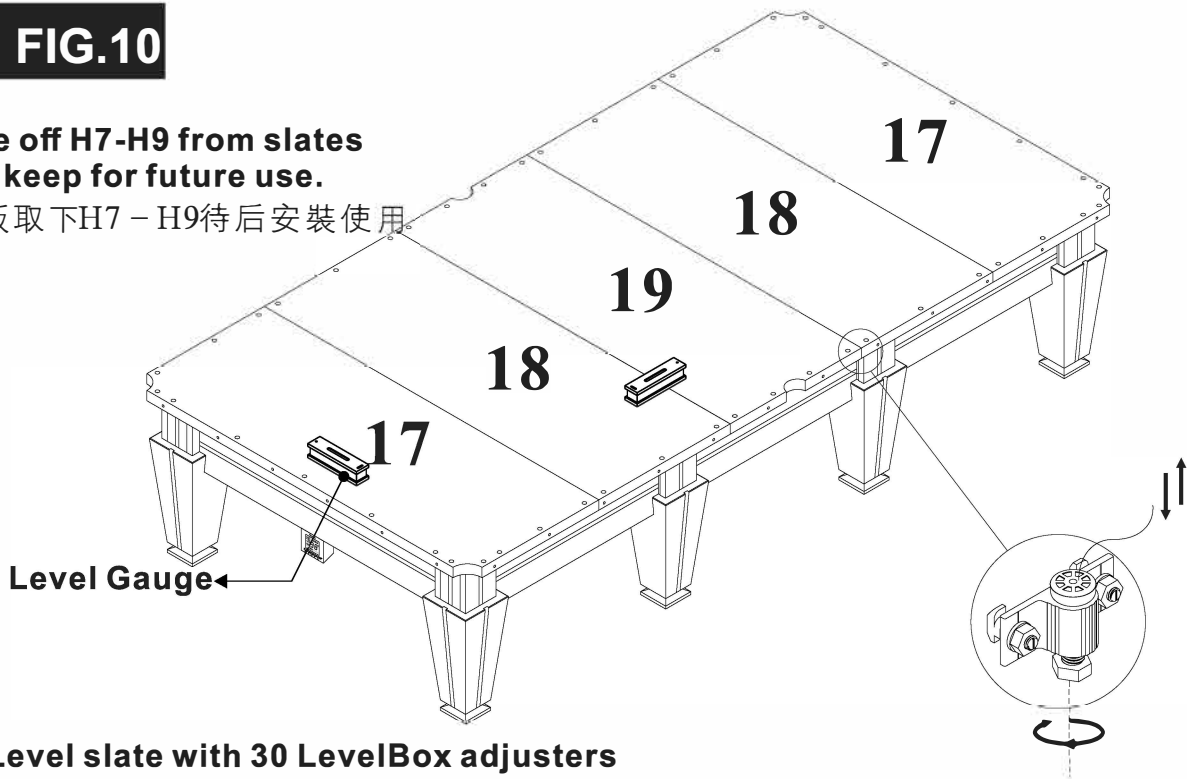

* Level slate with 30 LevelBox adjusters

通過30個調整器調節石板水平

* Level slate through spinning hex screws to adjust slate height.

通過旋轉螺桿調整石板水平

FIG.11

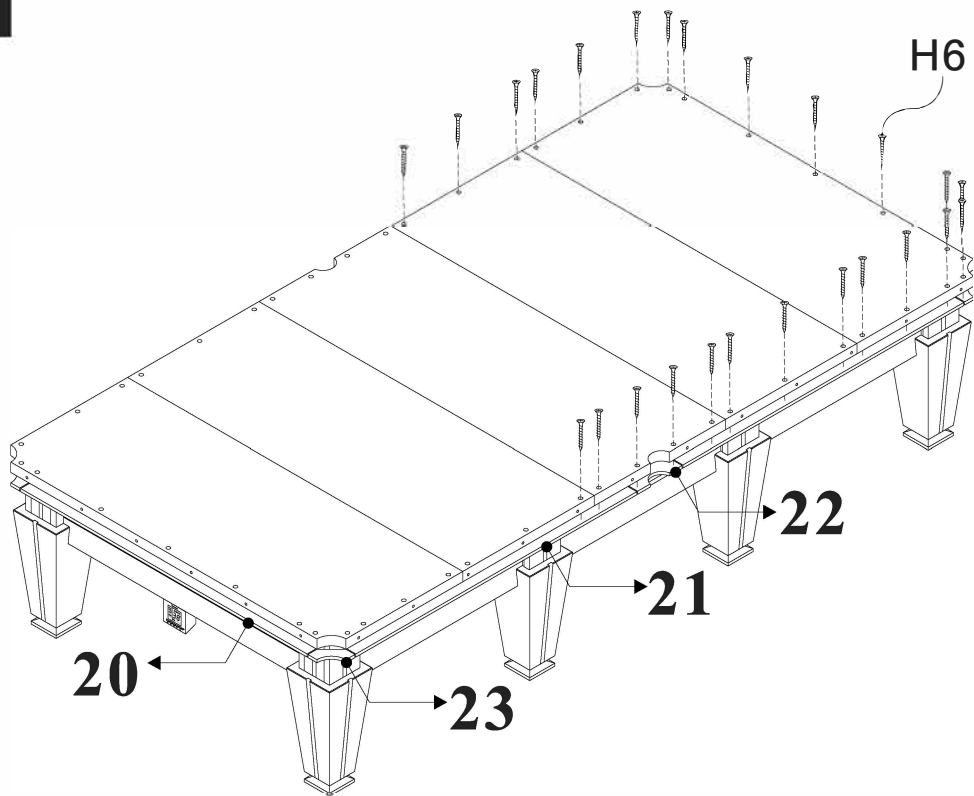


FIG.12

Cut holes in cloth at rail both locations.
石板螺桿孔開洞



 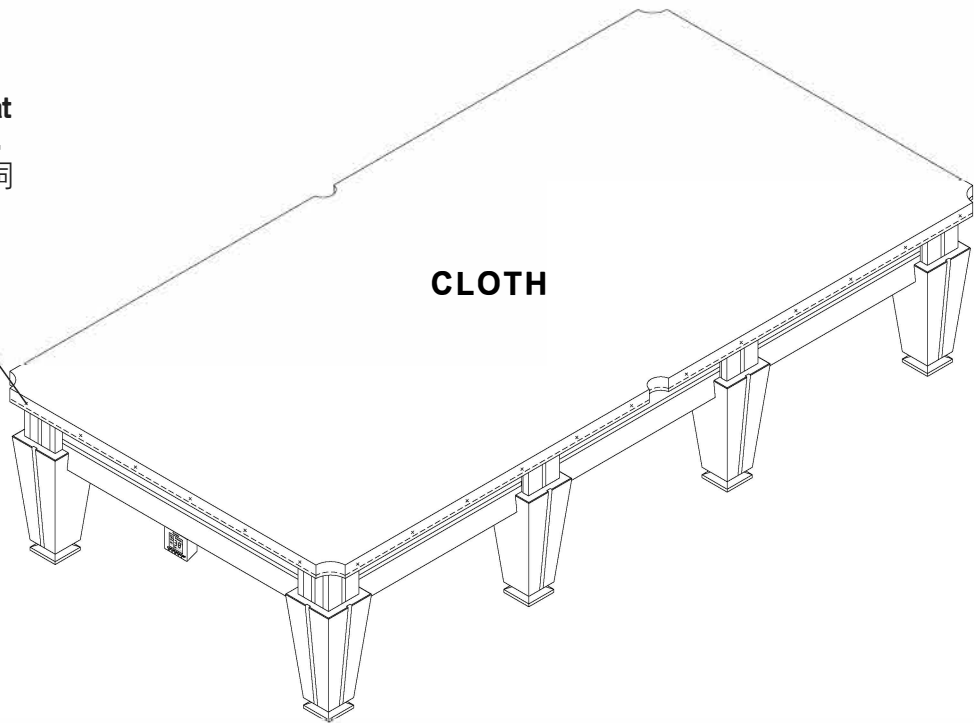


FIG.13

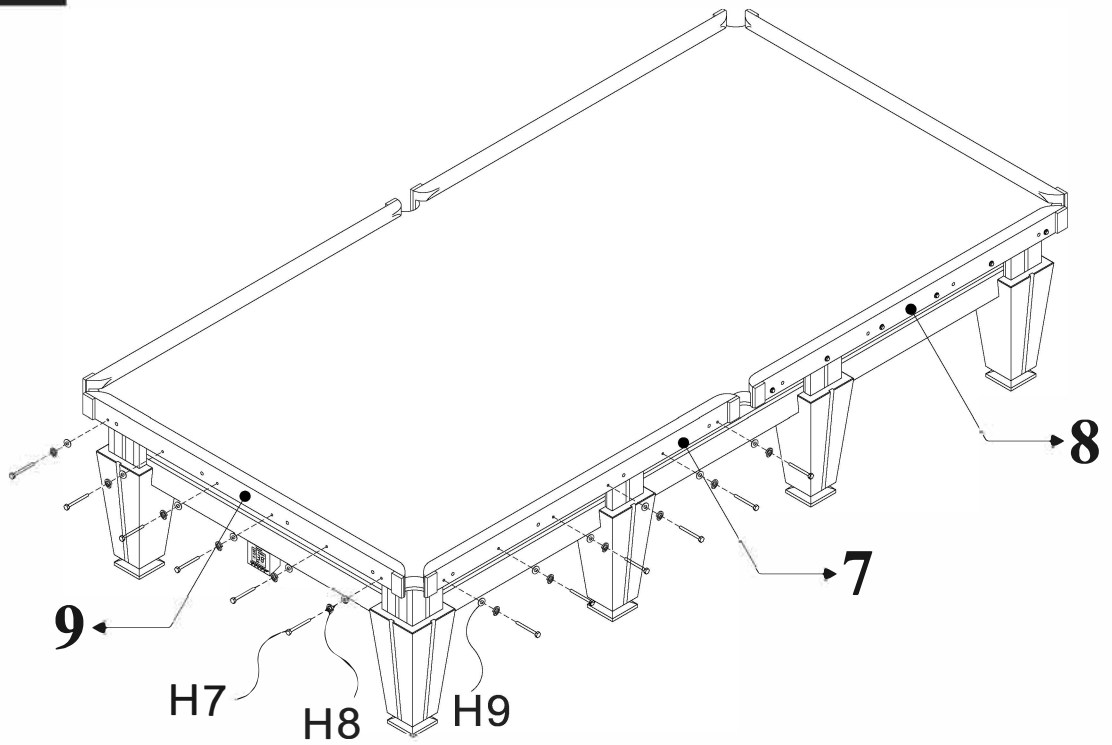

* Attach H7-H9 into slate
安裝H7 - H9到石板

FIG.14

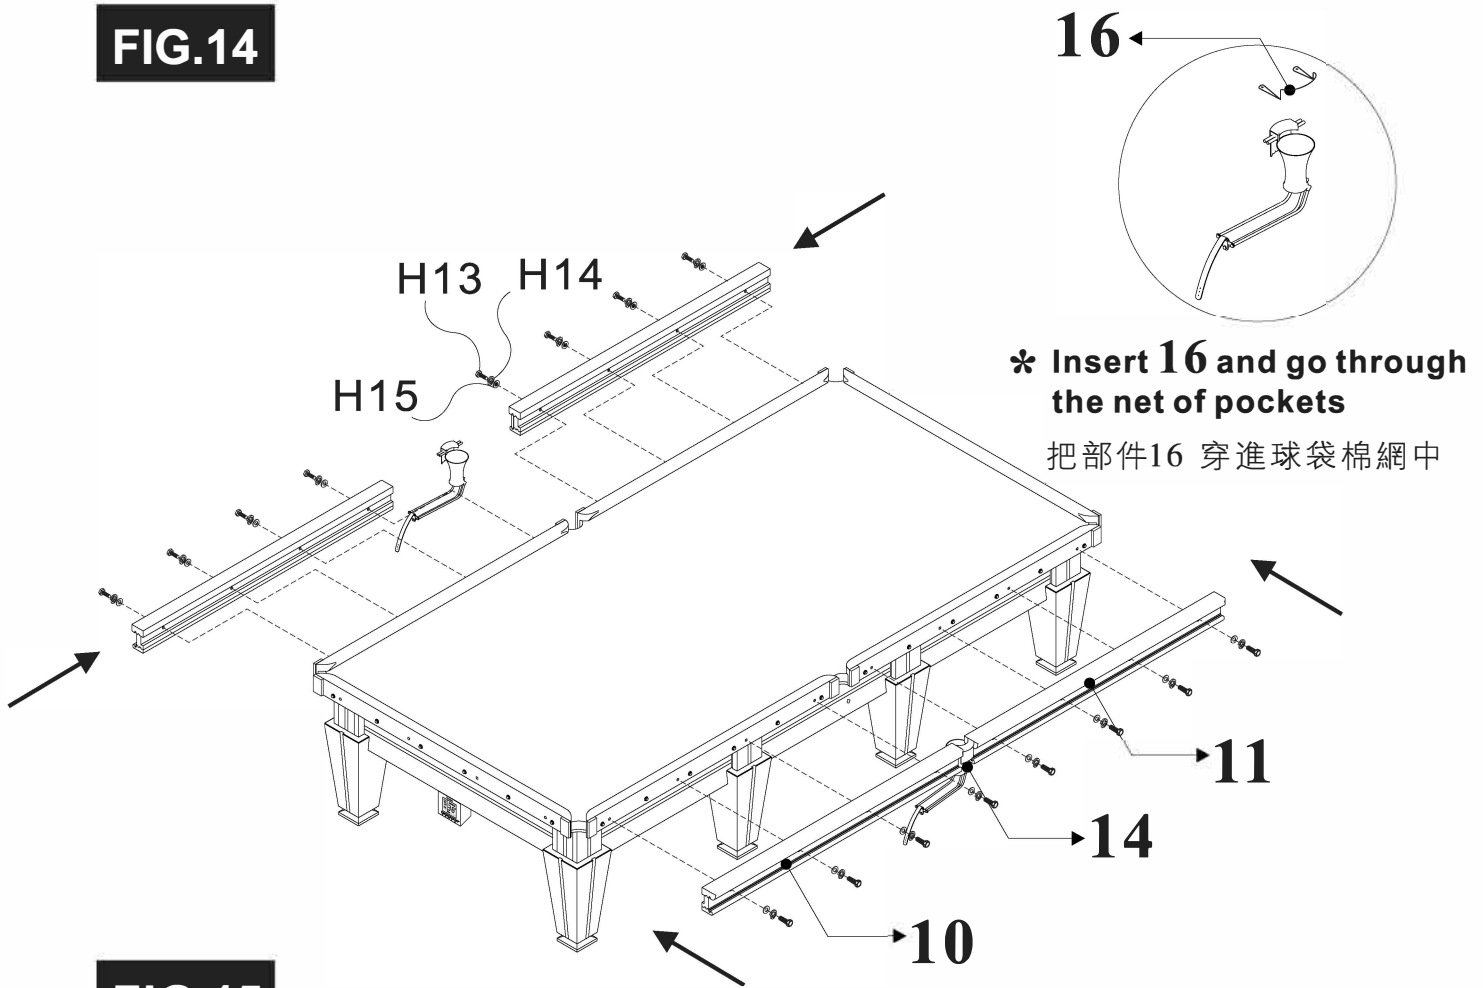


FIG.15


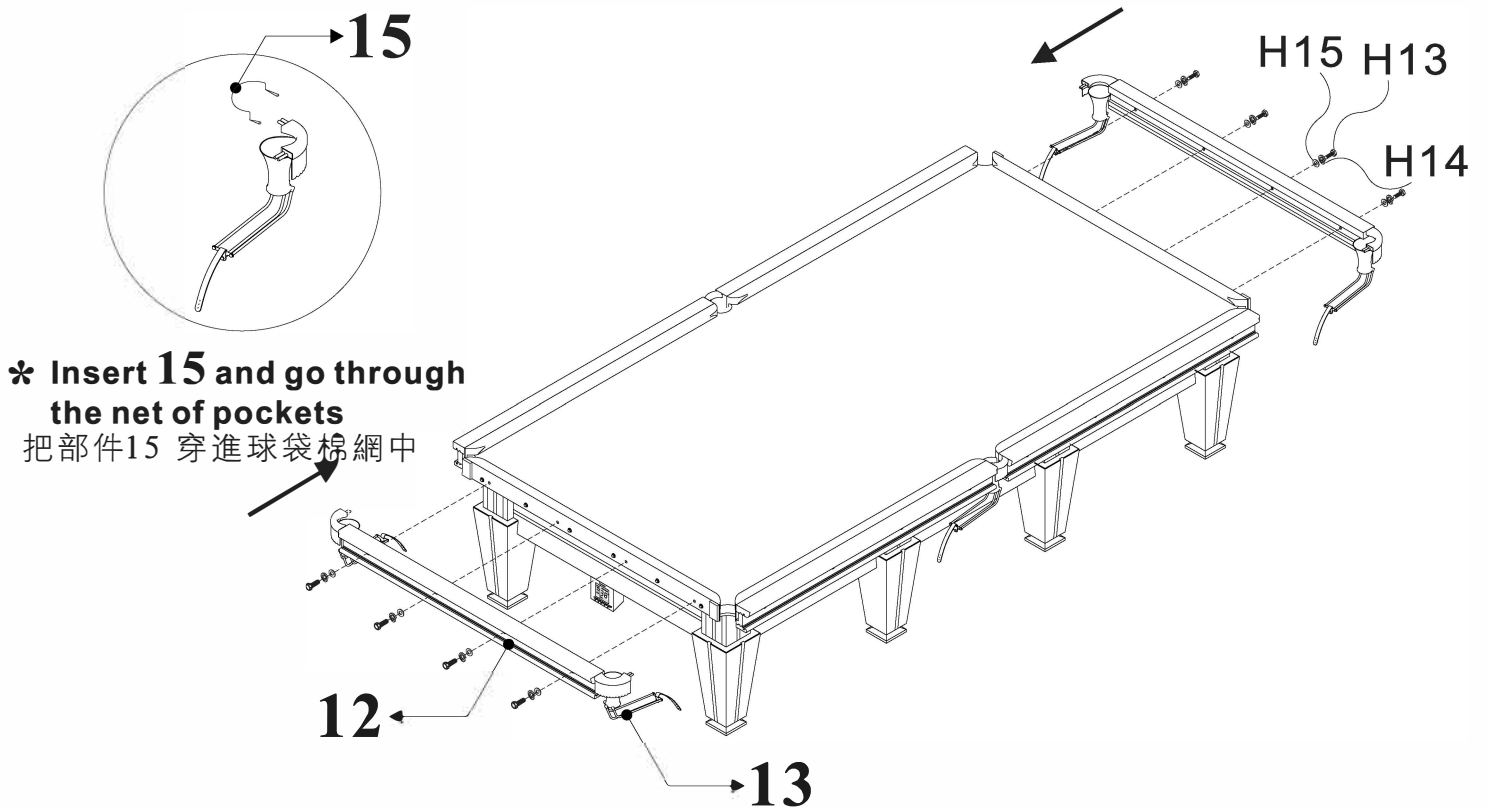


FIG.16


*** Please assemble the press frame in character order**
請按字母順序安裝扶手

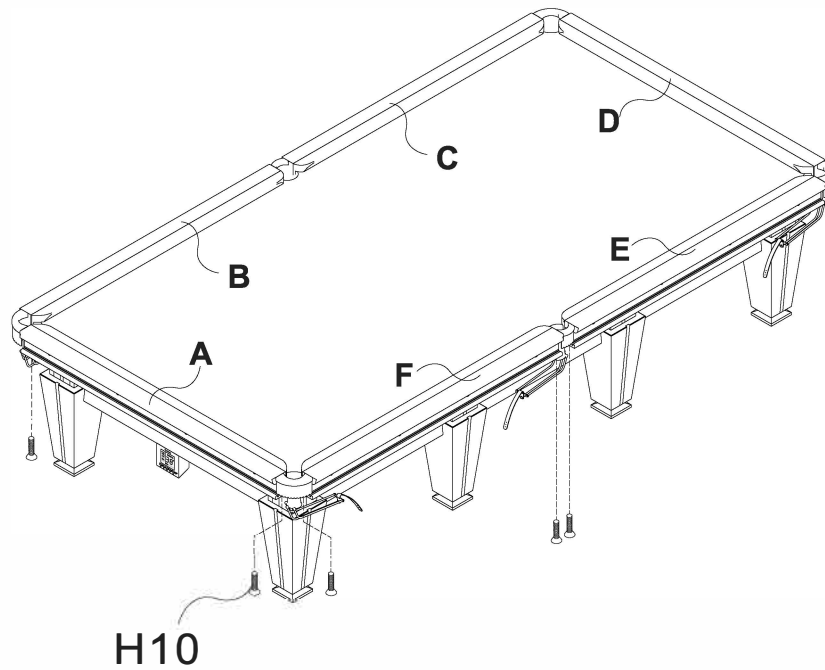

*** Secure the pocket ring and rails with H10**

用螺桿H10將中袋13與底袋14固定到扶手底部


FIG.17

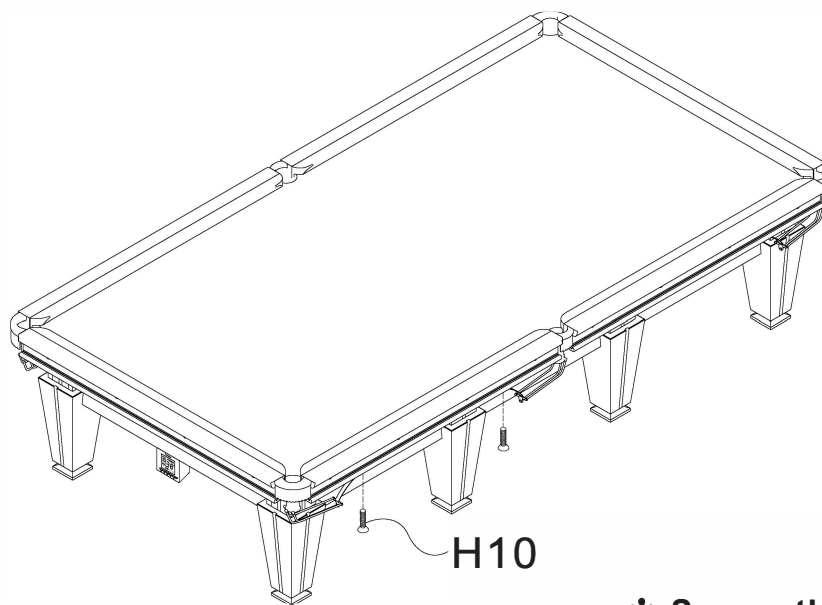

*** Secure the leather strip of pockets to the bottom of cushion with H10**


用螺桿H10將球袋皮帶固定在釘布板

FIG.18

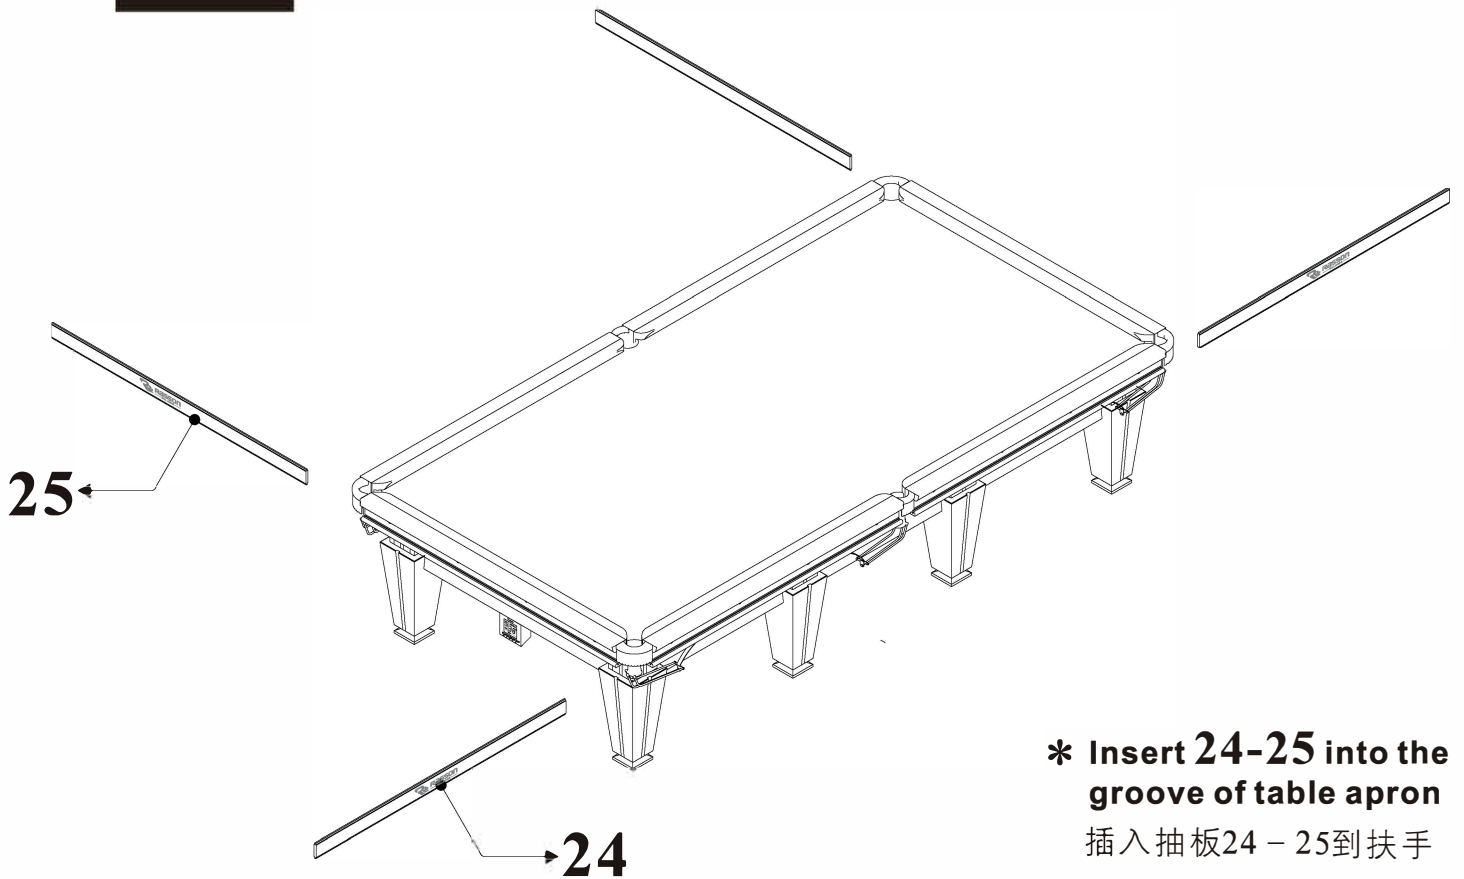


*** Insert 24-25 into the groove of table apron**
插入抽板24 - 25到扶手

FINISH

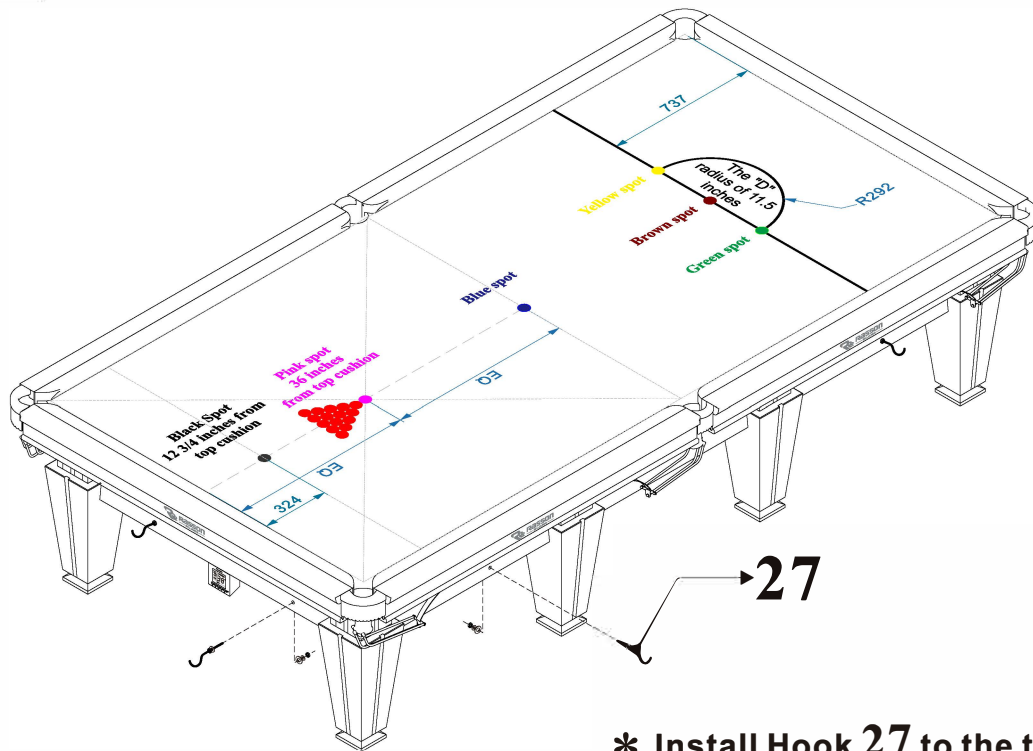

*** Install Hook 27 to the table (take off the nut that pre-attached first)**
安裝掛鉤27到圍板

THERMOSTAT INSTRUCTION

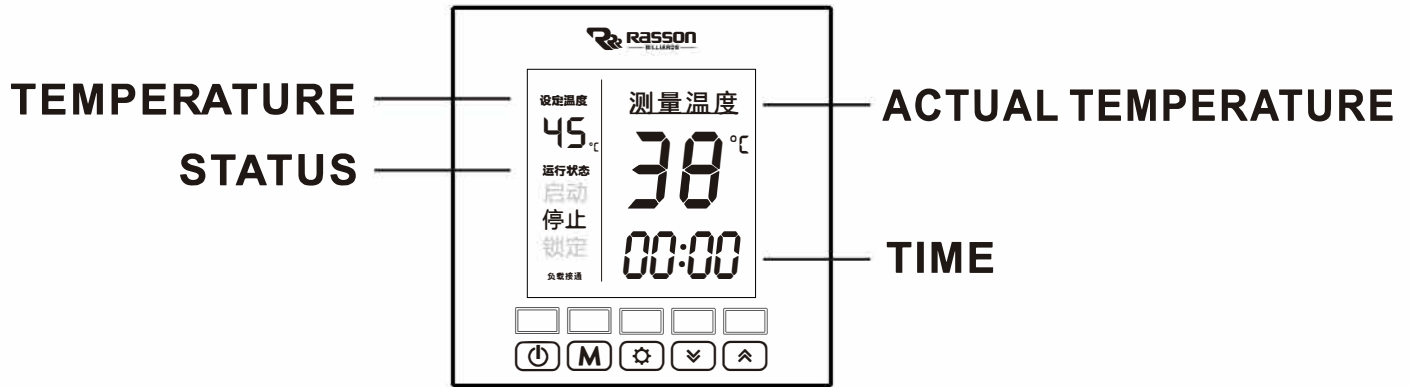

STATUS	运行	RUN
	停止	STOP
	锁定	LOCK


Buttons Function Instruction

Button	Function	Instruction
	Buttons Lock	Keep pressing the button for 4 seconds when the device is turned on, “锁定” will appear on the screen, which indicates the buttons have been locked. In the same way, keep pressing the button for 4 seconds to unlock the screen and buttons.
	Power	Press button could turn on/off the Thermostat while the device is electrified.
	Operation Mode	Please press the button to switch between four modes: number 1 - 4. 详细内容参看 MENU MODE 。
	Setting	长按进入定时关机设置。长按后，先设定小时，再单击设定分钟。再单击完成设定。
	Temperature adjust	Please press the and buttons to adjust.

ATTACHMENT


Step 1

Use some tool to take out the metal plate from bottom of the device for future use.

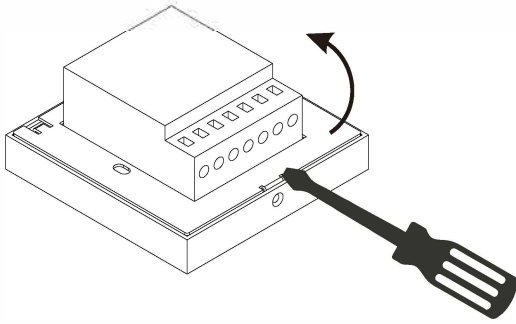


Step 2

Attach the bolts as the picture, then insert the metal plate into thermostat.

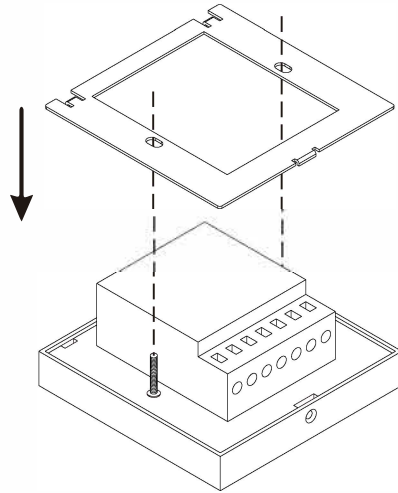


Step 3

Secure the metal plate and thermostat with screws, then attach nuts to tighten the metal plate and bolts.

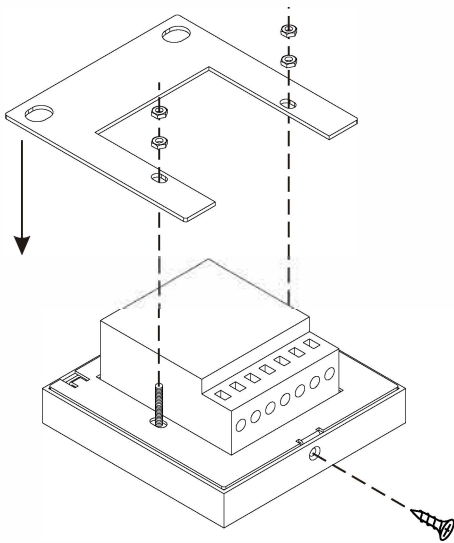

Finish

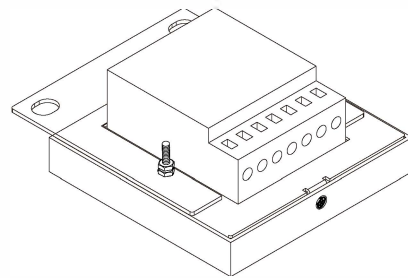

Menu Mode

When the Thermostat is off, keep pressing the **(M)** button for more than 4 seconds to release it and enter into the menu setting mode. Then every time the mode button is pressed, the screen switches from number 1 to 4, representing 4 parameters. Press the **(↑)** or **(↓)** button to change the parameters. The thermostat will back automatically to the original status when no any button is pressed for 8 seconds.

Figure "1"- Temperature Calibration interface: press he **(↑)** or **(↓)** button to adjust the calibration, 9 °C to -9 °C is adjustable, default is 0 °C.



Figure "2" - Return difference setting to set the return difference between opening temperature and setting temperature. For example, when the setting is 20 °C and the return difference is set to "2", when the Thermostat is in the heating state, the heating device will close automatically when the temperature rises to 22 °C. The factory default setting of return difference is "1".

Figure "3"- The upper limit of temperature adjustment setting: press the **(↑)** or **(↓)** button to adjust. The maximum can be 85 °C, the minimum can be 10 °C, the default is 85 °C.

 


Figure "4"- The lower limit of temperature adjustment setting: press the **(↑)** or **(↓)** button to adjust. The maximum can be 80 °C, the minimum can be 5 °C, the default is 5 °C.

DRAWER ATTACHMENT

REPLACEMENT PARTS LIST (HARDWARE)

PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
DRAWER	A1		MACHINE SCREW 1/4" X 1-1/2"(M6X38mm)	2
	A2		FLAT HEAD SCREW 4# X 1-3/4"(M4X45mm)	7

REPLACEMENT PARTS LIST

PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
DRAWER	A3		DRAW FRAME	1
	A4		DRAW JOINT WOOD	1
	A5		DRAW	1

