马格南 II
MAGNUM



BILLIARDS INSTRUCTION MANUAL
臺球桌安裝說明書

220V/AC
12' SNOOKER



請先整體看一遍說明書，再根據步驟安裝 PLEASE READ THE INSTRUCTION MANUAL THOROUGHLY FIRST AND THEN INSTALL ACCORDING TO THE STEPS!

www.rasson.cn

JUL.2026










HARDWARE / 五金單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	H1		HEX HEAD BOLT 1/2" X 5-1/2"(M12X 140mm)	24
	H2		FLAT WASHER 1/2" I.D.	24
	H3		HEX HEAD CROSS BOLT 3/8" X 3-1/8"(M10 X 80mm)	36
	H4		FLAT WASHER 3/8" I.D.	36
RAIL/POCKET/FRAME/SLATE 扶手 / 球袋 / 圖板 / 石板	H5		MACHINE SCREW 1/4" X 2"(M6X50mm)	24
	H6		FLAT HEAD SCREW 1/4" X 2-9/16"(M6X65mm)	50
	H7		HEX HEAD CROSS BOLT PRE-ASSEMBLED IN SLATE	36
	H8		SPRING LOCK WASHER PRE-ASSEMBLED IN SLATE	36
	H9		FLAT WASHER PRE-ASSEMBLED IN SLATE	36
	H10		CROSS ROUND BOLT-COLOR 1/4" X 3/4"(D6-20G X 18MM 彩鋅)	18
	H11		HEX HEAD CROSS BOLT 5/16" X 1"(M8 X 25mm)	4
	H12		FLAT WASHER 5/16" I.D.	4
	H13		HEX HEAD BOLT (built-in rails)	/
	H14		SPRING LOCK WASHER (built-in rails)	/
	H15		FLAT WASHER (built-in rails)	/
	H16		FLAT HEAD SCREW-COLOR 8# X 1"(M4X25mm 彩鋅)	4
	H17		CABLE CLIP 綫纜夾	15
	H18		WOOD JOINT 1/2" X 2"(D12 X 50mm) 木梢	16

PARTS LIST / 配件單

表1

PACKAGE 包装	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌脚	1		CORNER LEG 底脚	4
	2		MIDDLE LEG 中脚	4
CABINET/FRAME 大框 / 圖板	3		SIDE APRON 長圖板	2
	4		END APRON 短圖板	2
	5		LEG BEAM FOR MIDDLE LEGS 中脚板	2
	6		CENTER BEAM 中長梁	1
TOP RAIL 扶手	7		LEFT STEEL CUSHION 左鋼庫	2
	8		RIGHT STEEL CUSHION 右鋼庫	2
	9		END STEEL CUSHION 端鋼庫	2
	10		TOP RAIL LEFT SIDE 左扶手	2
	11		TOP RAIL RIGHT SIDE 右扶手	2
	12		TOP RAIL END 端扶手	2
POCKET 球袋	13		CORNER POCKET 角袋	4
	14		SIDE POCKET 中袋	2
	15		RING FOR CORNER POCKETS 角袋棉網環	4
	16		RING FOR SIDE POCKETS 中袋棉網環	2
	17		SLATE (LEFT) 石板（左）	2

PARTS LIST / 配件單

表2







PACKAGE 包装	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
SLATE 石板	18		SLATE (MDDLE) 石板（中）	2
	19		SLATE (CENTER) 石板（中心）	1
WOOD FRAME 釘布板	20		WOOD FRAME (END) 釘布板（端邊）	2
	21		WOOD FRAME (SIDE) 釘布板（長邊）	4
	22		WOOD FRAME (SIDE POCKET) 釘布板（中袋）	2
	23		WOOD FRAME (CORNER POCKET) 釘布板（底袋）	4
HOOK 挂鈎	24		SIDE APRON 長邊裙板	4
	25		END APRON 端裙板	2
	26		CLOTH 臺尼	1
	27		HOOK 挂钩	8
	28		UNDER-TABLE TACKLE RACK 波浪条挂钩	2
	29		WOOD BEAM 木支架	8
	30		WOOD BLOCK 腳連木	4
	31		HEATING BOARD 加熱板	6
	32		THERMOSTAT 温控器	1
	33		LEVELBOX PLUS 水平調整器	30

FIG.1

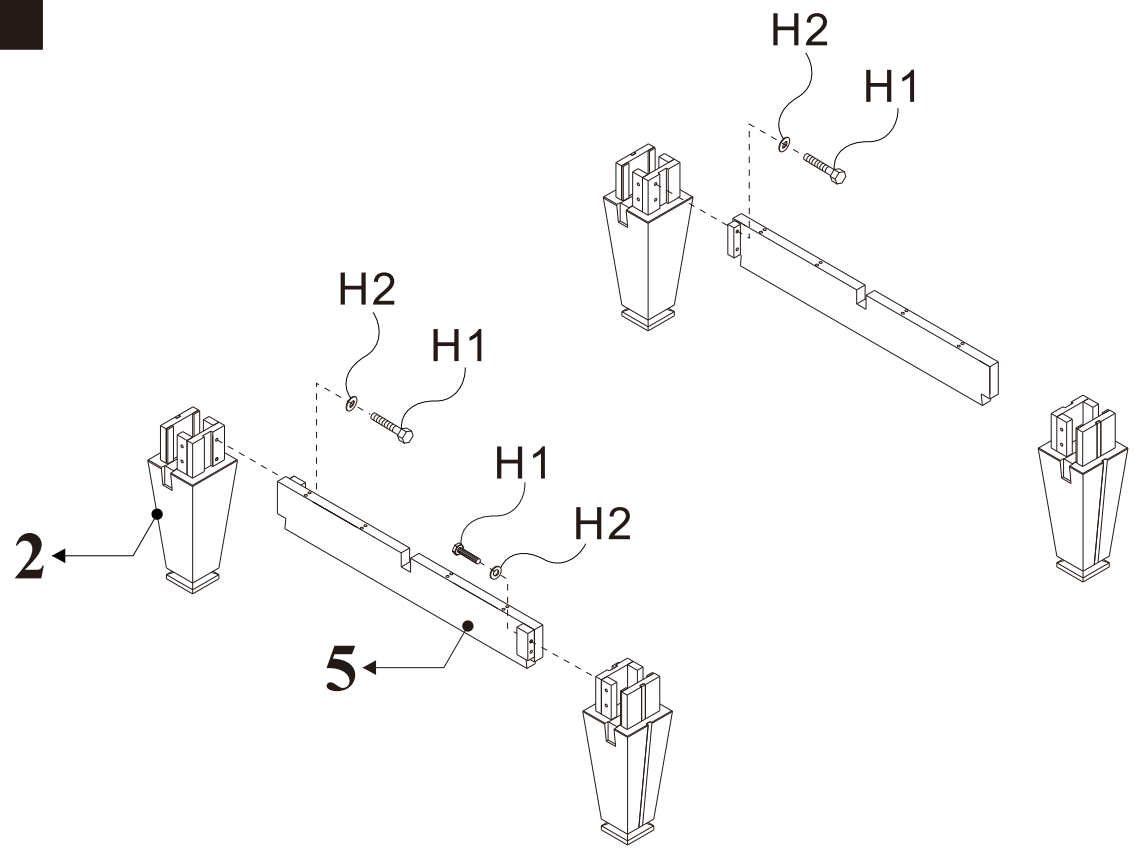


FIG.2



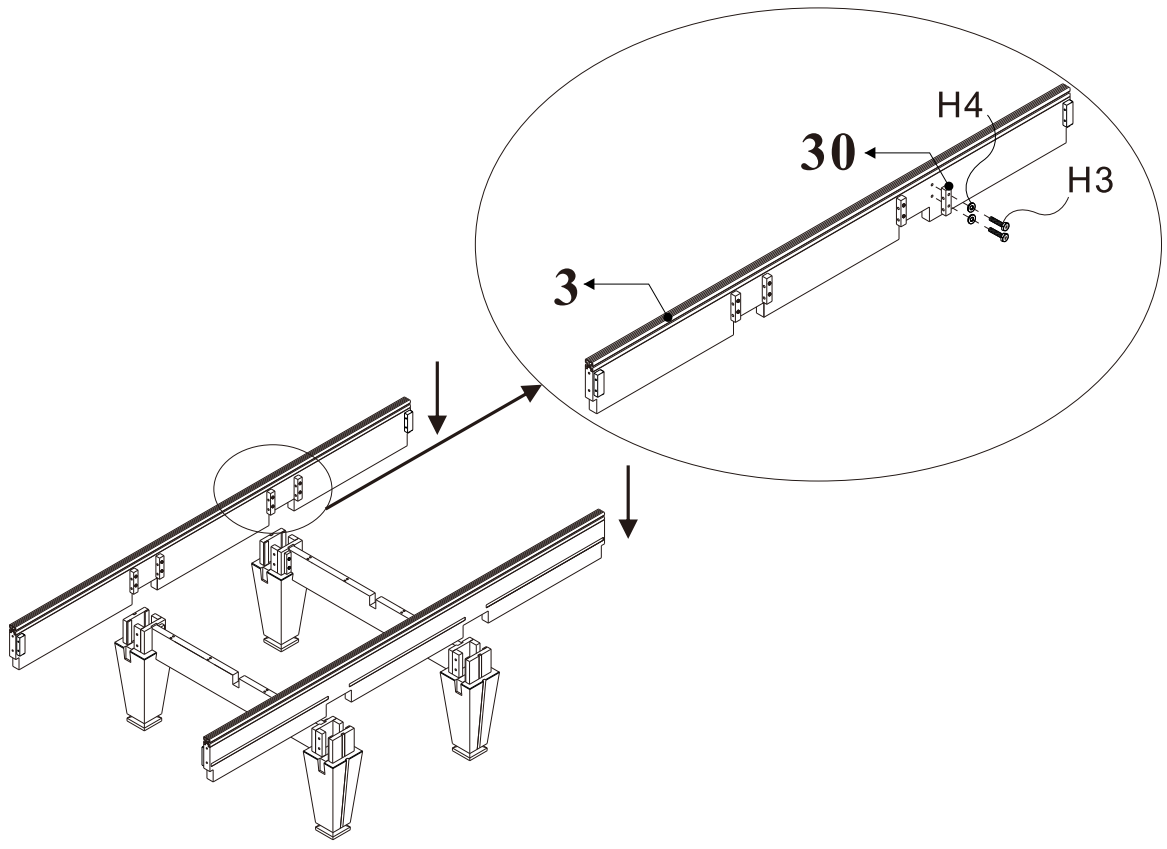


FIG.3

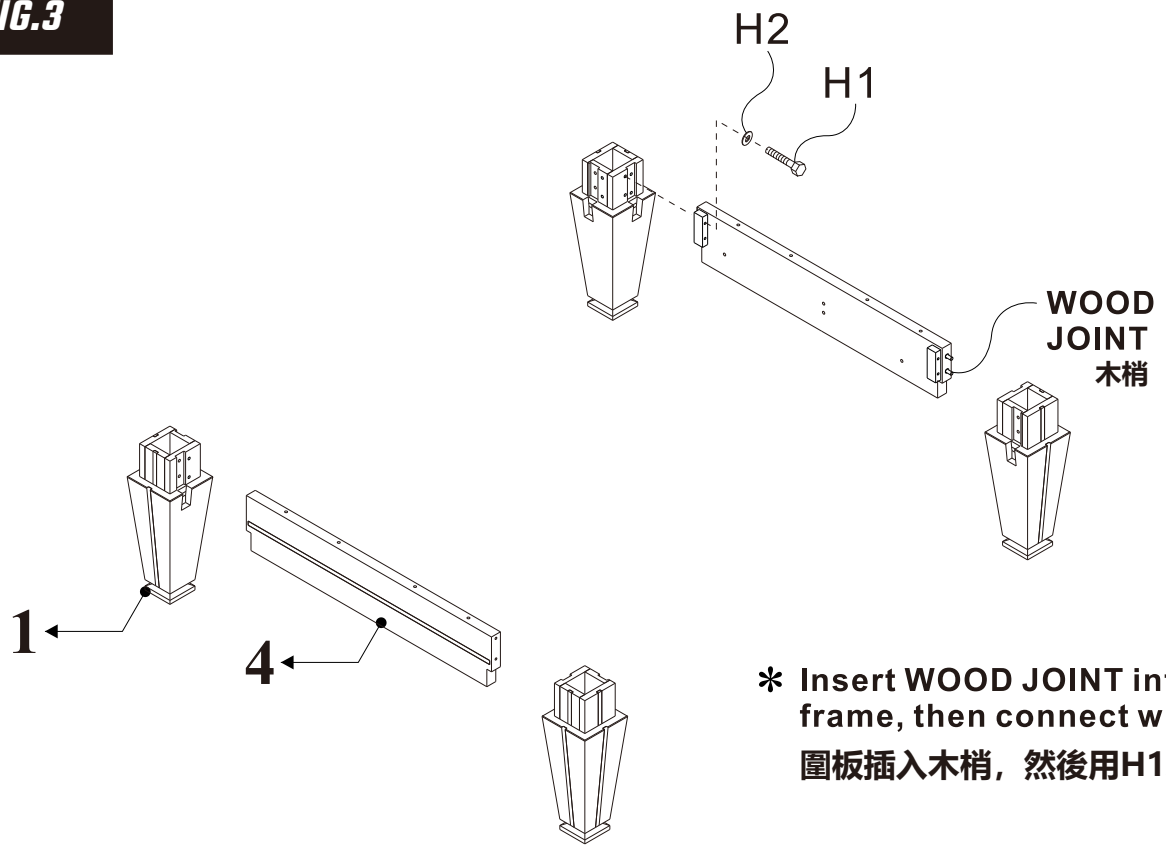

✻ Insert WOOD JOINT into frame, then connect with H1
圍板插入木梢，然後用H1螺杆連接

FIG.4

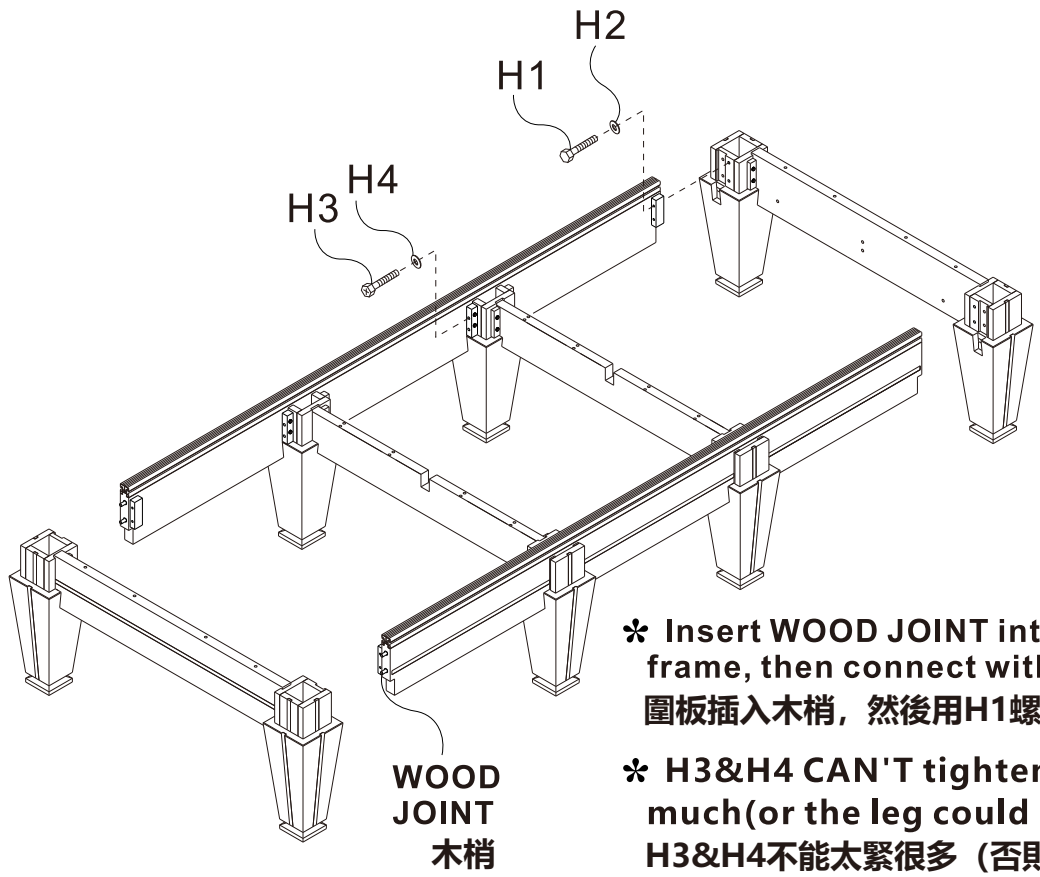

✻ Insert WOOD JOINT into frame, then connect with H1
圍板插入木梢，然後用H1螺杆連接

✻ H3&H4 CAN'T tighten too much(or the leg could split)
H3&H4不能太緊很多（否則腿會裂開）

FIG.5


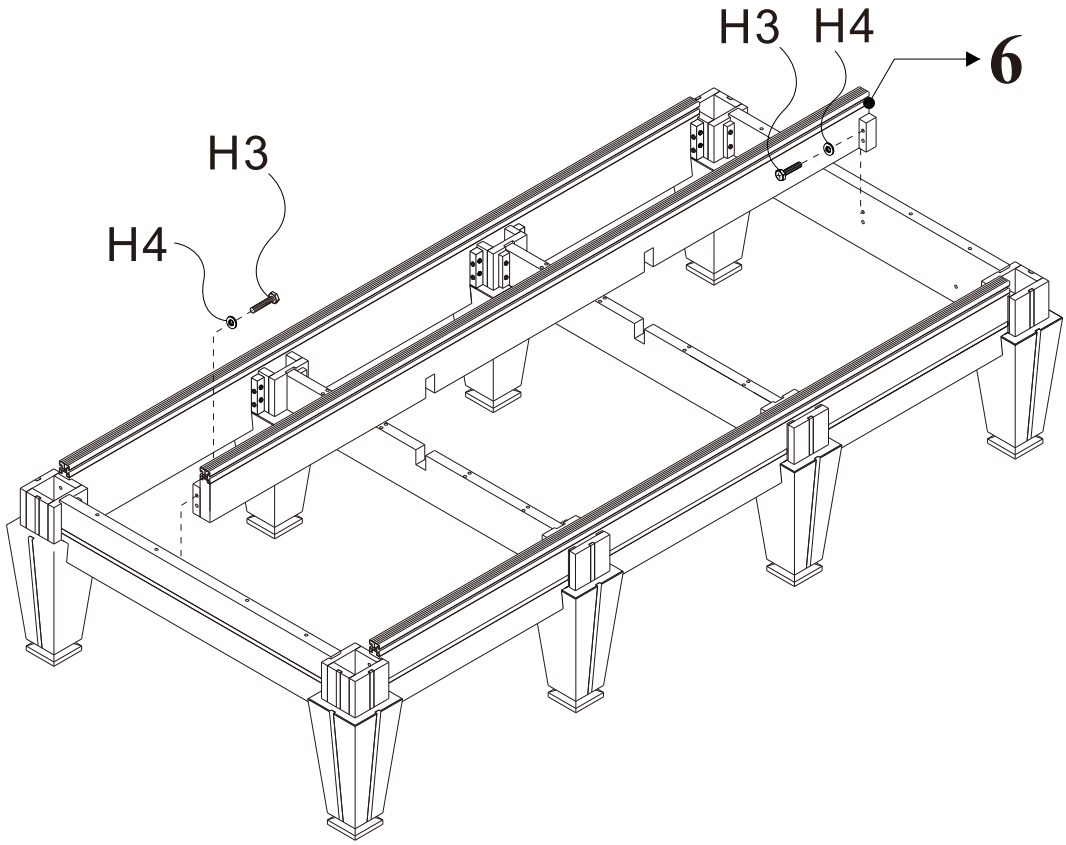


FIG.6

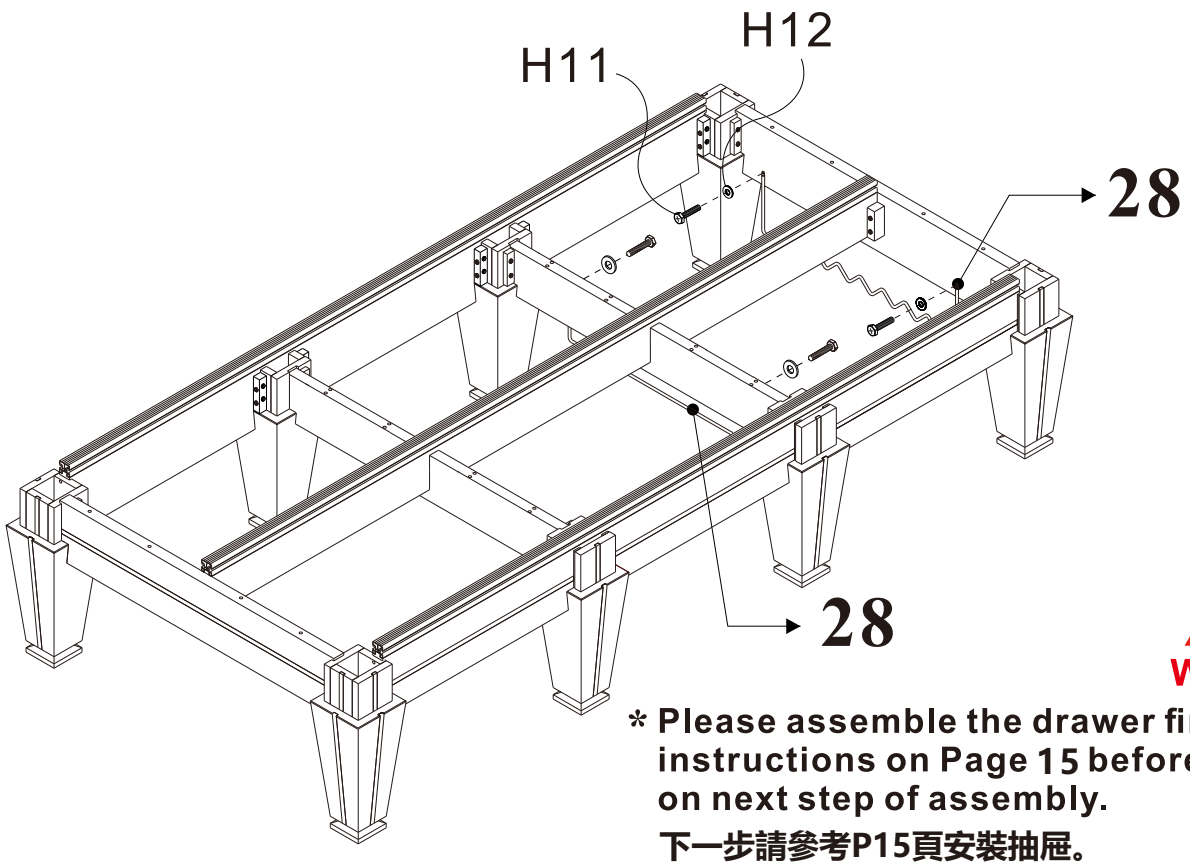

WARNING

* Please assemble the drawer first as per instructions on Page 15 before moving on next step of assembly.

下一步請參考P15頁安裝抽屜。

FIG.7


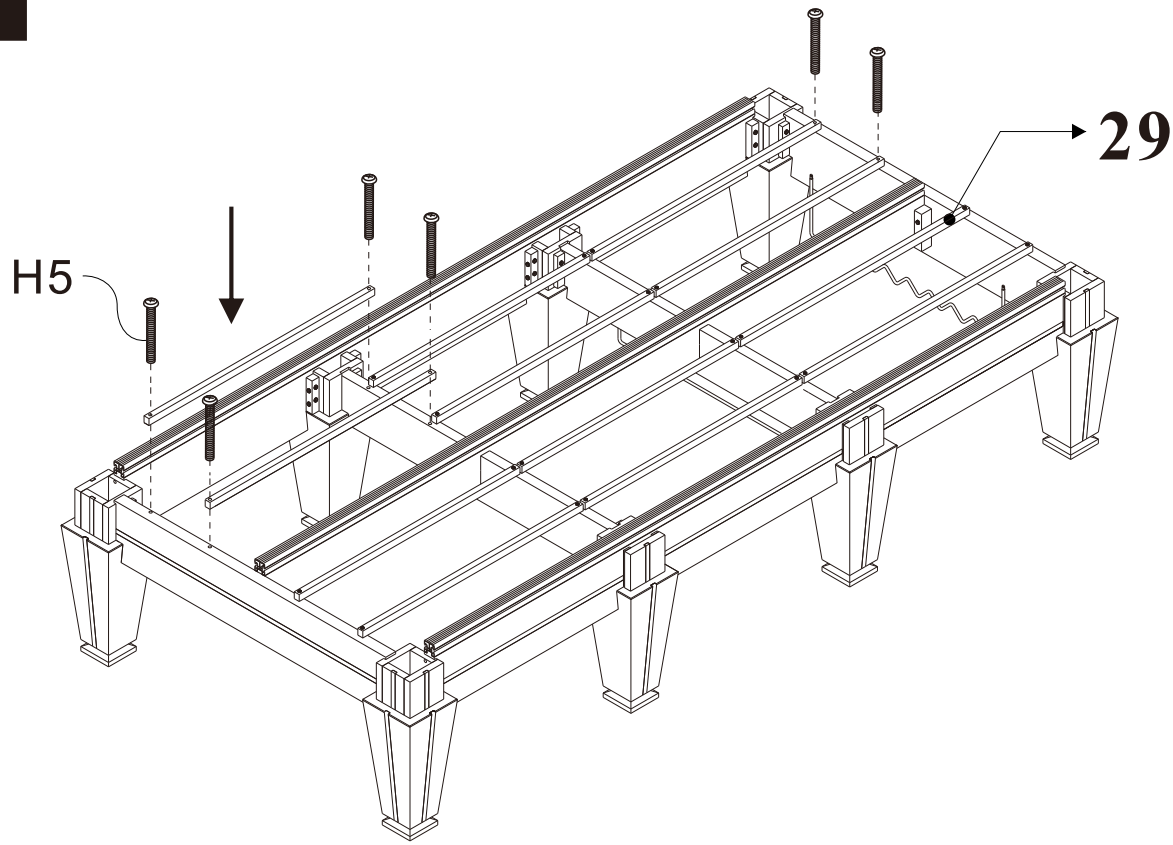



FIG.8

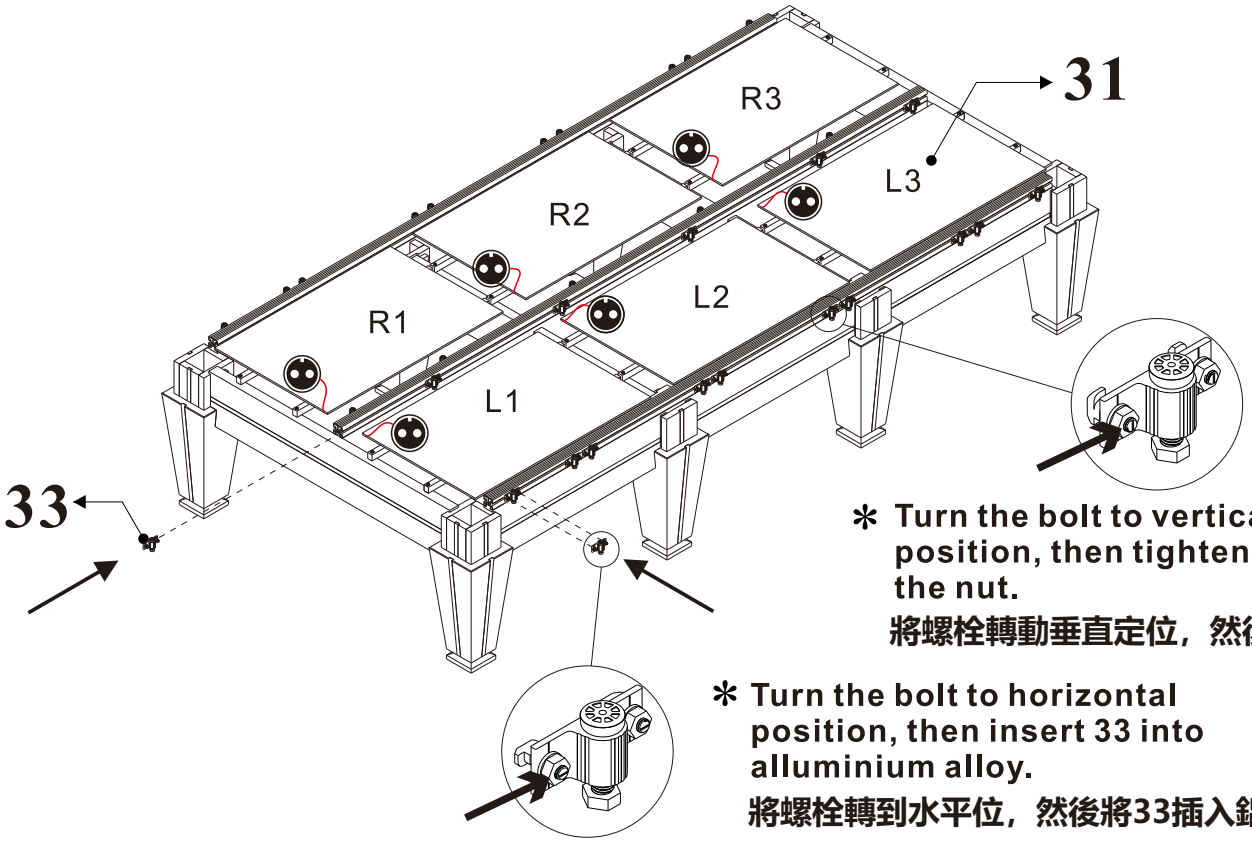

* Turn the bolt to vertical position, then tighten the nut.
將螺栓轉動垂直定位，然後擰緊螺母。

* Turn the bolt to horizontal position, then insert 33 into alluminium alloy.
將螺栓轉到水平位，然後將33插入鋁合金。

FIG.9

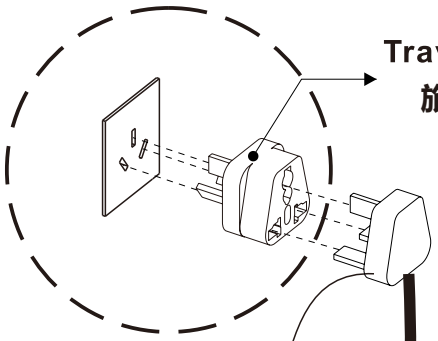

Travel Plug Adapter
旅行插頭適配器

UK(BS)

✲ For non-UK Standard Plug country/area, please add the 34(Travel Plug Adapter) before connecting to AC POWER PLUG

✲ 非英國標准插頭國家/地區，在連接到交流電源之前請接入旅行插頭適配器。

MAKE SURE insert the Plug to the Power Transformer properly to avoid the heating board burning out

220V/AC POWER
交流電220V

Please refer to the attachment.
請參考附件。

32




Temperature Sensor
溫控器傳感器



H17


✲ Use Cable Clip H18 to secure the cable underneath the Center Beam.

使用電纜夾H17固定電纜到中長梁底部。

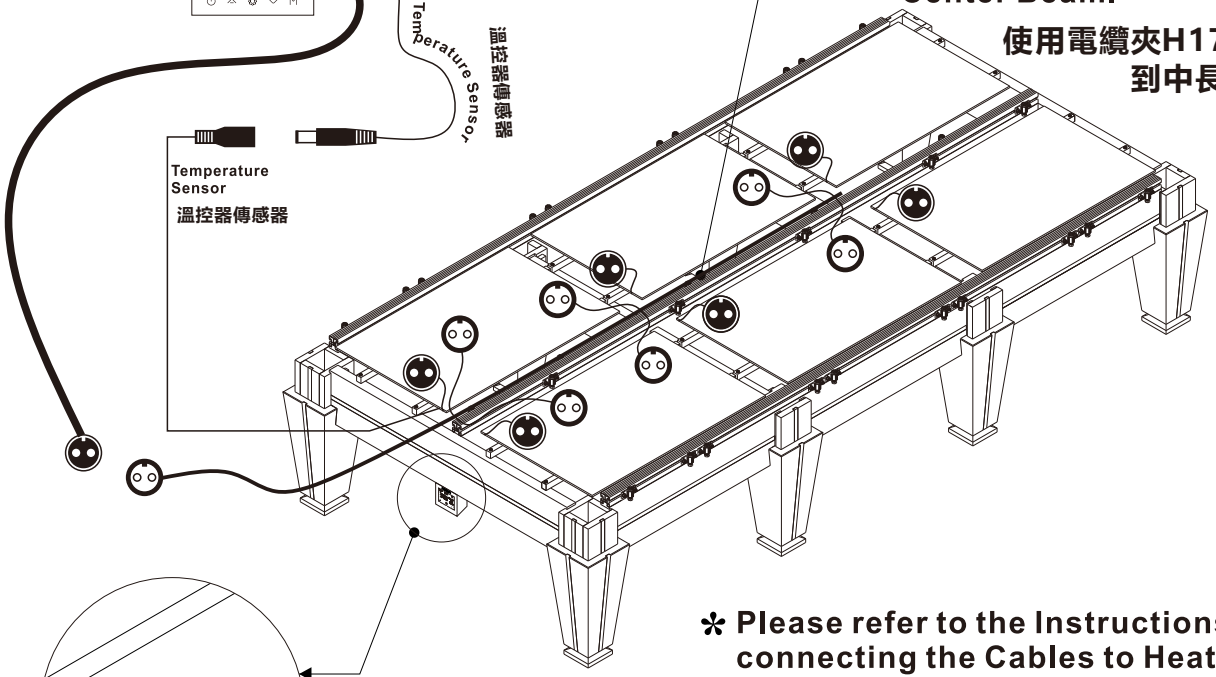

✲ Please refer to the Instructions for connecting the Cables to Heating Board.

請參閱使用說明將電纜連接到加熱板。

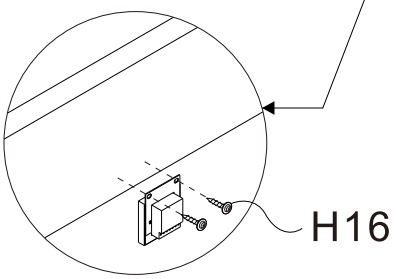


H16

Fix the Thermostat with screws to the backside of Cabinet.

用自攻絲將溫控器安裝到圍板背面

FIG.10

* Take off H7-H9 from slates and keep for future use.
從石板取下H7-H9待後安裝使用

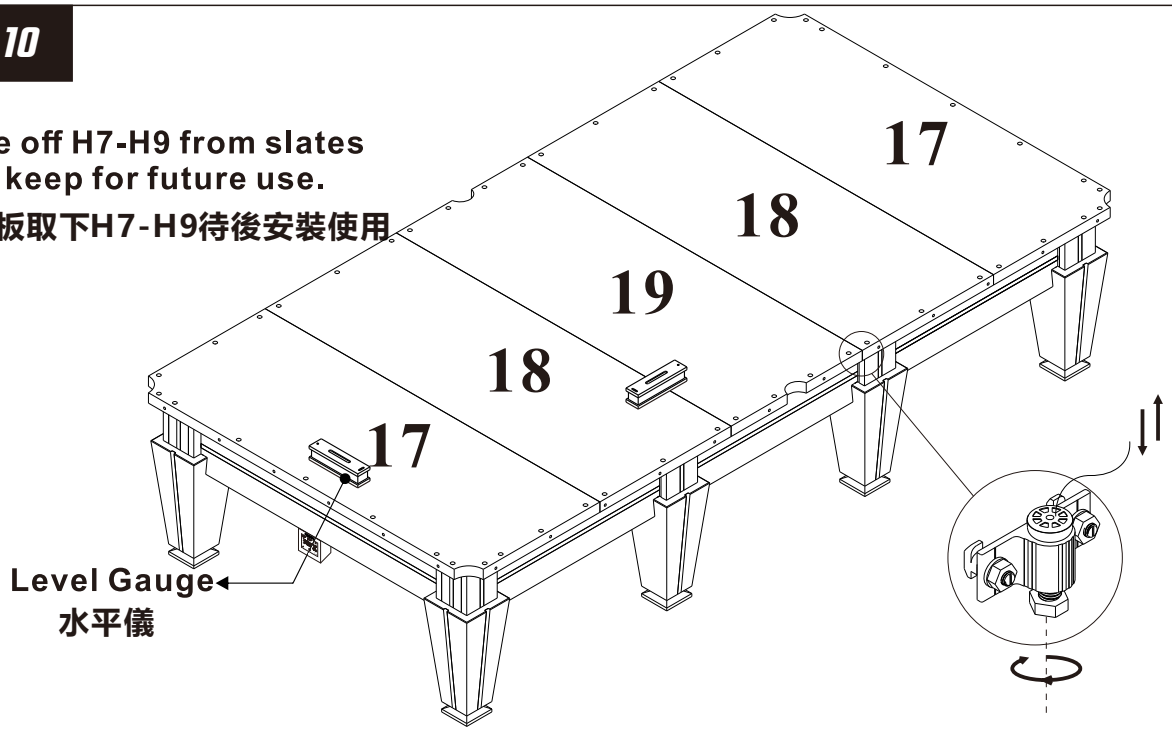

* Level slate with 30 LevelBox adjusters
通過30個調整器調節石板水平。

* Level slate through spinning hex screws to adjust slate height.
通過旋轉螺杆調整石板水平。

FIG.11

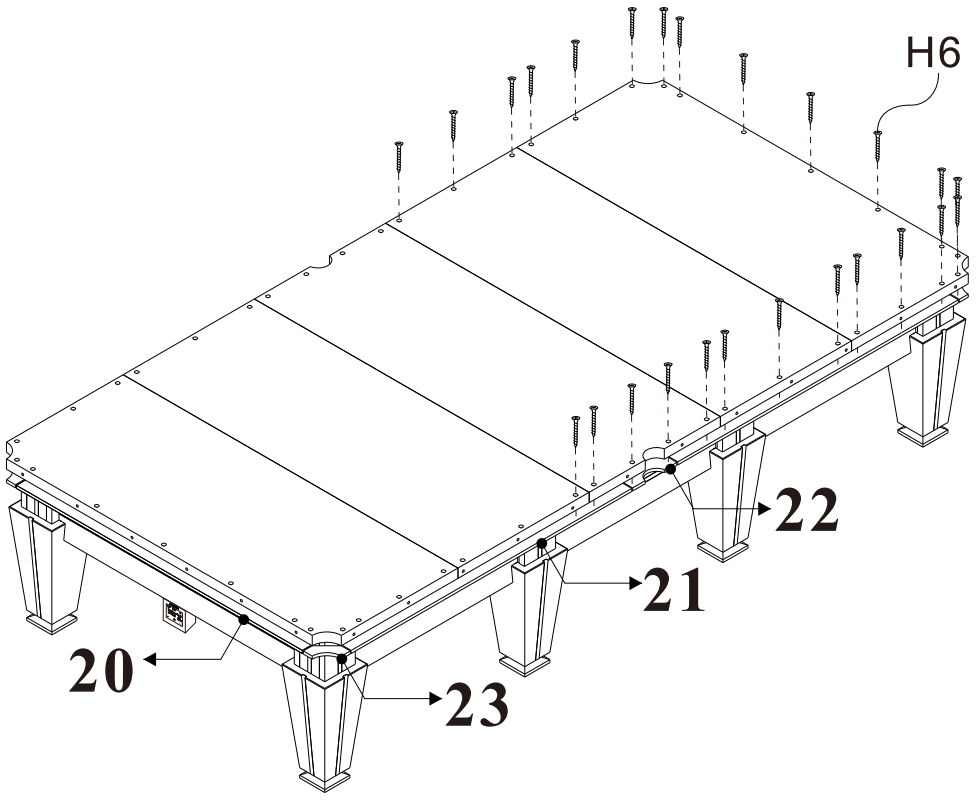



FIG.12

Cut holes in cloth at
rail both locations.
石板螺杆孔開洞





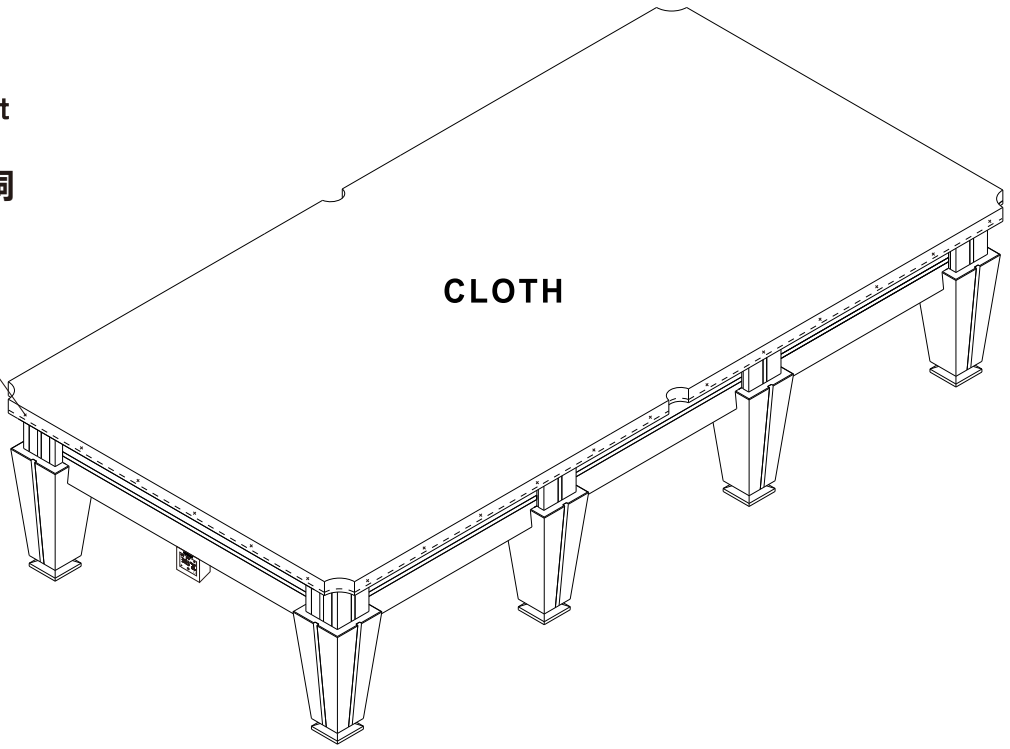


FIG.13

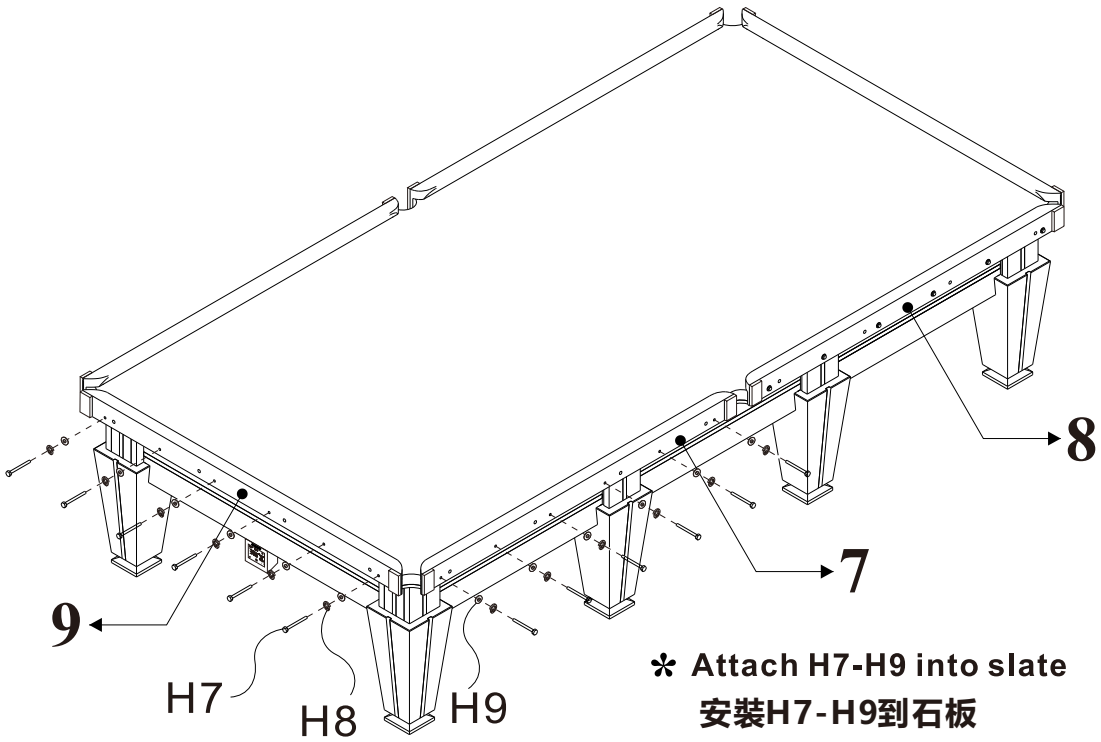


✲ Attach H7-H9 into slate
安装H7-H9到石板

FIG.14

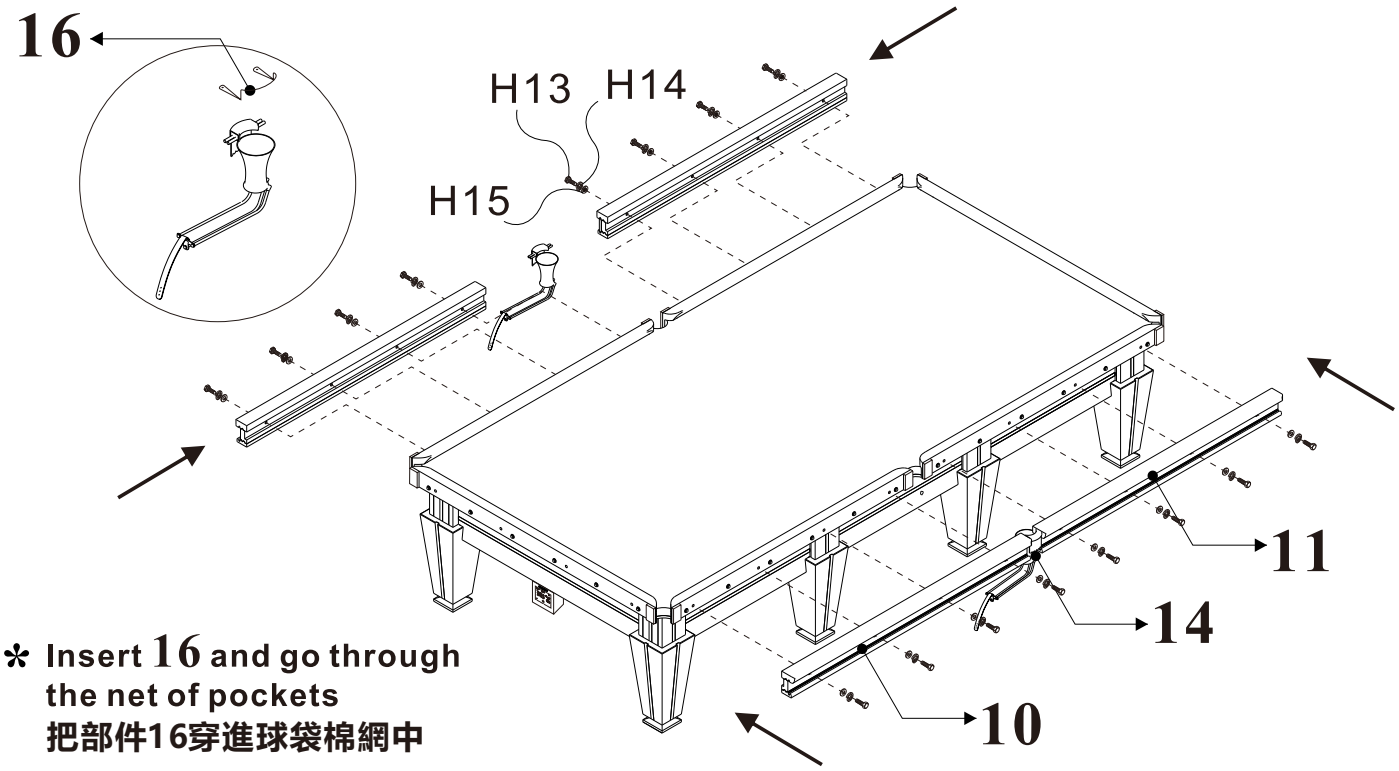

✲ Insert 16 and go through the net of pockets
把部件16穿進球袋棉網中


FIG.15

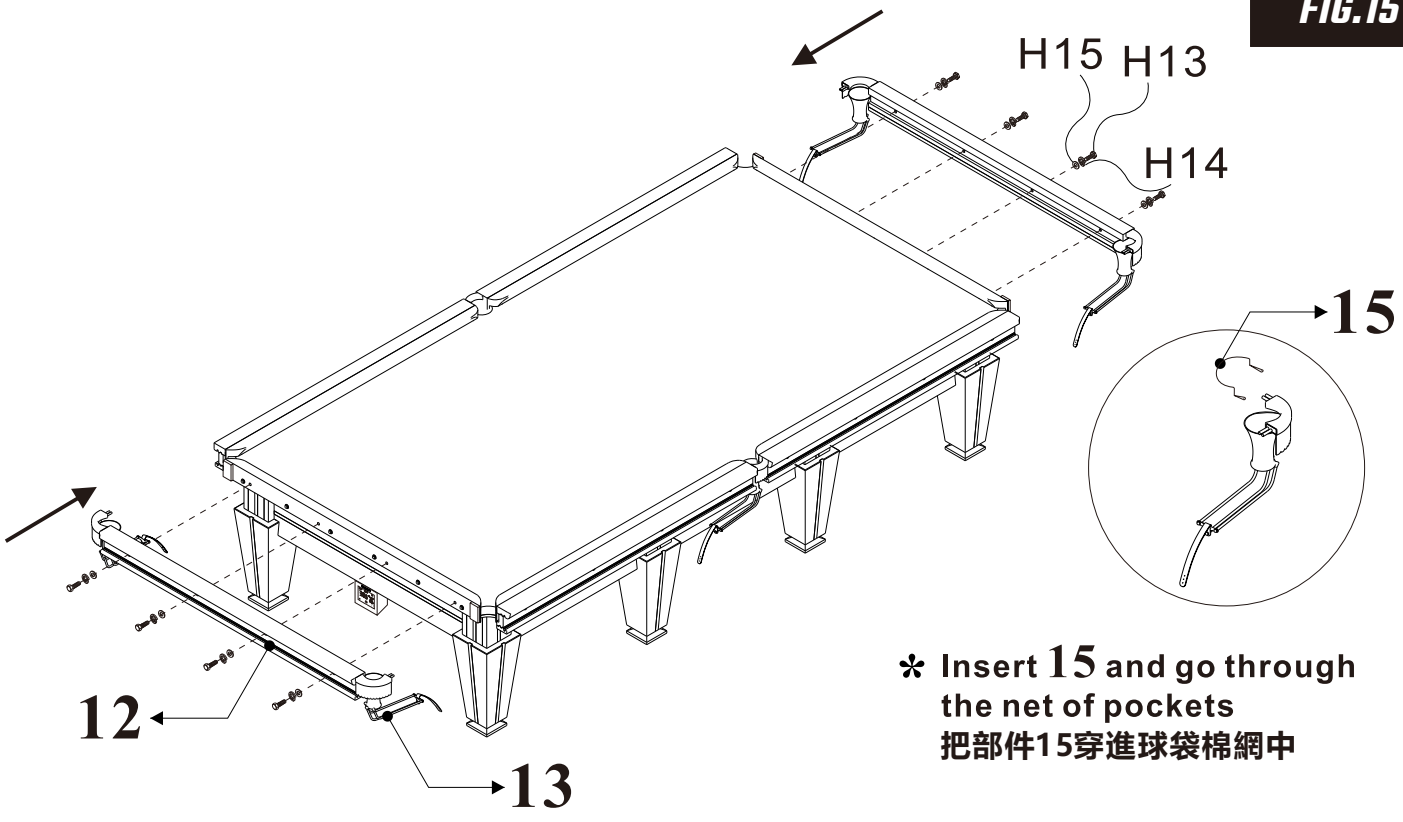

✲ Insert 15 and go through the net of pockets
把部件15穿進球袋棉網中


FIG.16

✻ Please assemble the press frame in character order
請按字母順序安裝扶手。

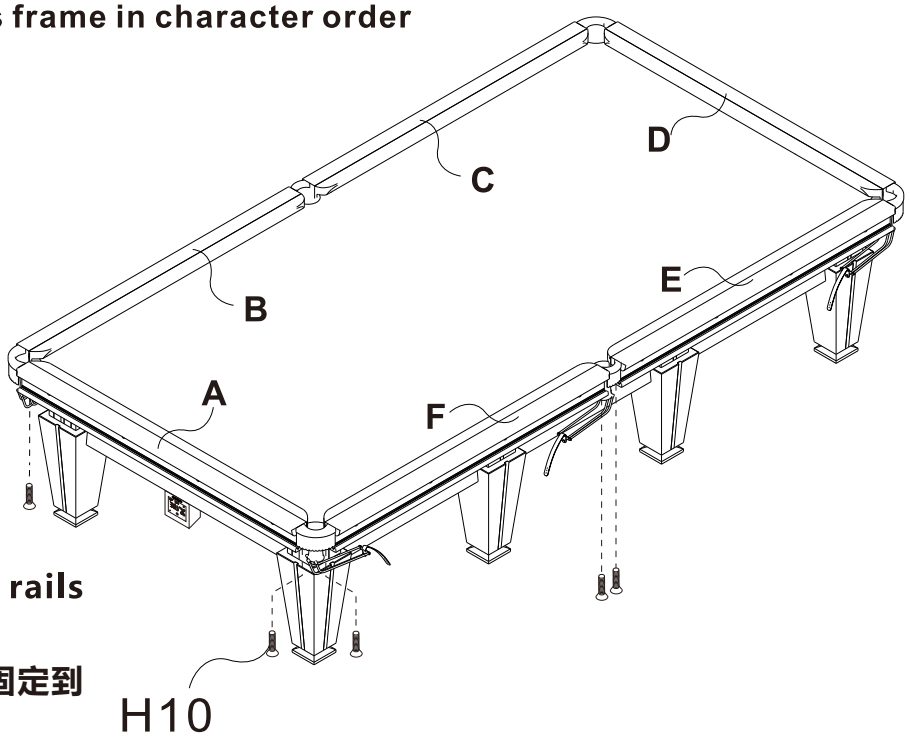


✻ Secure the pocket ring and rails with H10
用螺杆H10將中袋13與底袋14固定到扶手底部。

FIG.17

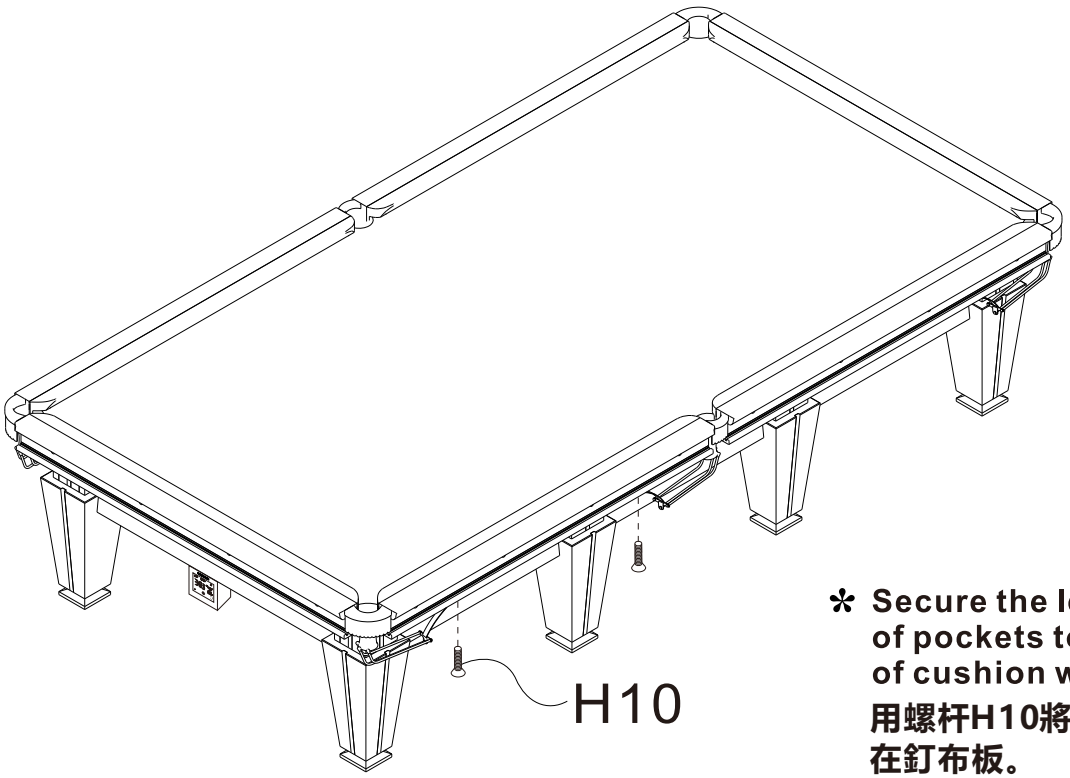


✻ Secure the leather strip of pockets to the bottom of cushion with H10
用螺杆H10將球袋皮帶固定在釘布板。

FIG.18

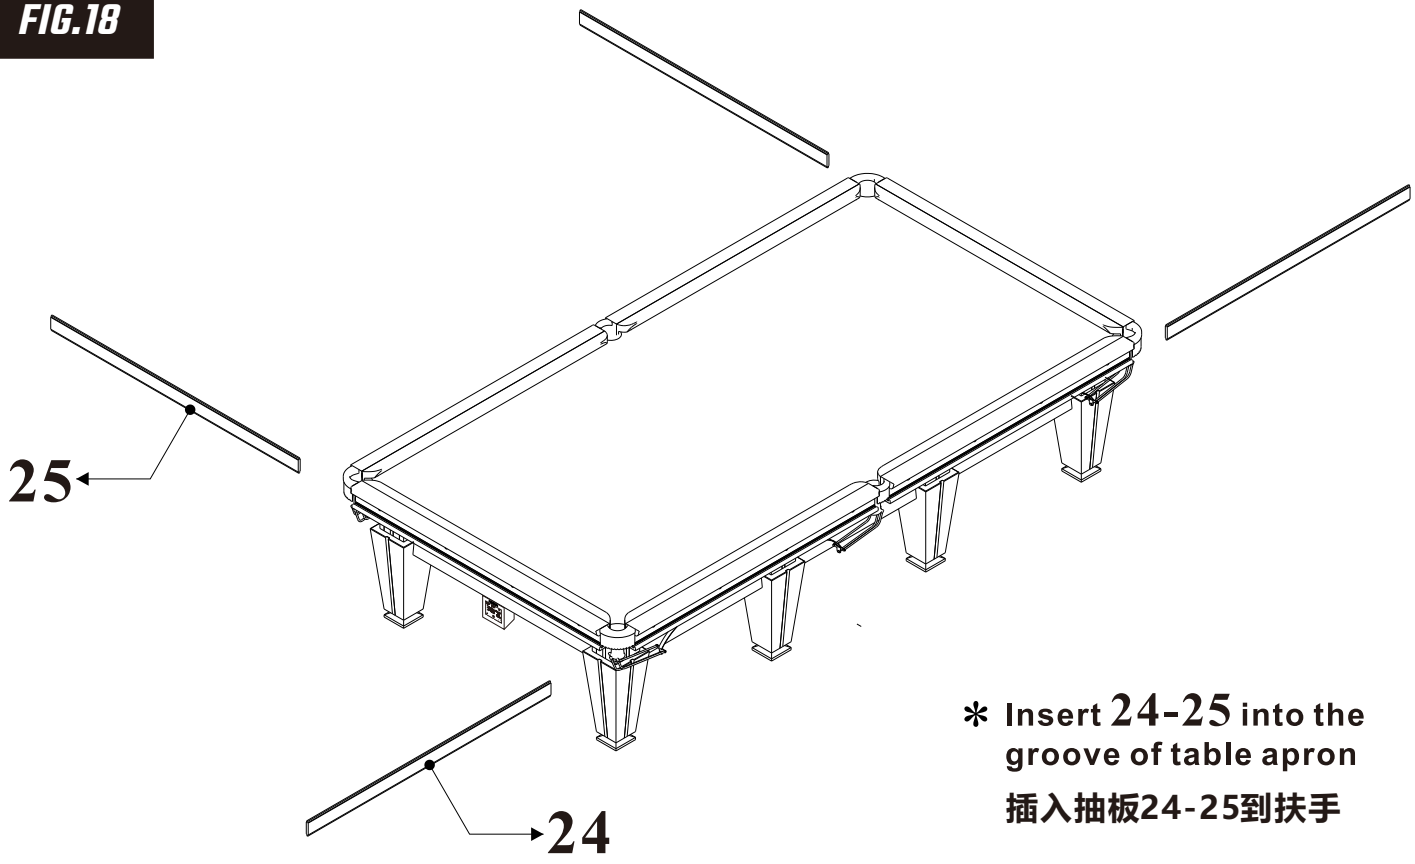


* Insert 24-25 into the groove of table apron
插入抽板24-25到扶手

FINISH

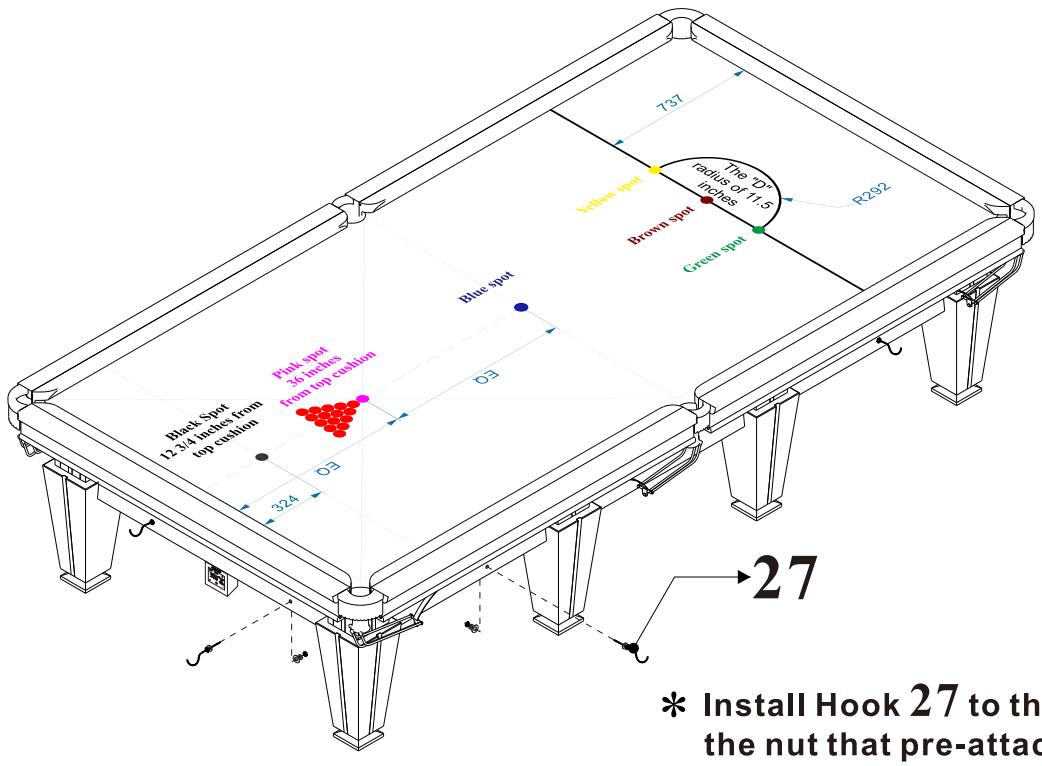


* Install Hook 27 to the table(take off the nut that pre-attached first)
安装挂鈎27到圍板


THERMOSTAT INSTRUCTION

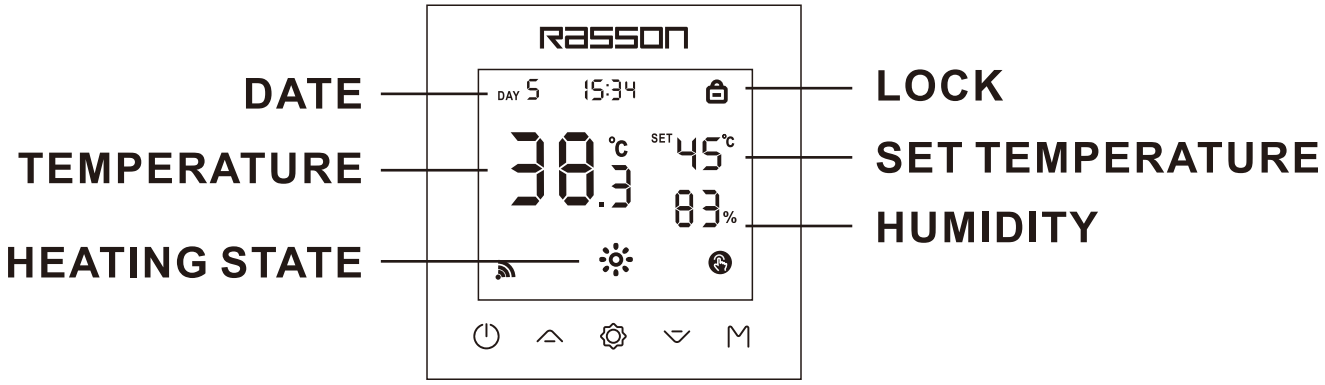

Buttons Function Instruction


Button	Function	Instruction
⏻	**Power**	Press ⏻ button could turn on/off the Thermostat while the device is electrified.
	Lock/Unlock	Press and hold ⏻ & ∧ for 5 seconds to Lock/Unlock.
⚙	**Set**	Press ⚙ setting date and time. Please press the ∧ and ∨ buttons to adjust. Wait 15 seconds to exit date settings.
M	**Modify**	Press M change Date / Time settings state.
∧ ∨	**Temperature adjust**	Please press the ∧ and ∨ buttons to adjust.

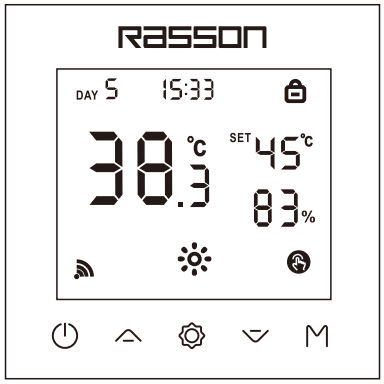

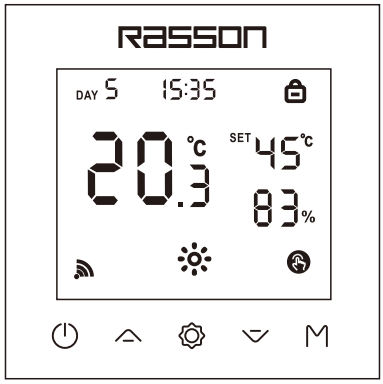

With the temperature set to 45°C and in heating mode, the temperature drops to room temperature and the heating plate does not work.


Check the main wiring connection or the heating plate for damage.

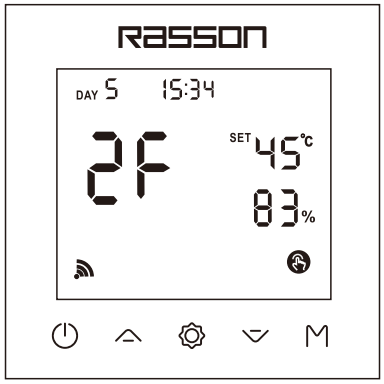


Thermostat shows "2F" – temperature probe disconnected or heating plate faulty.

DRAWER ATTACHMENT

REPLACEMENT PARTS LIST (HARDWARE)				
PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
DRAWER	A1		MACHINE SCREW 1/4" X 1-1/2"(M6X38mm)	2
	A2		FLAT HEAD SCREW 4# X 1-3/4"(M4X45mm)	7

REPLACEMENT PARTS LIST				
PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
DRAWER	A3		DRAW FRAME	1
	A4		DRAW JOINT WOOD	1
	A5		DRAW	1

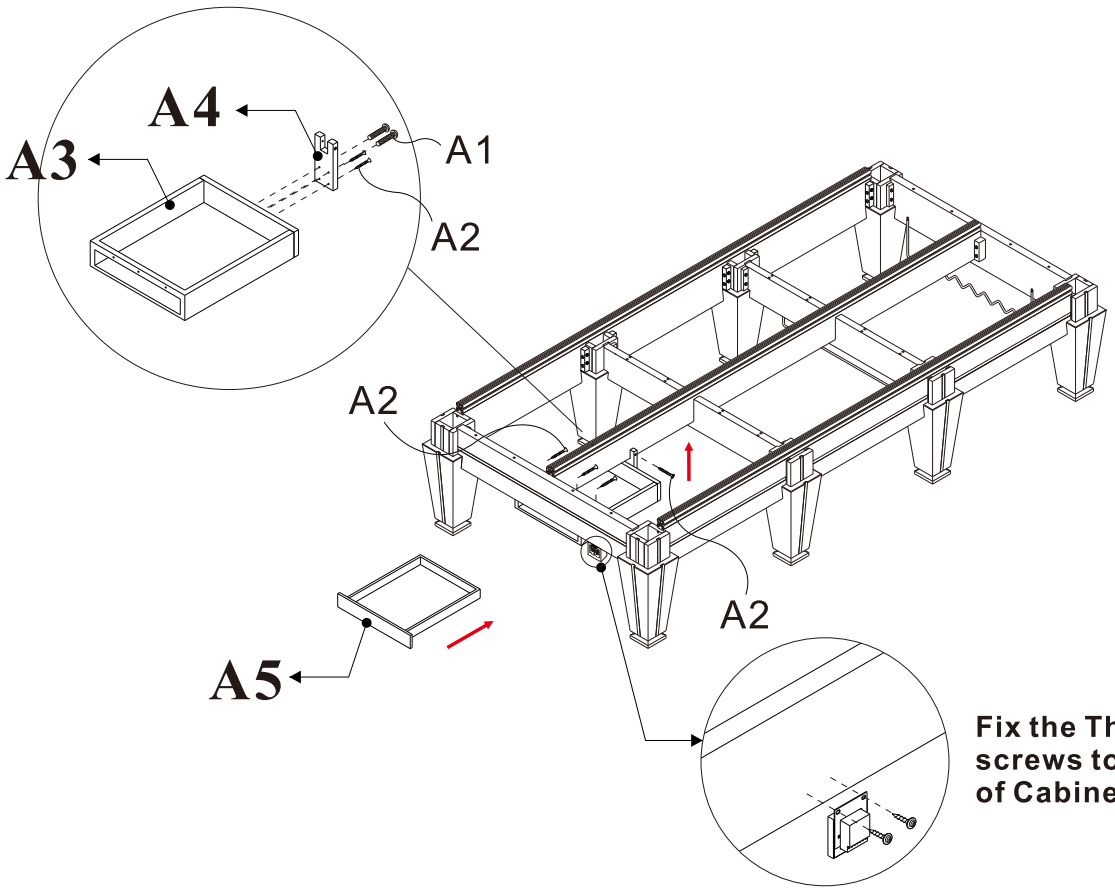

Fix the Thermostat with screws to the backside of Cabinet.







No.18th Floor, Weiyangyipin Building, Leying Plaza, Bali Lake New District, Jiujiang City, Jiangxi Province, China

kevina@rasson.cn

+86-792-898-6880

RASSON





