貳代
牲
STRONG



BILLIARDS INSTRUCTION MANUAL
臺球桌安裝說明書

220V/AC
12' SNOOKER


請先整體看一遍說明書，再根據步驟安裝 PLEASE READ THE INSTRUCTION MANUAL THOROUGHLY FIRST AND THEN INSTALL ACCORDING TO THE STEPS!

www.rasson.cn

Jun.2026










HARDWARE / 五金單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	H1		HEX HEAD BOLT 1/2" X 9"(M12X 230mm)	24
	H2		SPRING LOCK WASHER 1/2" I.D.	24
	H3		FLAT WASHER 1/2" I.D.	24
	H4		NUT 1/2" I.D.	24
	H5		HEX HEAD CROSS BOLT 3/8" X 4"(M10 X 100mm)	2
	H6		FLAT WASHER 3/8" I.D.	4
	H7		NUT 3/8" I.D.	2
RAIL/POCKET/FRAME/SLATE 扶手 / 球袋 / 圖板 / 石板	H8		MACHINE SCREW 1/4" X 2"(M6X50mm)	24
	H9		PWA SCREW 10# X 2"(M5X50mm 白色)	50
	H10		HEX HEAD BOLT-COLOR 1/2" X 4"(M12 X 100MM 彩鋅)	36
	H11		SPRING LOCK WASHER 1/2" I.D.	36
	H12		FLAT WASHER 1/2" I.D.	36
	H13		CROSS BOLT-COLOR 1/4" X 1"(M6 X 25MM 彩鋅)	18
	H14		HEX HEAD BOLT (built-in rails)	24
	H15		FLAT WASHER (built-in rails)	24
	H16		CABLE CLIP 綫纜夾	15
	H17		FLAT HEAD SCREW-COLOR 8# X 1"(M4X25mm 彩鋅)	4
	H18		FLAT HEAD SCREW-COLOR 8# X 1-3/16"(M4X30mm 彩鋅)	6
	H19		WOOD JOINT 木梢	24

PARTS LIST / 配件單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌脚	1		CORNER LEG 底脚	4
	2		MIDDLE LEG 中脚	4
CABINET/FRAME 大框 / 圍板	3		SIDE APRON 長圍板	2
	4		END APRON 短圍板	2
	5		LEG BEAM FOR MIDDLE LEGS 中脚板	2
	6		CENTER BEAM 中長梁	1
TOP RAIL 扶手	7		LEFT STEEL CUSHION 左鋼庫	2
	8		RIGHT STEEL CUSHION 右鋼庫	2
	9		END STEEL CUSHION 端鋼庫	2
	10		TOP RAIL LEFT SIDE 左扶手	2
	11		TOP RAIL RIGHT SIDE 右扶手	2
	12		TOP RAIL END 端扶手	2
POCKET 球袋	13		CORNER POCKET 角袋	4
	14		SIDE POCKET 中袋	2
	15		RING FOR CORNER POCKETS 角袋棉網環	4
	16		RING FOR SIDE POCKETS 中袋棉網環	2
	17		SLATE (END) 石板（端邊）	2

PARTS LIST / 配件單

表2






PACKAGE 包装	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
SLATE 石板	18		SLATE (MDDLE) 石板（中間）	2
	19		SLATE (CENTER) 石板（中心）	1
WOOD FRAME 釘布板	20		WOOD FRAME (END) 釘布板（端邊）	2
	21		WOOD FRAME (SIDE) 釘布板（長邊）	4
	22		WOOD FRAME (SIDE POCKET) 釘布板（中袋）	4
	23		WOOD FRAME (CORNER POCKET) 釘布板（底袋）	2
APRON 裙板	24		SIDE APRON(IN RAIL) 長邊裙板	4
	25		END APRON(INRAIL) 端裙板	2
	26		CLOTH 臺尼	1
HOOK 挂鈎	27		HOOK 挂钩	8
	28		ACCESSORY HOOK 三角框挂鈎	1
	29		WOOD BEAM 木支架	12
	30		HEATING BOARD 加熱板	6
	31		THERMOSTAT 温控器	1
	32		LEG COVER 腳蓋板	12
	33		PLASTIC CAP 圍板孔蓋	24

FIG.1

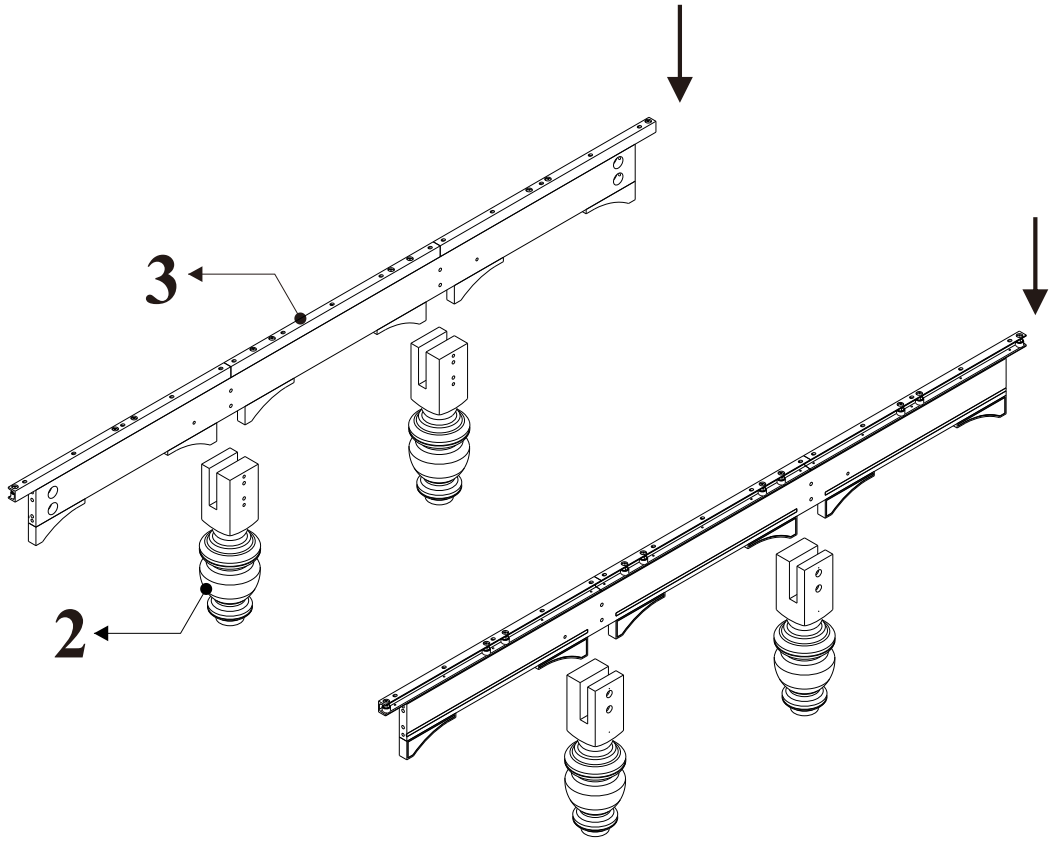


FIG.2


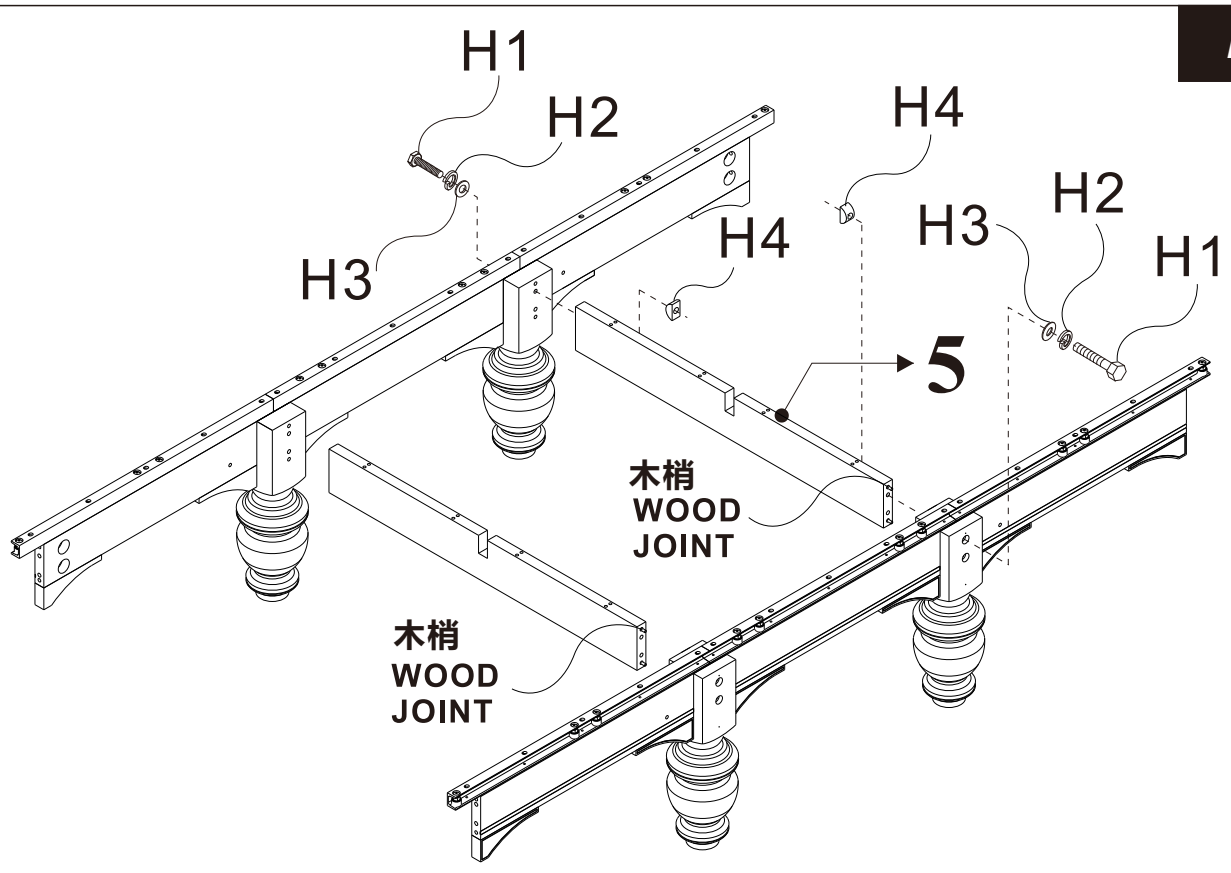


FIG.3

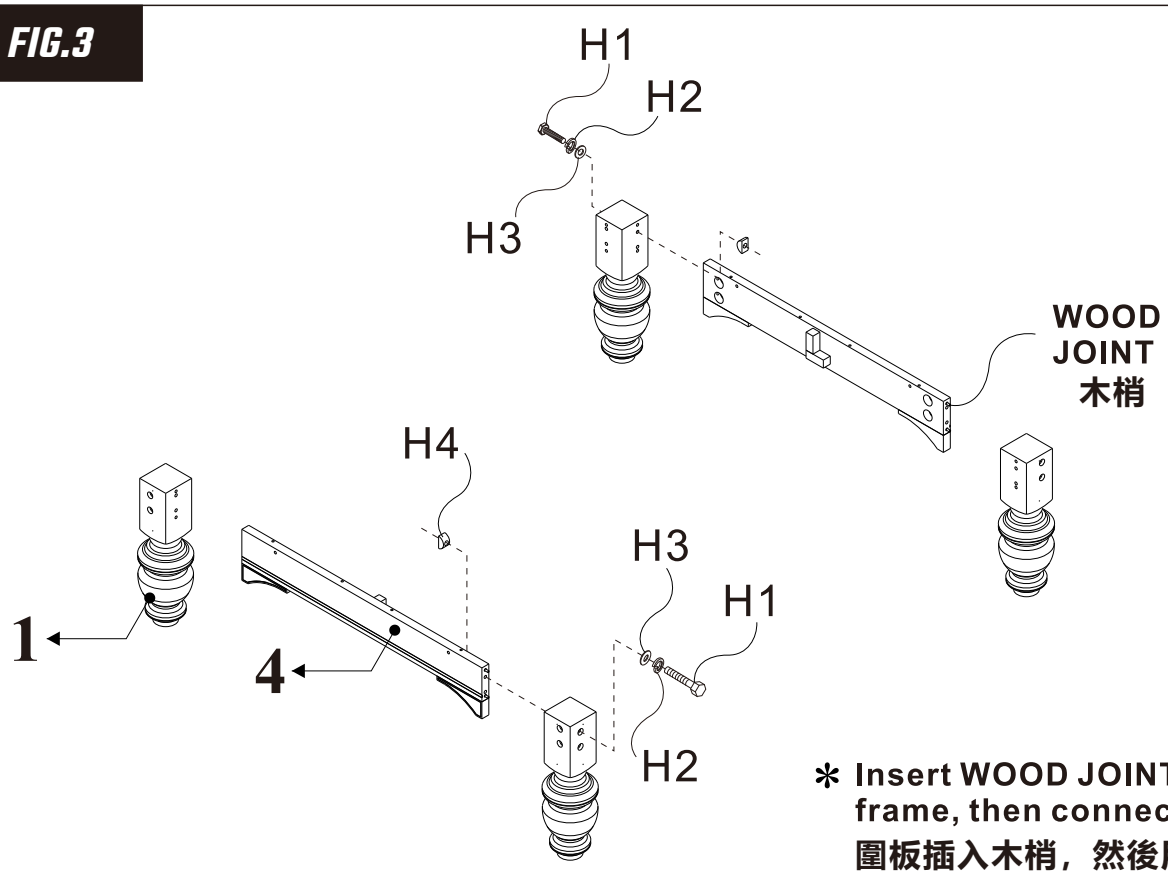

* Insert WOOD JOINT into frame, then connect with H1
圍板插入木梢，然後用H1螺杆連接。

FIG.4

* Insert WOOD JOINT into frame, then connect with H1
圍板插入木梢，然後用H1螺杆連接。

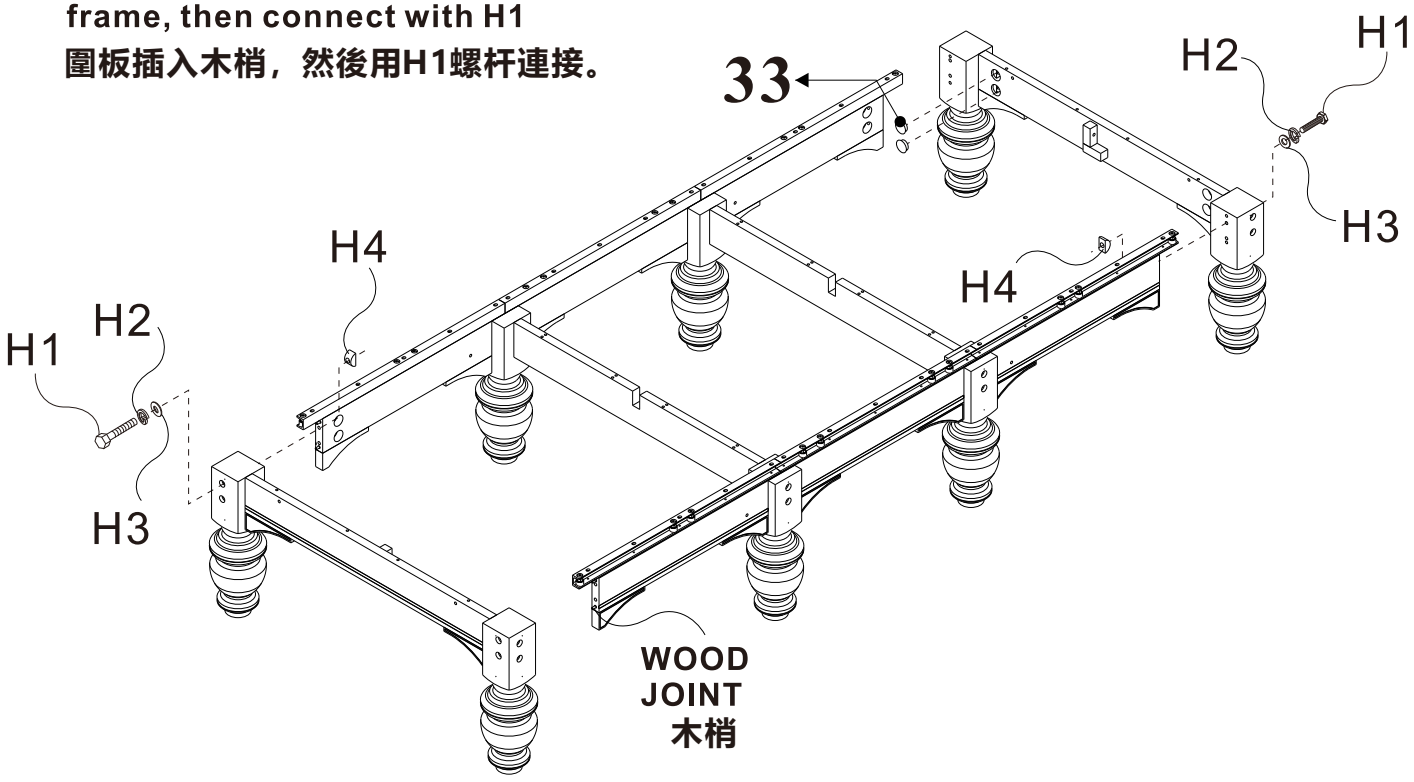


FIG.5

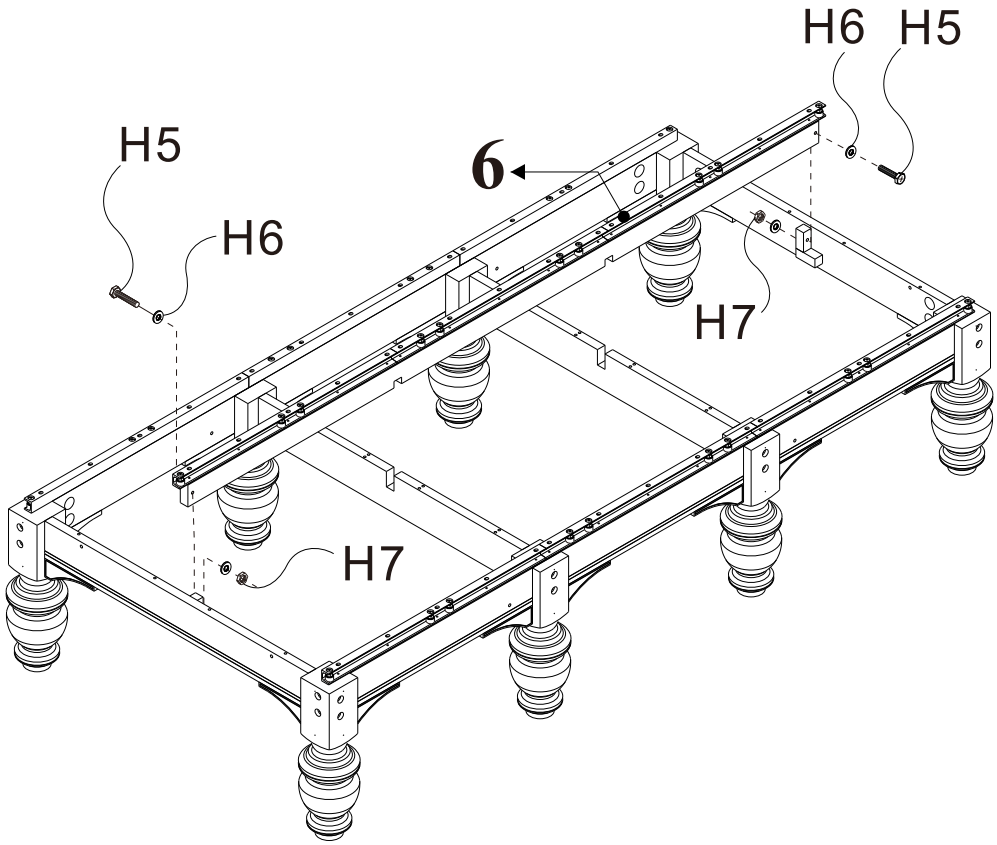


FIG.6


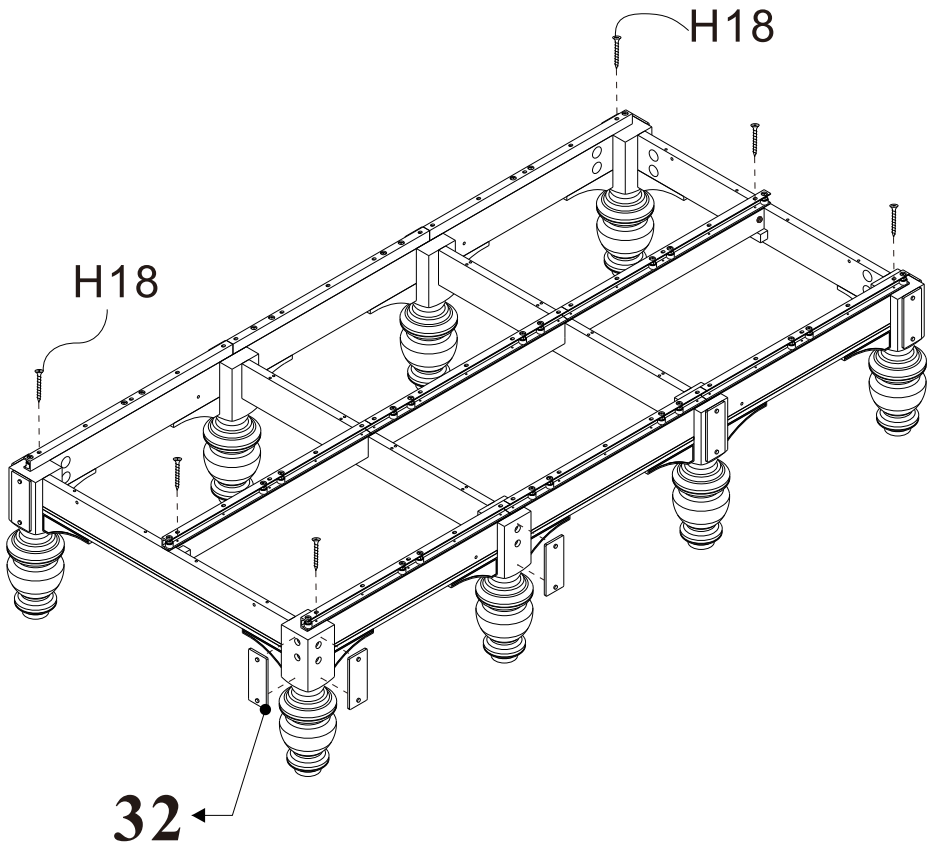


FIG.7

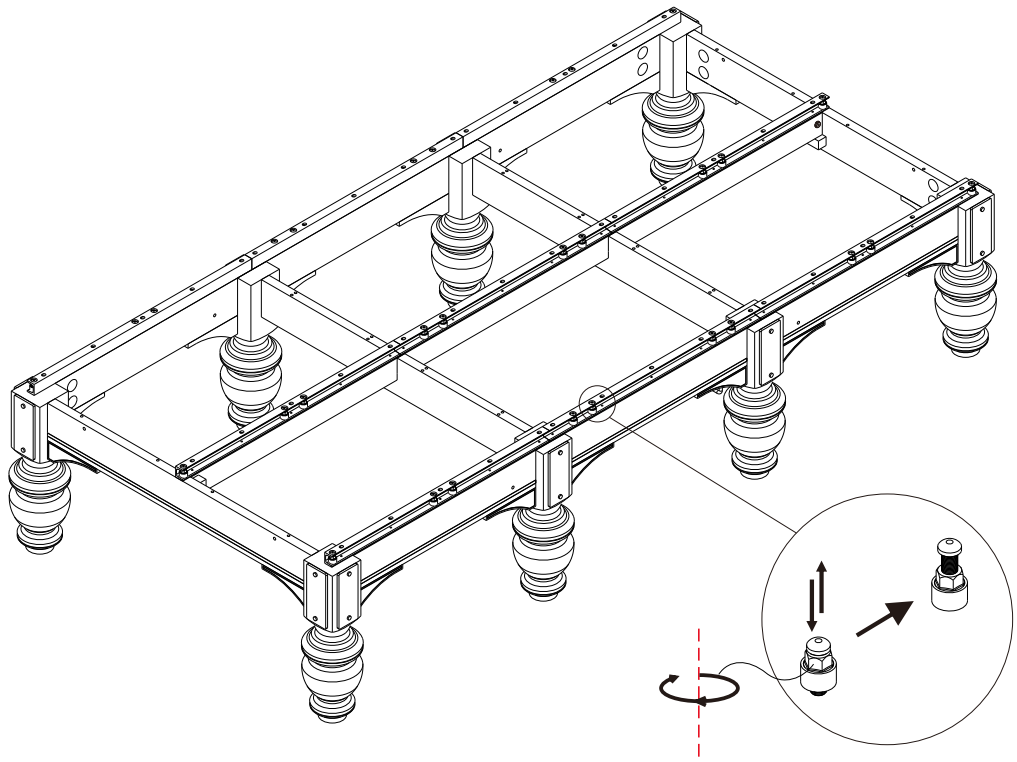

＊ Level slate with 18 slate leveller adjusters
用18個石板調節螺杆調平石板

FIG.8

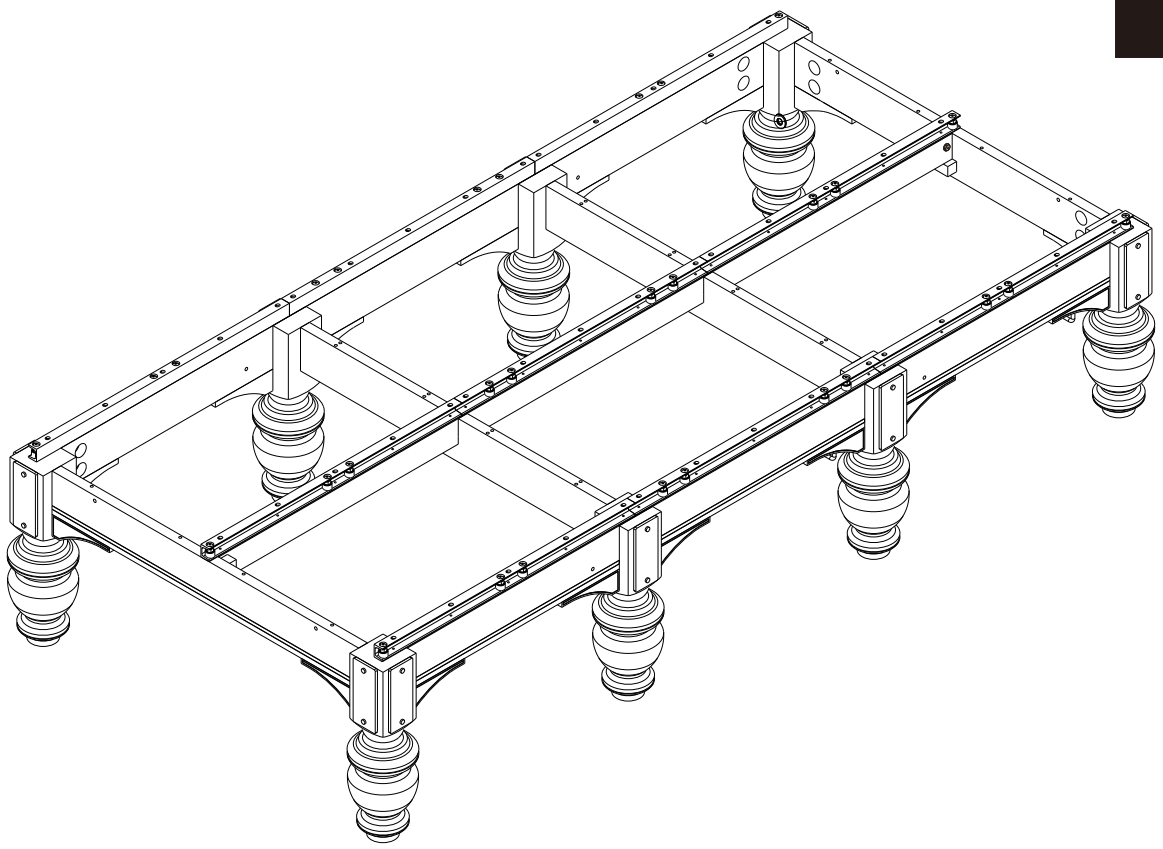


FIG.9

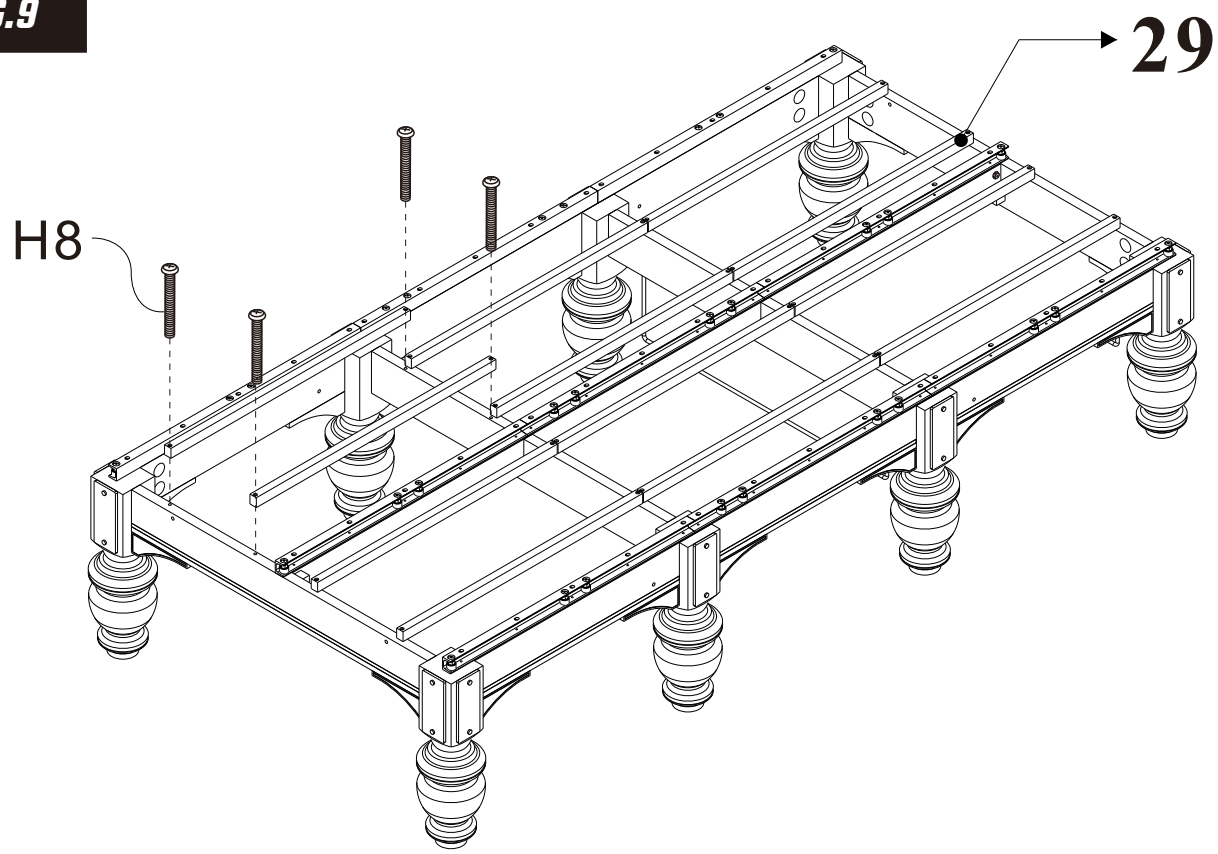


FIG.10


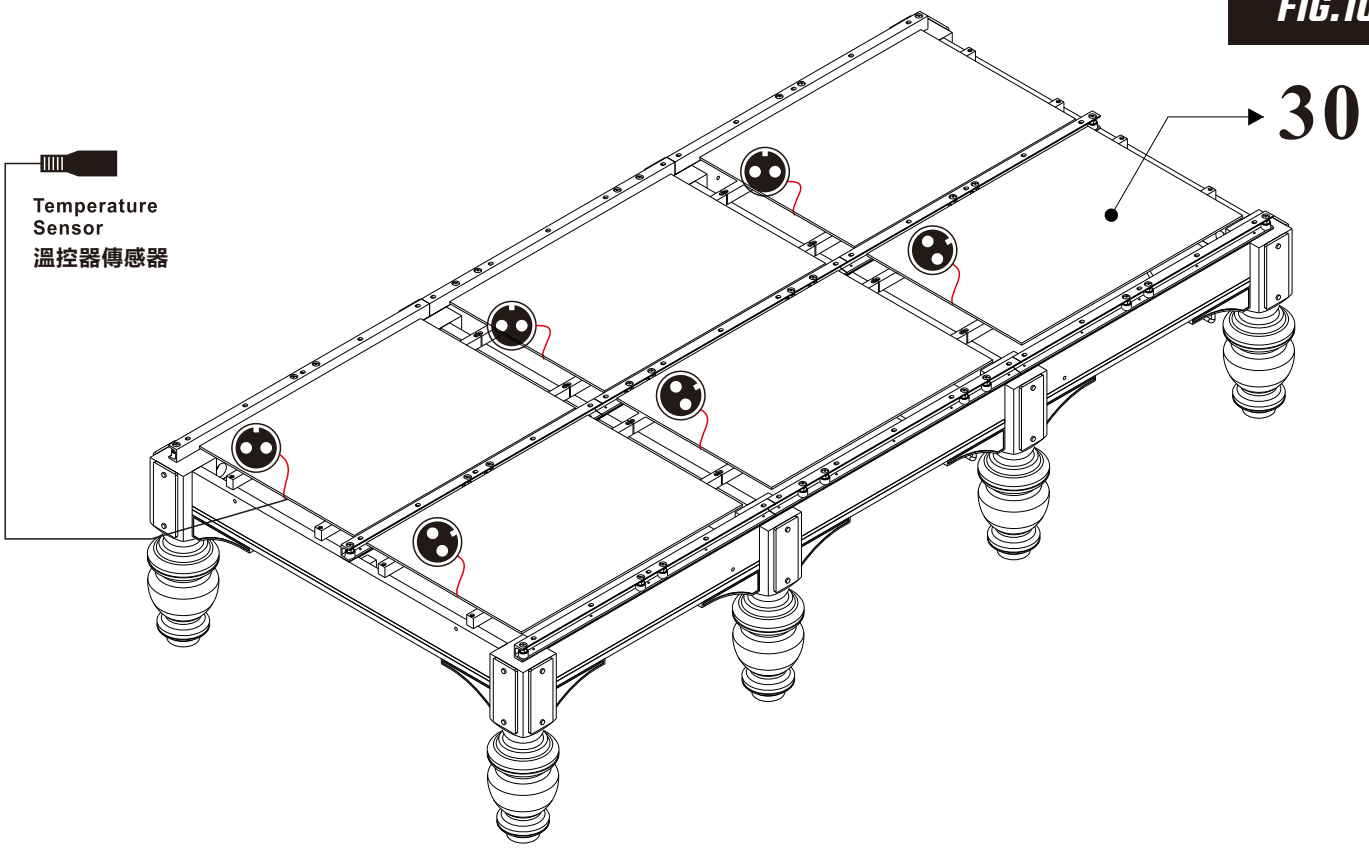


FIG.11

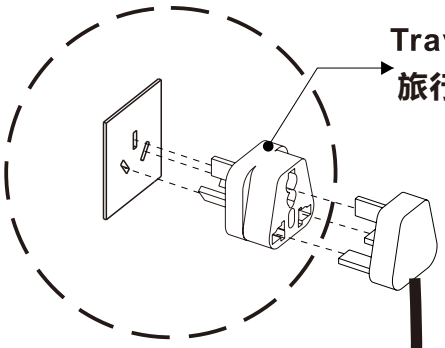

Travel Plug Adapter
旅行插頭適配器


UK(BS)

220V/AC POWER
交流電220V

* For non-UK Standard Plug country/area, please add the 32(Travel Plug Adapter) before connecting to AC POWER PLUG
* 非英國標准插頭國家/地區，在連接到交流電源之前請接入旅行插頭適配器。

Please refer to the attachment.
請參考附件。

31

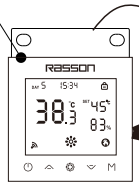


Temperature Sensor
溫控器傳感器




H16

* Use Cable Clip H16 to secure the cable underneath the Center Beam.
* 使用電纜夾H16固定電纜到中長梁底部。

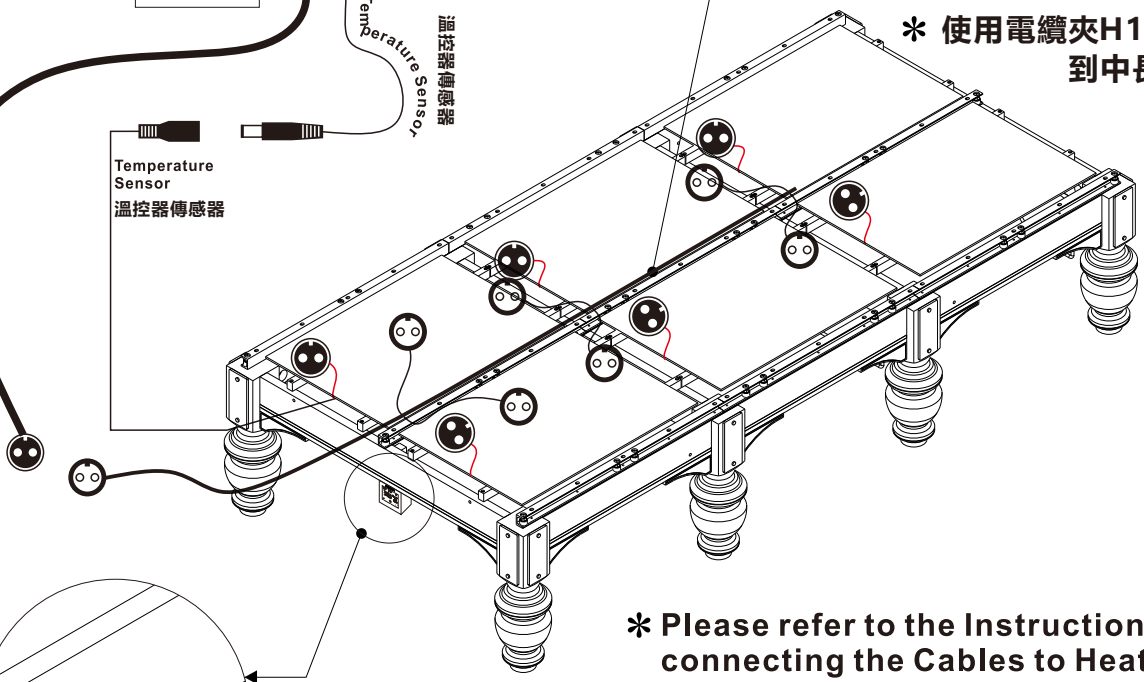


* Please refer to the Instructions for connecting the Cables to Heating Board.
*請參閱使用說明將電纜連接到加熱板。

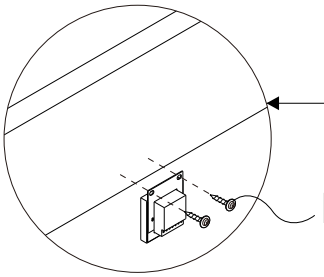

H17

* Fix the Thermostat with screws to the backside of Cabinet.
用自攻絲將溫控器安裝到圍板背面

FIG.12

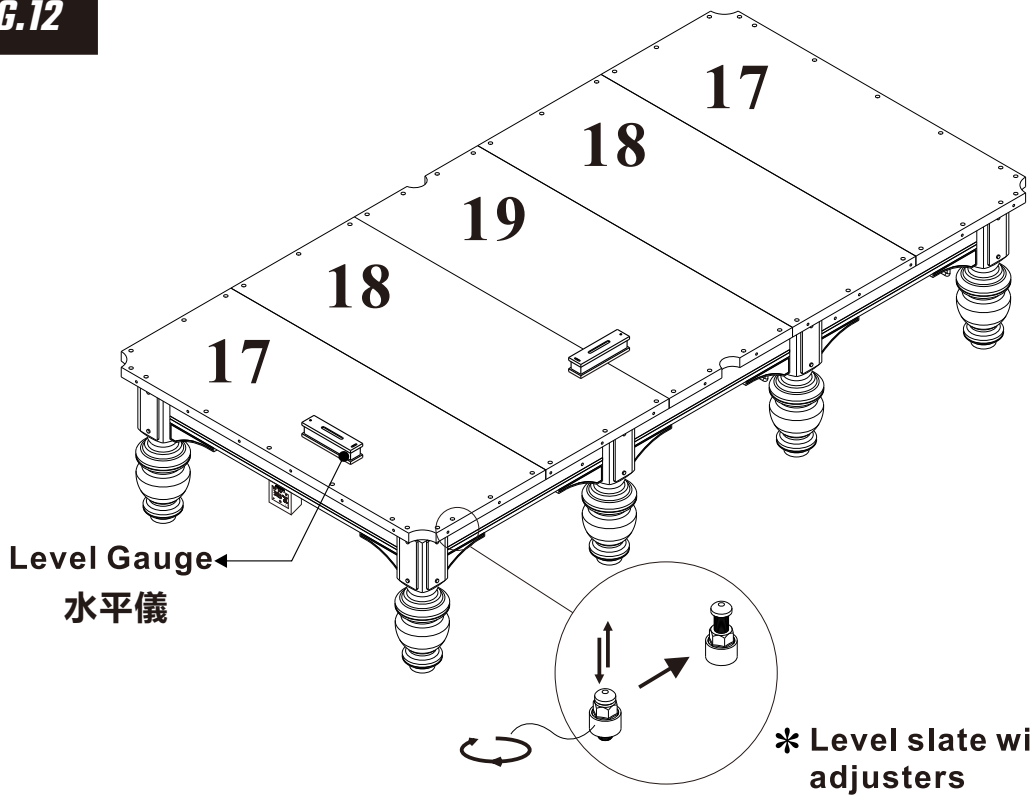

✻ Level slate with 30 slate leveller adjusters
用30個石板調節螺杆調平石板

FIG.13

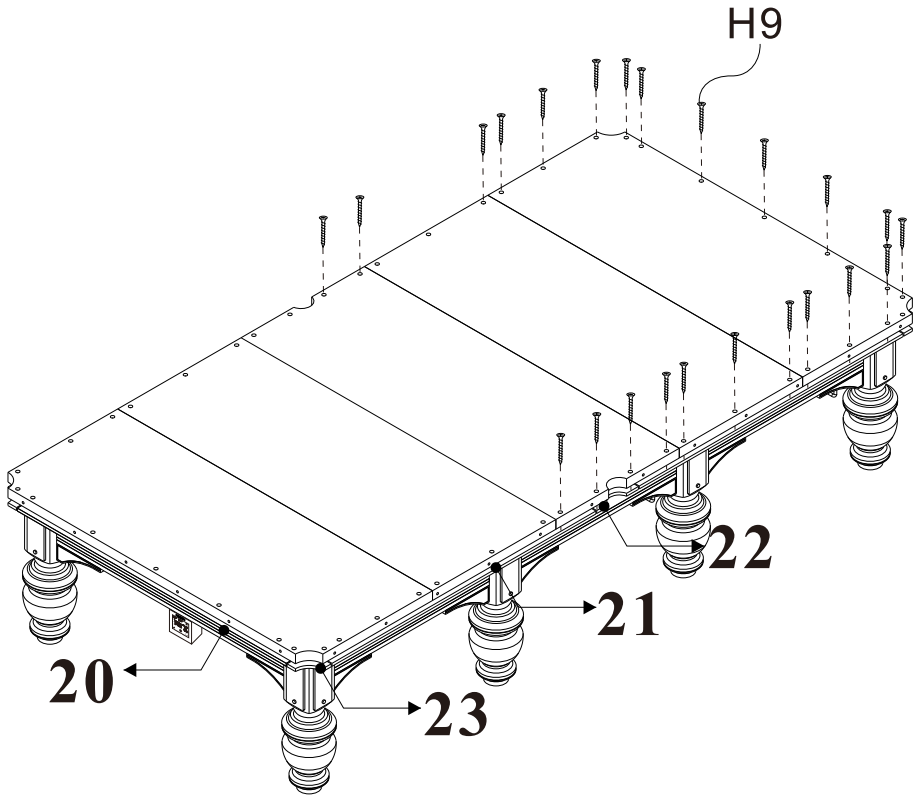



FIG.14

Cut holes in cloth at rail both locations.

石板螺杆孔開洞




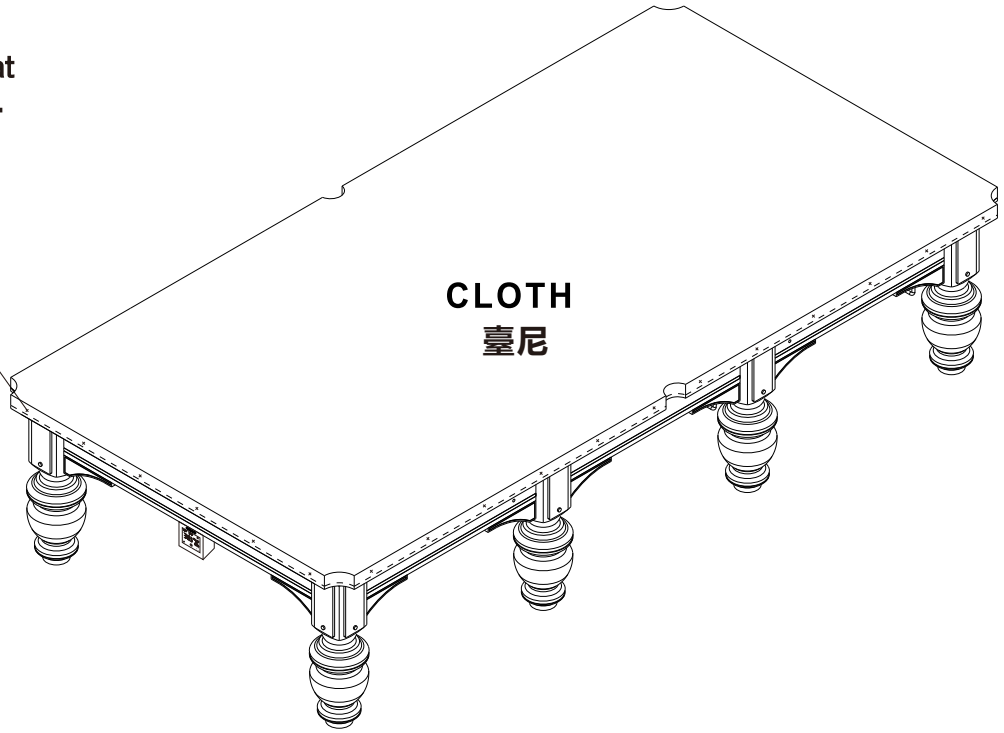


FIG.15

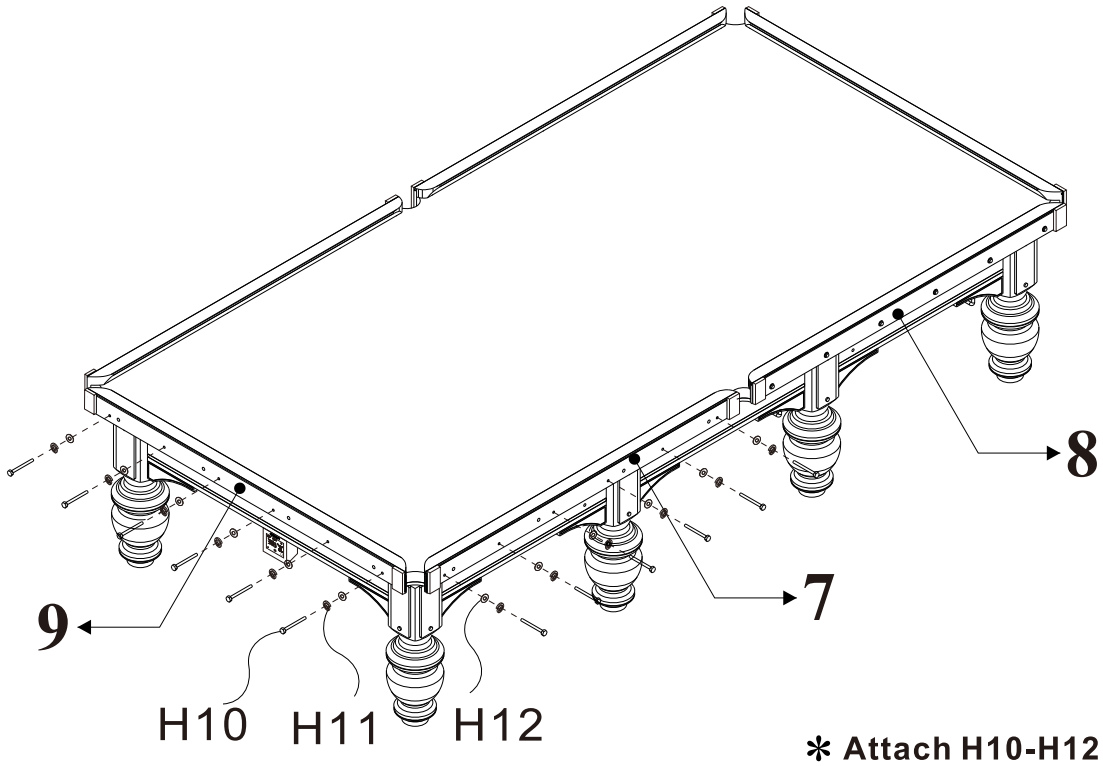

* Attach H10-H12 into slate
安裝H10-H12到石板

FIG.16



16
H14
H15
* Insert 16 and go through the net of pockets
*把部件16穿進球袋棉網中
11
14
10

FIG.17




15
H15 H14
* Insert 15 and go through the net of pockets
* 把部件15穿進球袋棉網中
12
13


FIG.18

✻ Please assemble the press frame in character order
請按字符順序組裝壓框

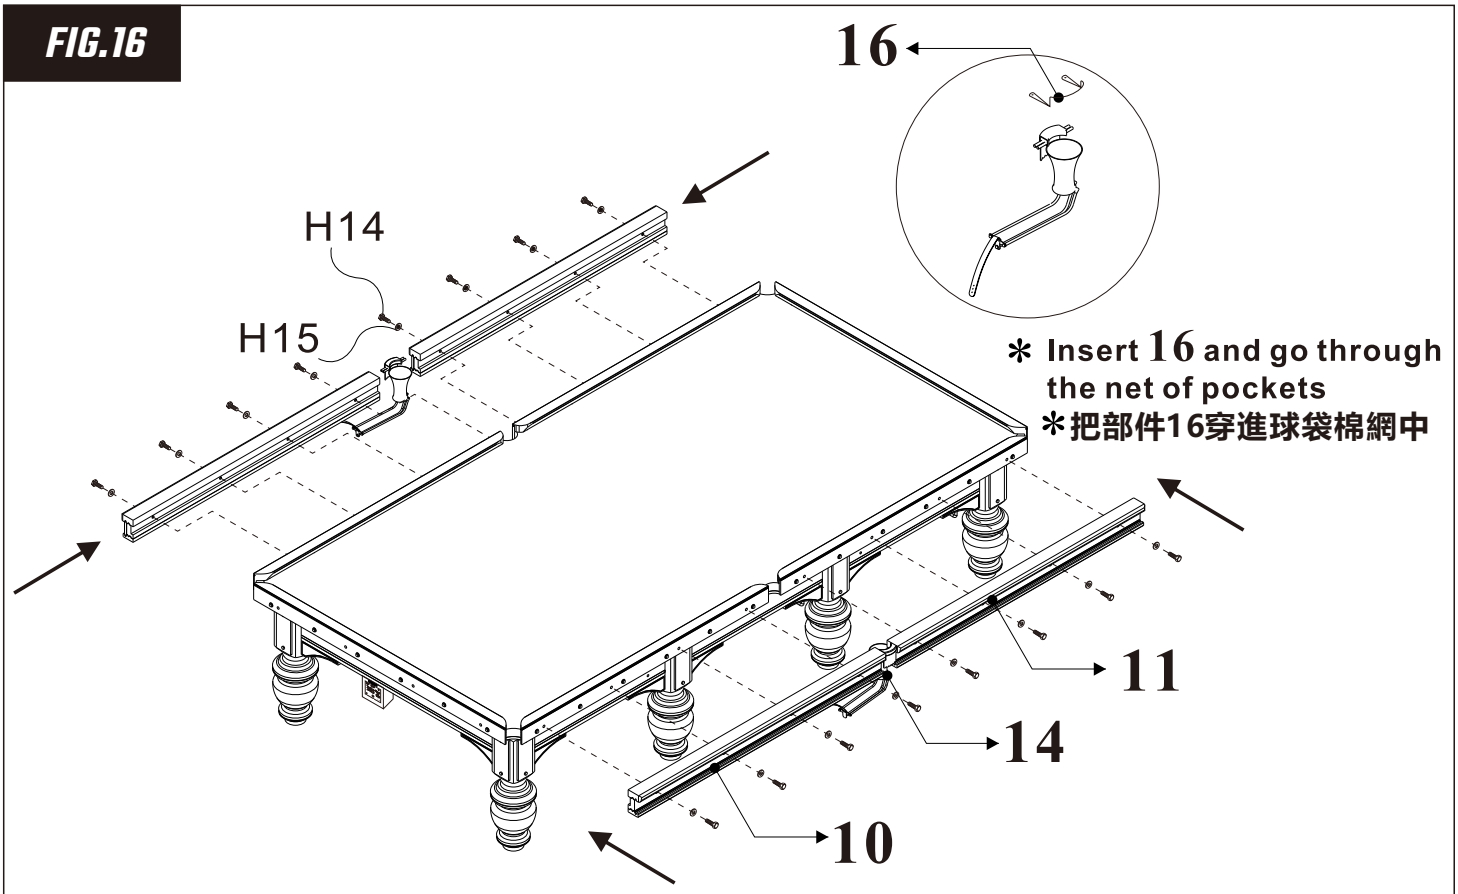


✻ Secure the pocket ring and rails with H13
用螺杆H13將球袋棉網環到扶手底部

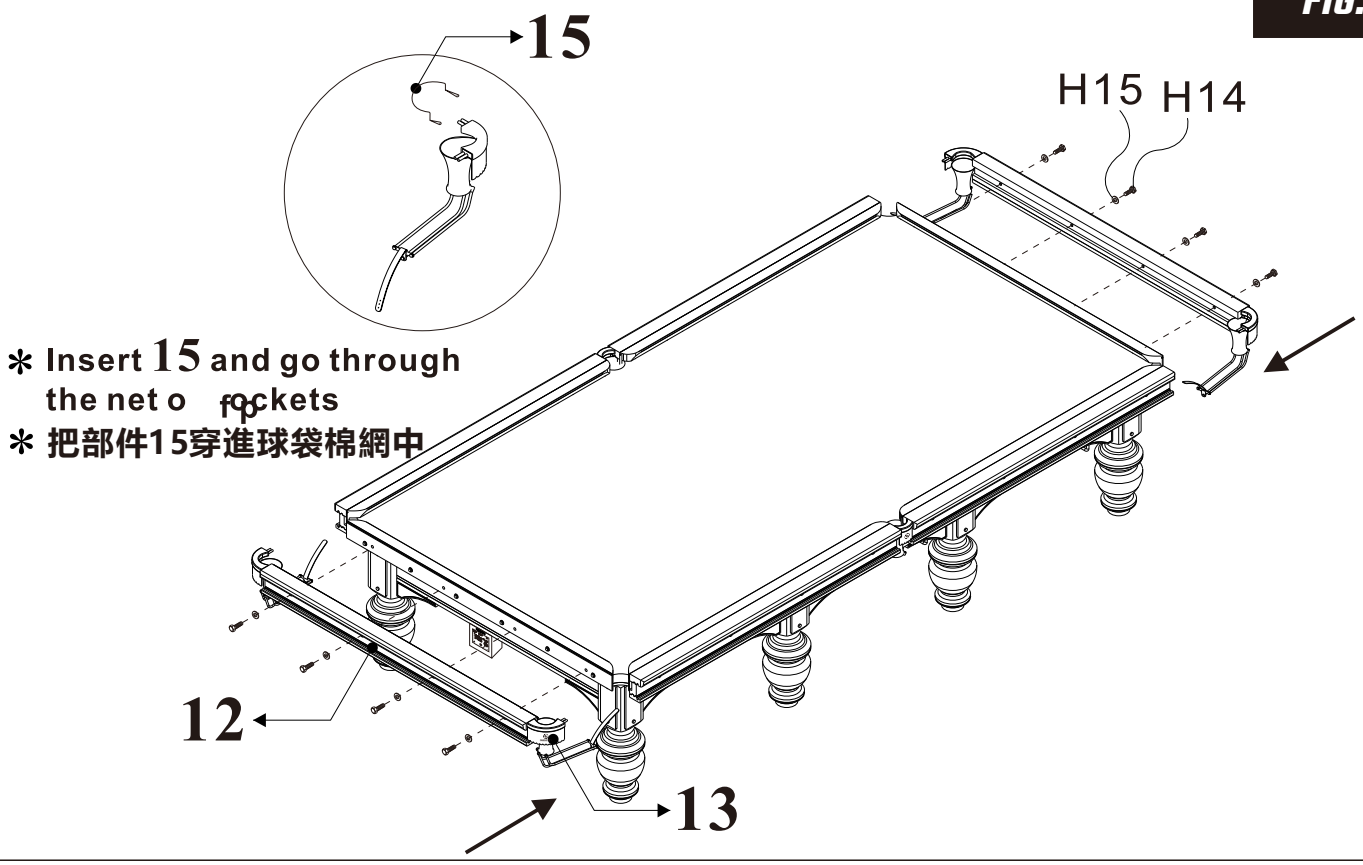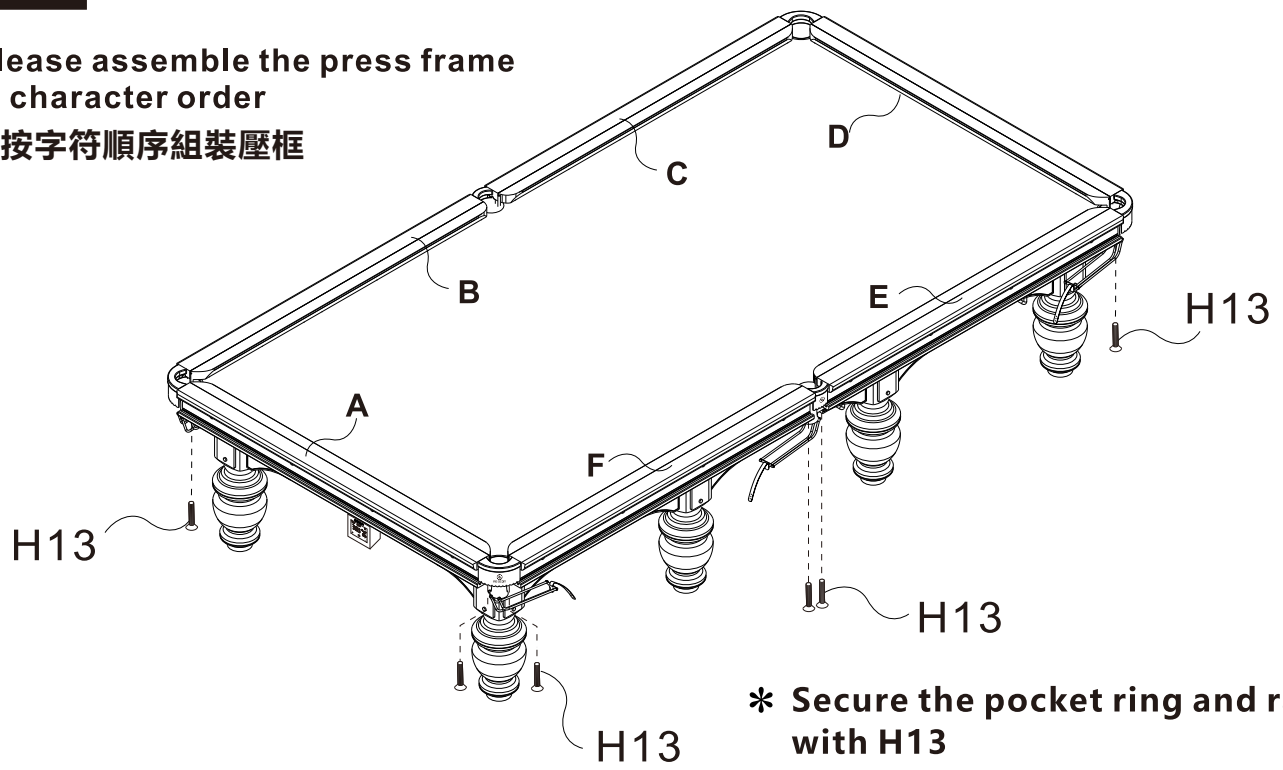FIG.19

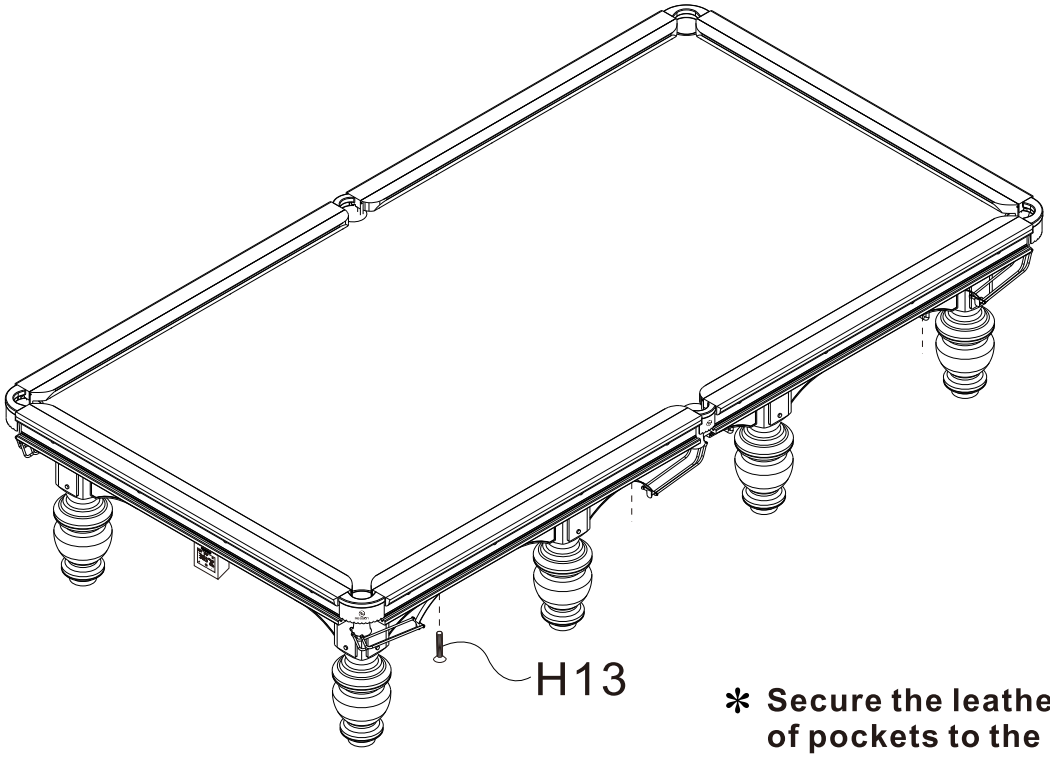


✻ Secure the leather strip of pockets to the bottom of cushion with H13
✻ 用螺杆H13將球袋皮帶固定在釘布板

FIG.20

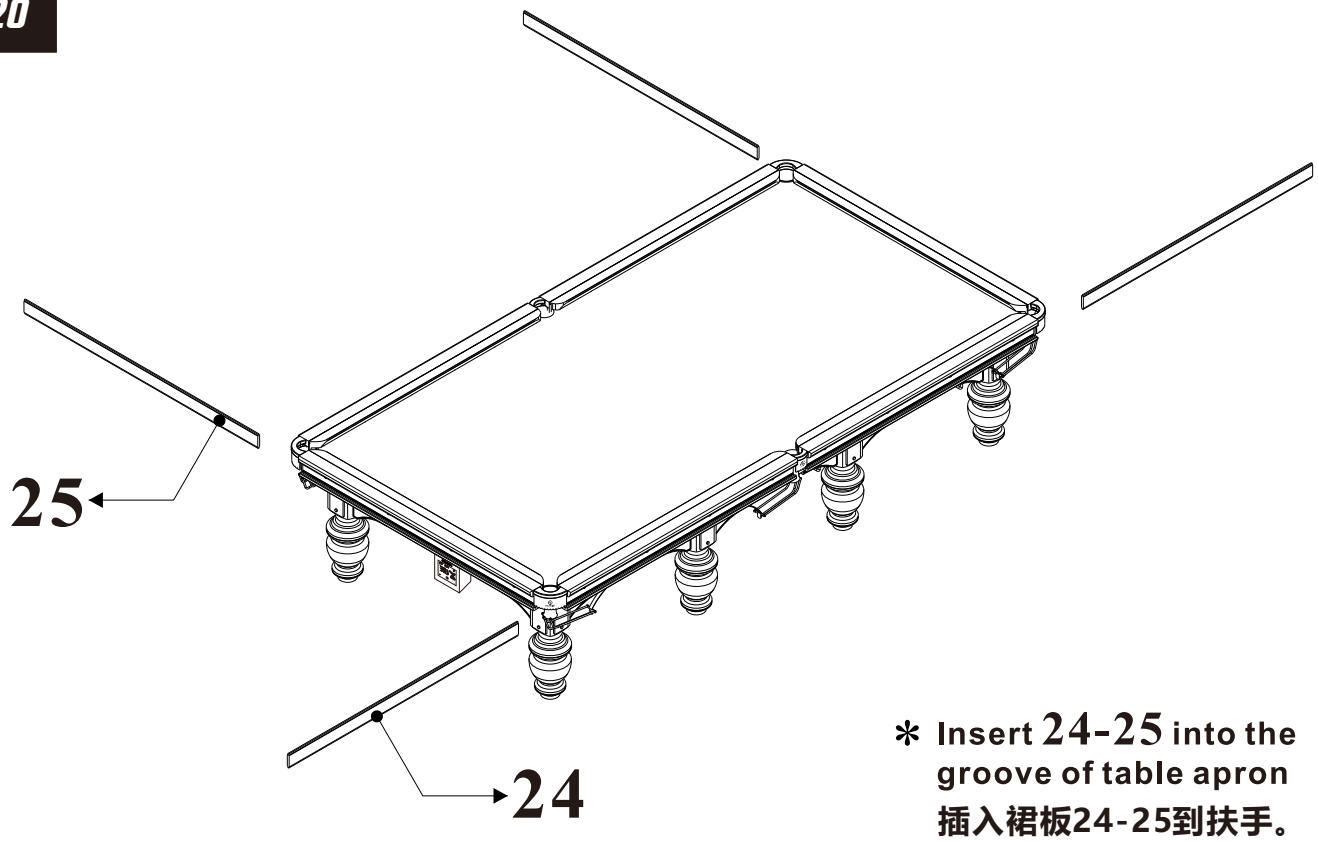


* Insert 24-25 into the groove of table apron
插入裙板24-25到扶手。

FINISH

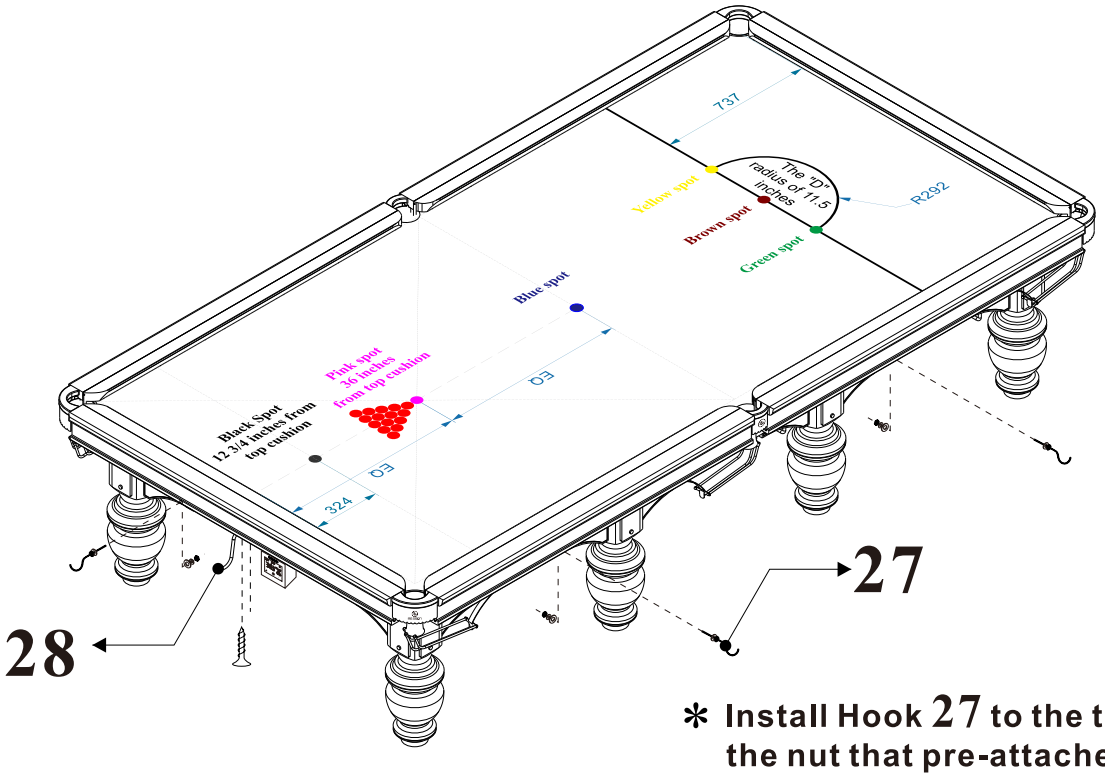


* Install Hook 27 to the table(take off the nut that pre-attached first)
* 將挂鈎27安裝到圍板


THERMOSTAT INSTRUCTION

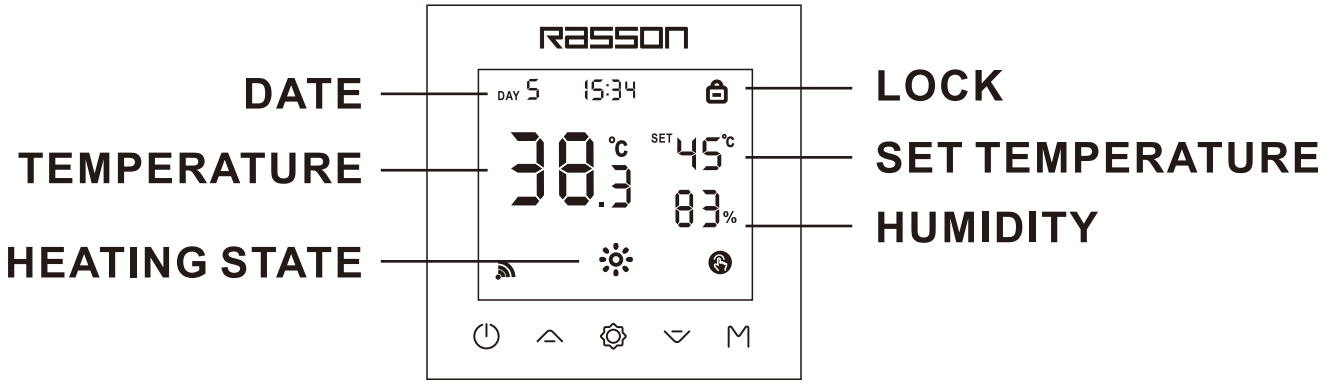

Buttons Function Instruction


Button	Function	Instruction
⏻	**Power**	Press ⏻ button could turn on/off the Thermostat while the device is electrified.
	Lock/Unlock	Press and hold ⏻ & ∧ for 5 seconds to Lock/Unlock.
⚙	**Set**	Press ⚙ setting date and time. Please press the ∧ and ∨ buttons to adjust. Wait 15 seconds to exit date settings.
M	**Modify**	Press M change Date / Time settings state.
∧ ∨	**Temperature adjust**	Please press the ∧ and ∨ buttons to adjust.

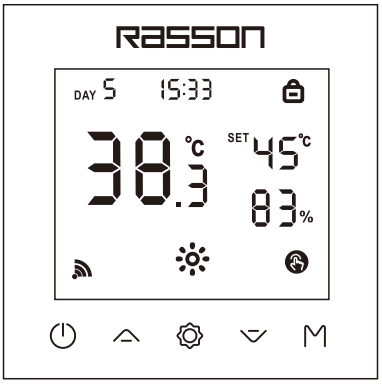

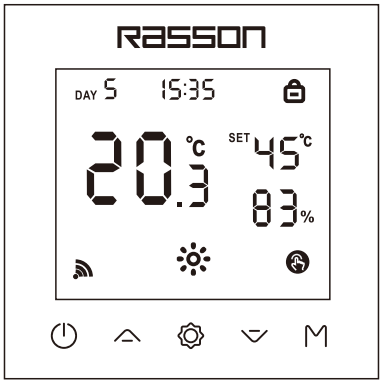

With the temperature set to 45°C and in heating mode, the temperature drops to room temperature and the heating plate does not work.

Check the main wiring connection or the heating plate for damage.

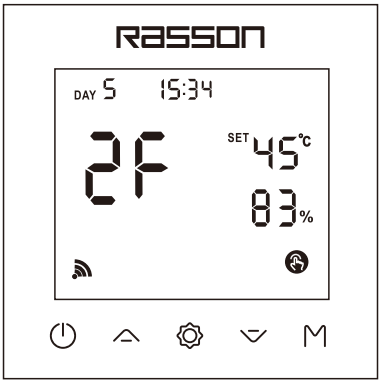

Thermostat shows "2F" – temperature probe disconnected or heating plate faulty.







No.18th Floor, Weiyangyipin Building, Leying Plaza, Bali Lake New District, Jiujiang City, Jiangxi Province, China

kevina@rasson.cn

+86-792-898-6880

RASSON





