
RASSON 锐胜

12' Pyramid

俄式球臺

英伦 Englon

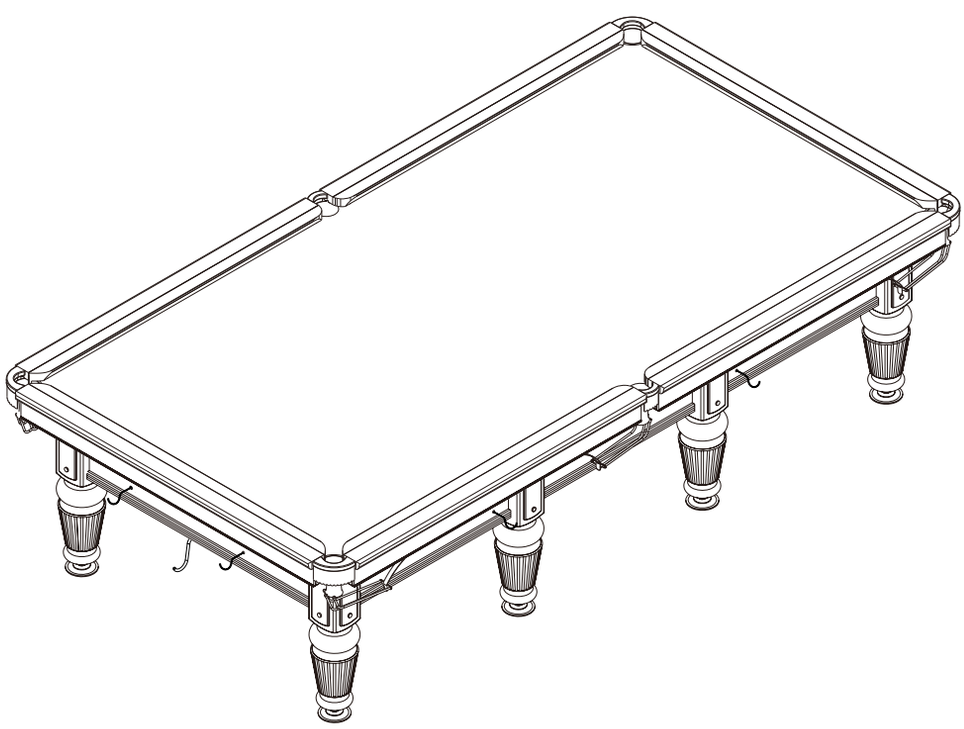


BILLIARDS INSTRUCTION MANUAL

臺球桌安裝説明書












Dec.2025

WWW.RASSON.CN
Junny@rasson.cn

HARDWARE/五金單

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌脚	H1		HEX HEAD BOLT 1/2" X 9"(M12X 230mm)	24
	H2		SPRING LOCK WASHER 1/2" I.D.	24
	H3		FLAT WASHER 1/2" I.D.	24
	H4		NUT 1/2" I.D.	24
	H5		FLAT HEAD SCREW 10# X 15/16"(M5X24mm)	24
	H6		METAL WASHER	24
	H7		METAL CAP	24
RAIL/POCKET/FRAME/SLATE 扶手／球袋／圍板／石板	H8		HEX HEAD CROSS BOLT 3/8" X 4"(M10 X 100mm)	2
	H9		FLAT WASHER 3/8" I.D.	4
	H10		NUT 3/8" I.D.	2
	H11		PWA SCREW 10# X 2"(M5X50mm白色)	50
	H12		HEX HEAD BOLT-COLOR 1/2" X 3-3/8"(M12-12G X 95MM彩鋅)	36
	H13		SPRING LOCK WASHER 1/2" I.D.	36
	H14		FLAT WASHER 1/2" I.D.	36
	H15		HEX HEAD BOLT (built-in rails)	/
	H16		FLAT WASHER (built-in rails)	/
	H17		CROSS BOLT-COLOR 1/4" X 3/4"(D6-20G X 18MM彩鋅)	18
	H18		BOLT PRE-ASSEMBLED IN RAIL	24
	H19		FLAT HEAD SCREW-BLACK 8# X 1"(M4X25mm黑色)	2

PARTS LIST/ 配件單

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	1		CORNER LEG 底脚	4
	2		MIDDLE LEG 中脚	4
CABINET/FRAME 大框／圍板	3		SIDE APRON 長圍板	2
	4		END APRON 短圍板	2
	5		LEG BEAM FOR MIDDLE LEGS 中脚板	2
	6		LONG BEAM 長拉梁	1
TOP RAIL 扶手	7		LEFT STEEL CUSHION 左鋼庫	2
	8		RIGHT STEEL CUSHION 右鋼庫	2
	9		END STEEL CUSHION 端鋼庫	2
	10		TOP RAIL LEFT SIDE 左扶手	2
	11		TOP RAIL RIGHT SIDE 右扶手	2
	12		TOP RAIL END 端扶手	2
APRON 裙板	13		LEFT SIDE APRON(IN RAIL) 左裙板	2
	14		RIGHT SIDE APRON(IN RAIL) 右裙板	2
	15		END APRON(INRAIL) 端裙板	2
POCKET 球袋	16		CORNER POCKET 角袋	4
	17		SIDE POCKET 中袋	2

PARTS LIST/ 配件單






PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
	18		**RING FOR CORNER POCKETS** 角袋棉網環	4
	19		**RING FOR SIDE POCKETS** 中袋棉網環	2
SLATE 石板	20		**SLATE (END)** 石板(端邊)	2
	21		**SLATE (MDDLE)** 石板(中間)	2
	22		**SLATE (CENTER)** 石板(中心)	1
WOOD FRAME 釘布板	23		**WOOD FRAME (END)** 釘布板(端邊)	2
	24		**WOOD FRAME (SIDE)** 釘布板(長邊)	4
	25		**WOOD FRAME (SIDE POCKET)** 釘布板(中袋)	2
	26		**WOOD FRAME (CORNER POCKET)** 釘布板(底袋)	4
	27		**CLOTH** 臺尼	1
HOOK 挂鈎	28		**HOOK** 挂鈎	8
	29		**ACCESSORY HOOK** 三角框挂鈎	1
	30		**LEG COVER** 脚蓋板	12
	31		**PLASTIC CAP** 圍板孔蓋	24
	32		**WOOD JOINT** 木梢	24
	33		**ADJUST BOLT** 調整器螺杆	30

FIG.1

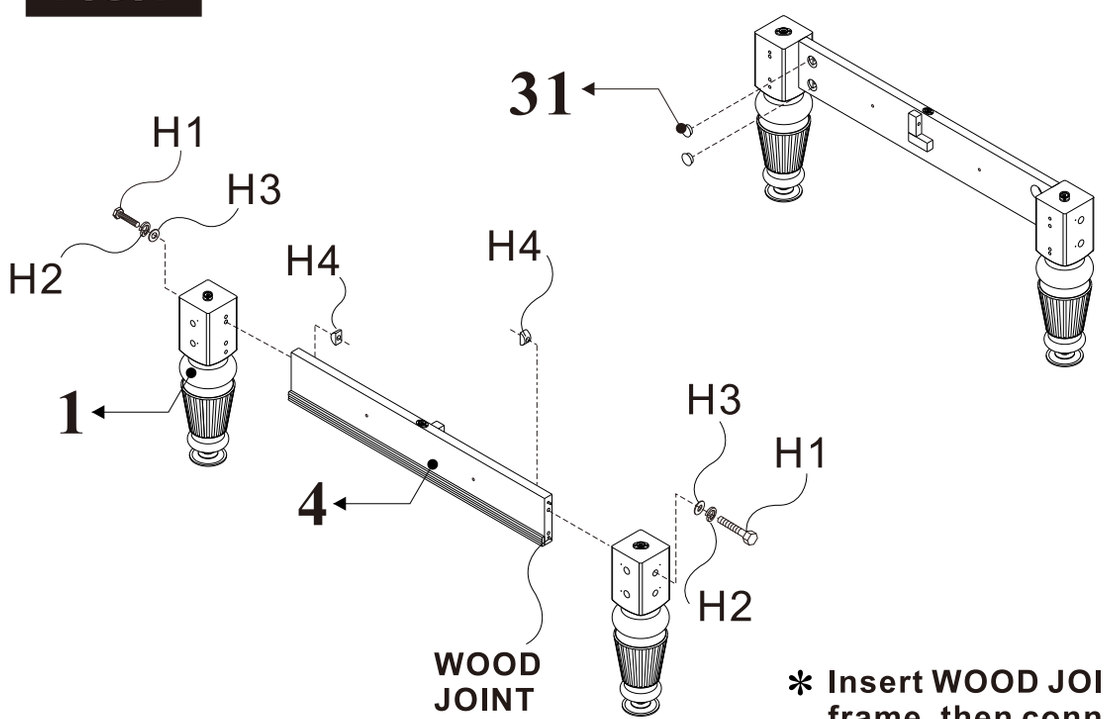

* **Insert WOOD JOINT into frame, then connect with H1**

* 圍板插入木梢，然后用H1螺杆連接

FIG.2


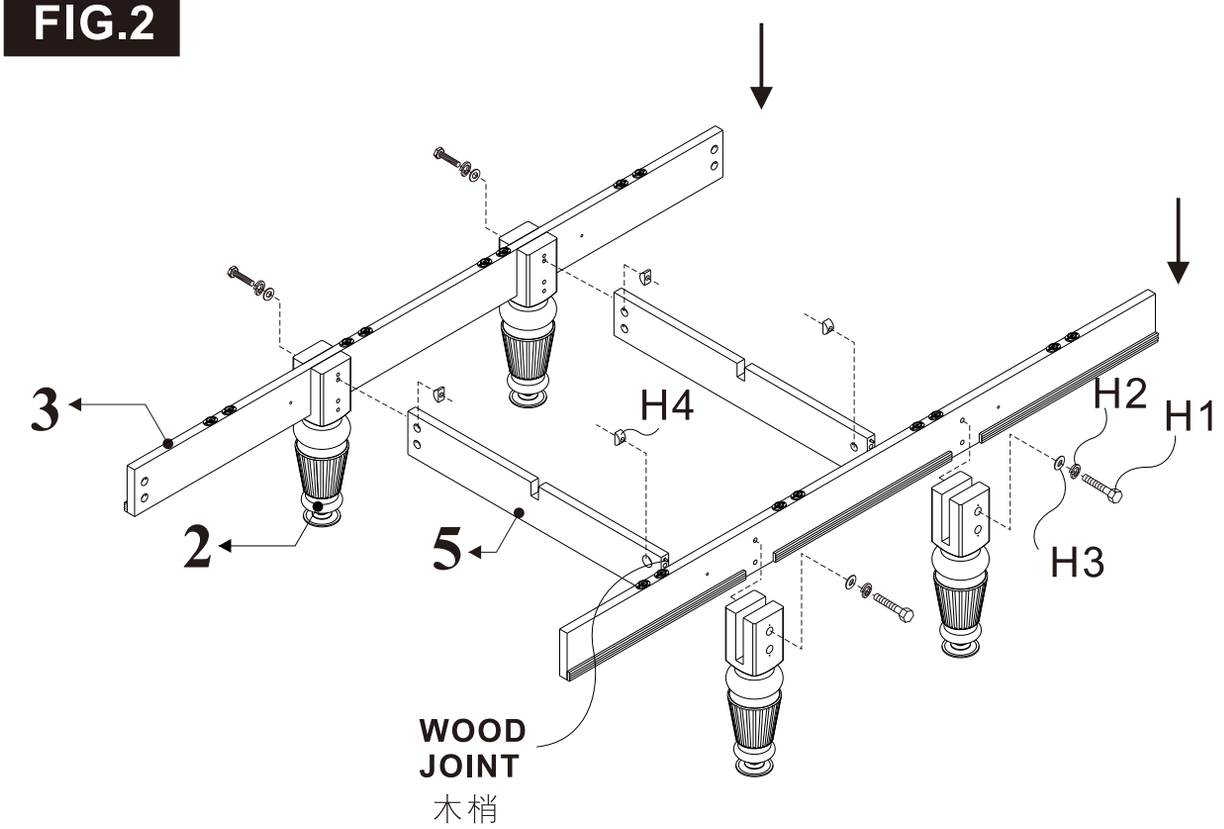


FIG.3

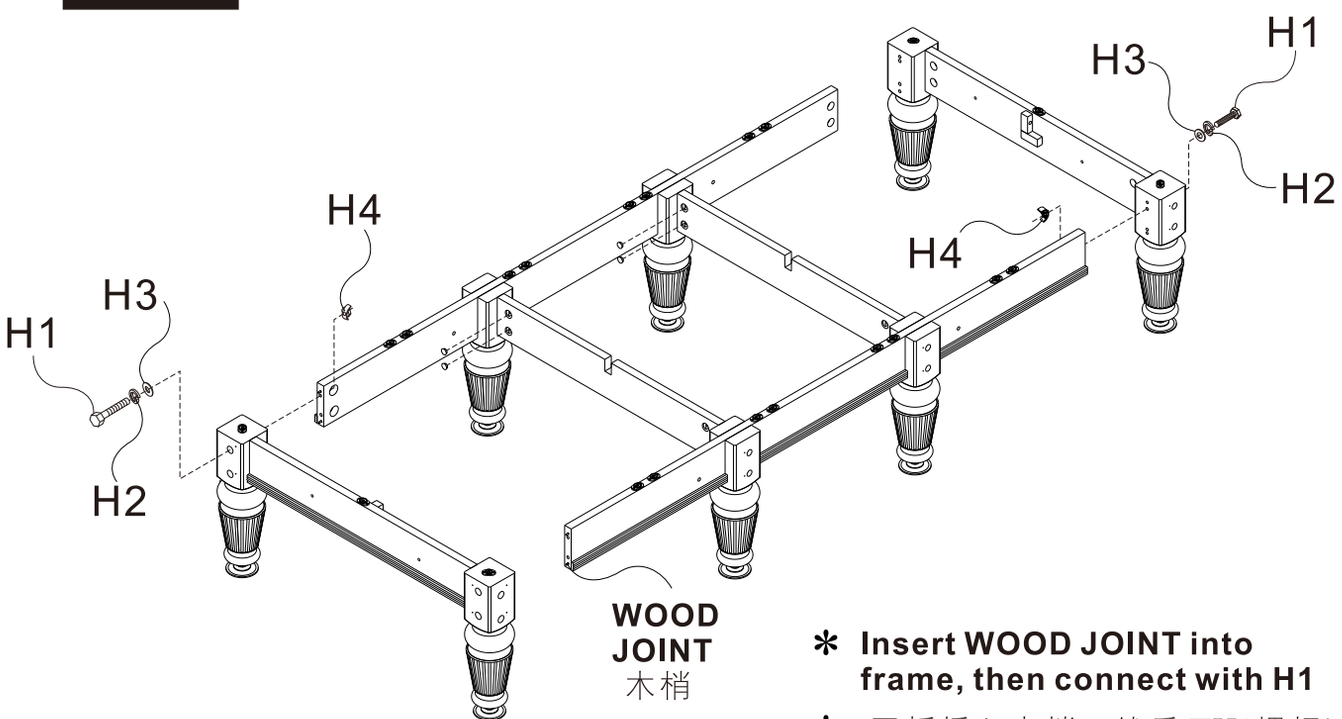

* **Insert WOOD JOINT into frame, then connect with H1**
* 圍板插入木梢，然后用H1螺杆連接

FIG.4

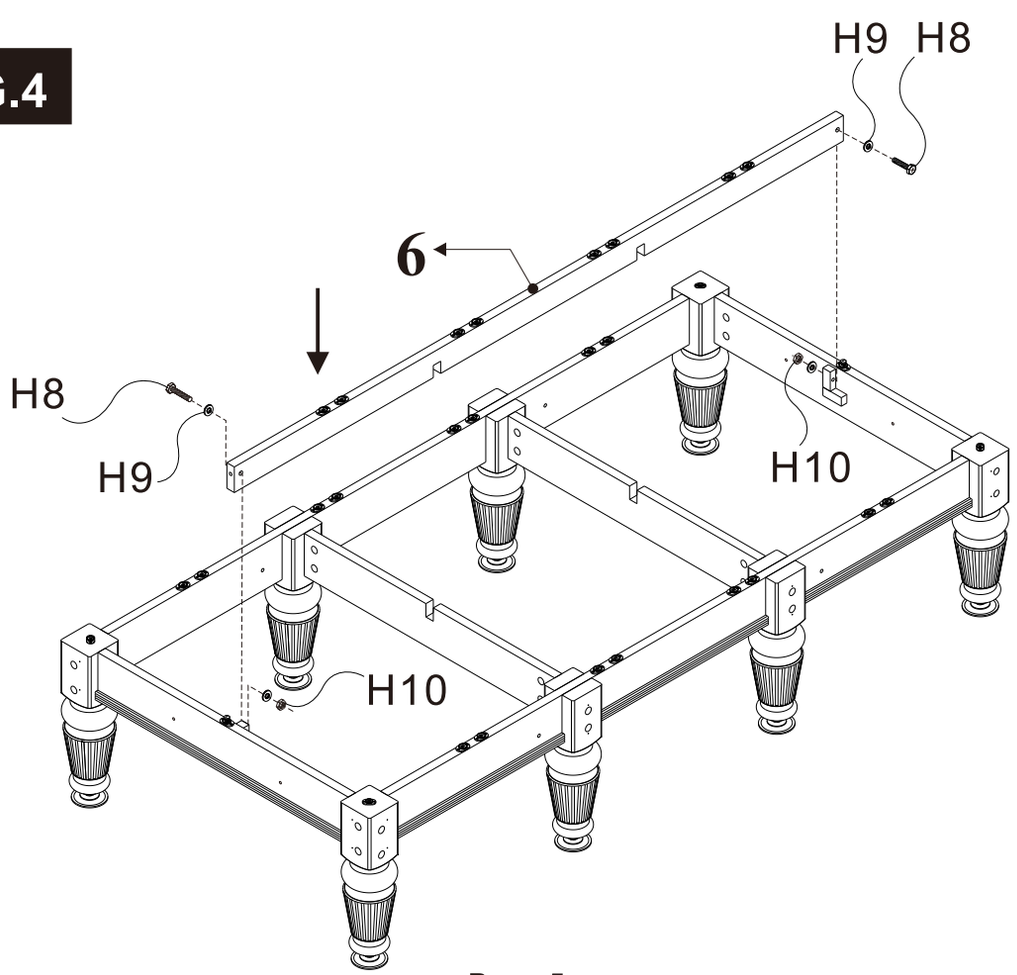


FIG.5


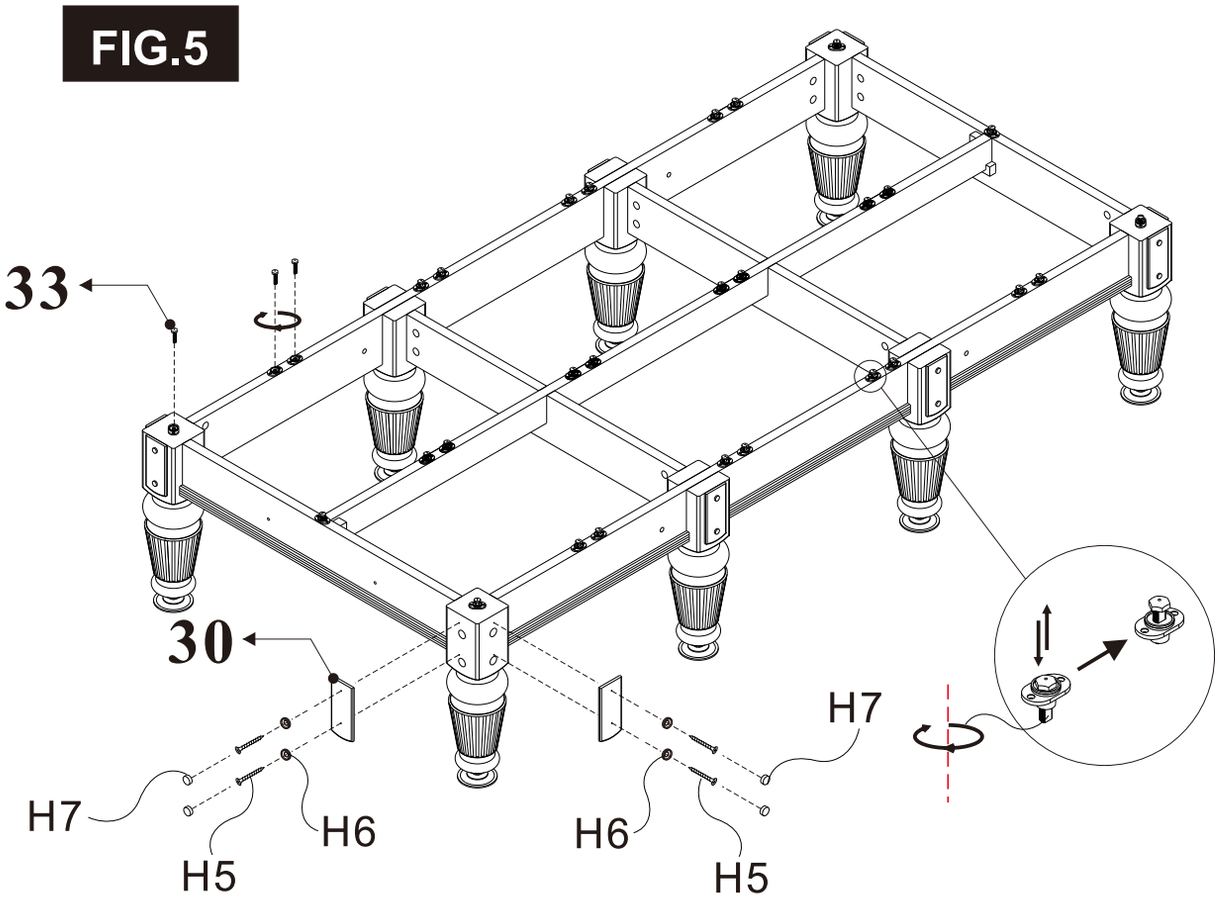


FIG.6

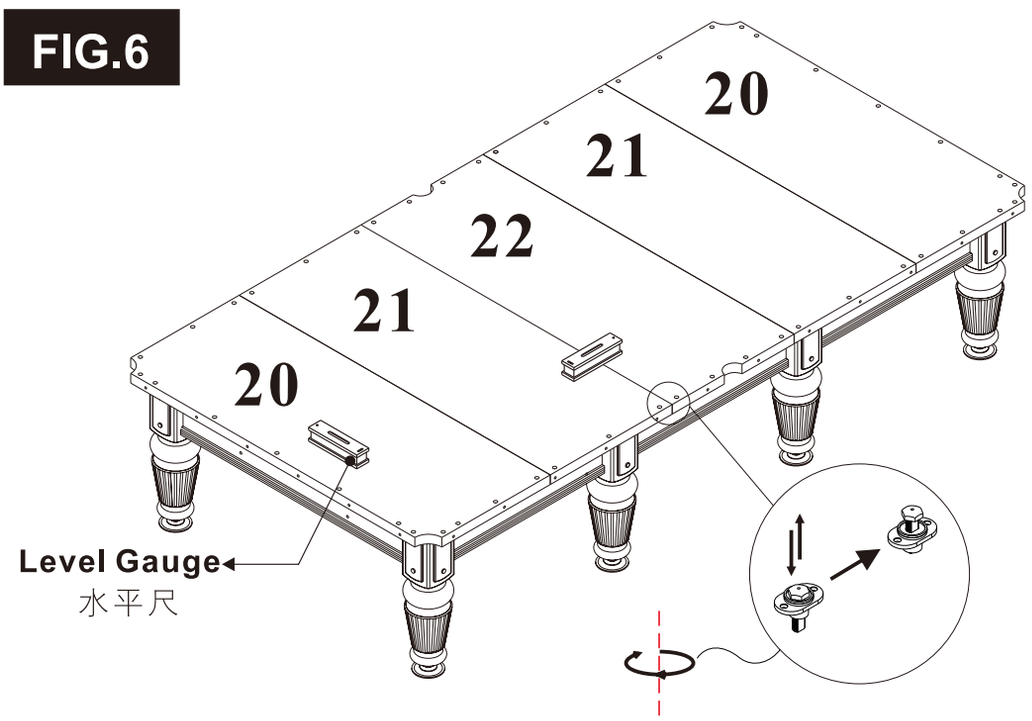

✻ Level slate with 30 slate leveller adjusters

✻ 用30個石板調節螺杆調平石板

FIG.7

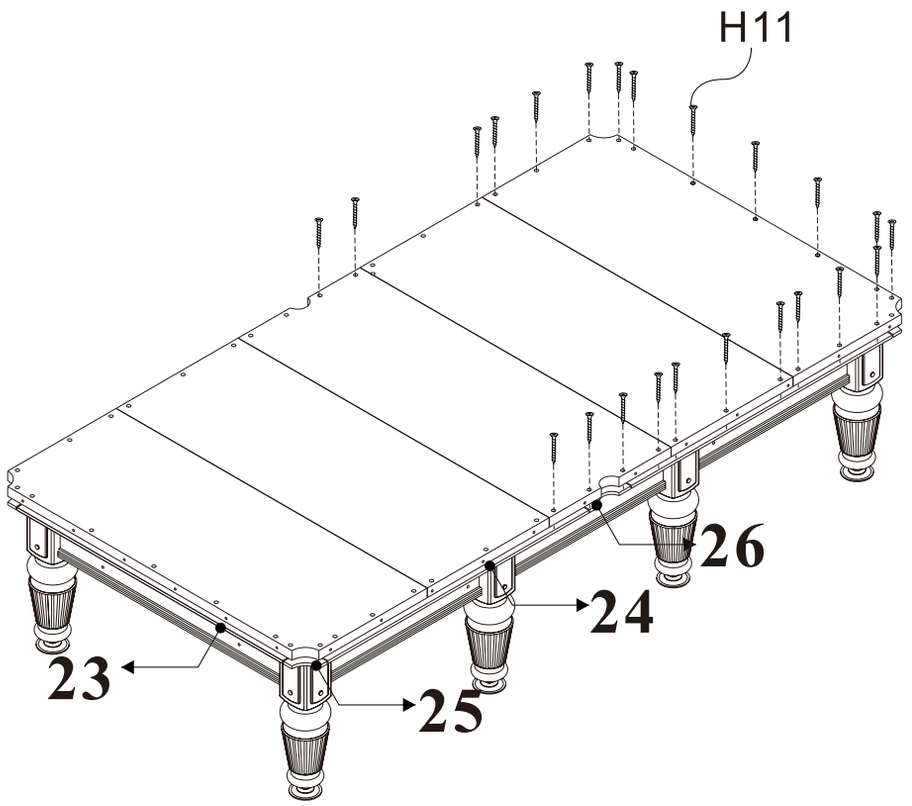

H11
26
24
23
25

FIG.8


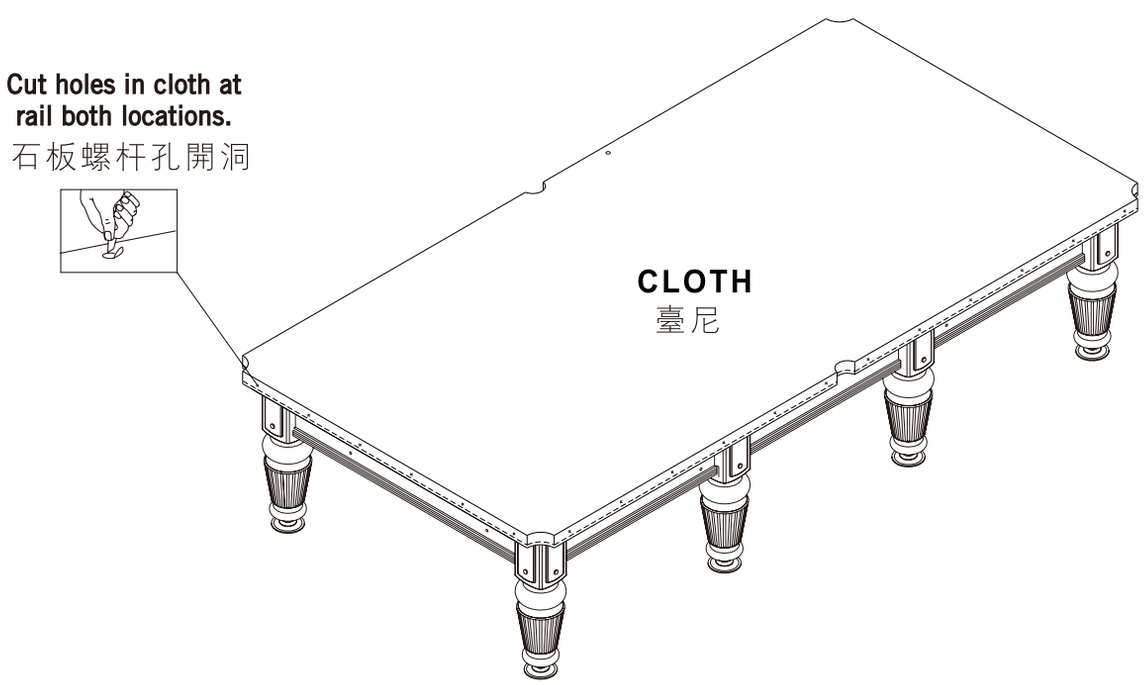

Cut holes in cloth at
rail both locations.
石板螺杆孔開洞
CLOTH
臺尼


FIG.9

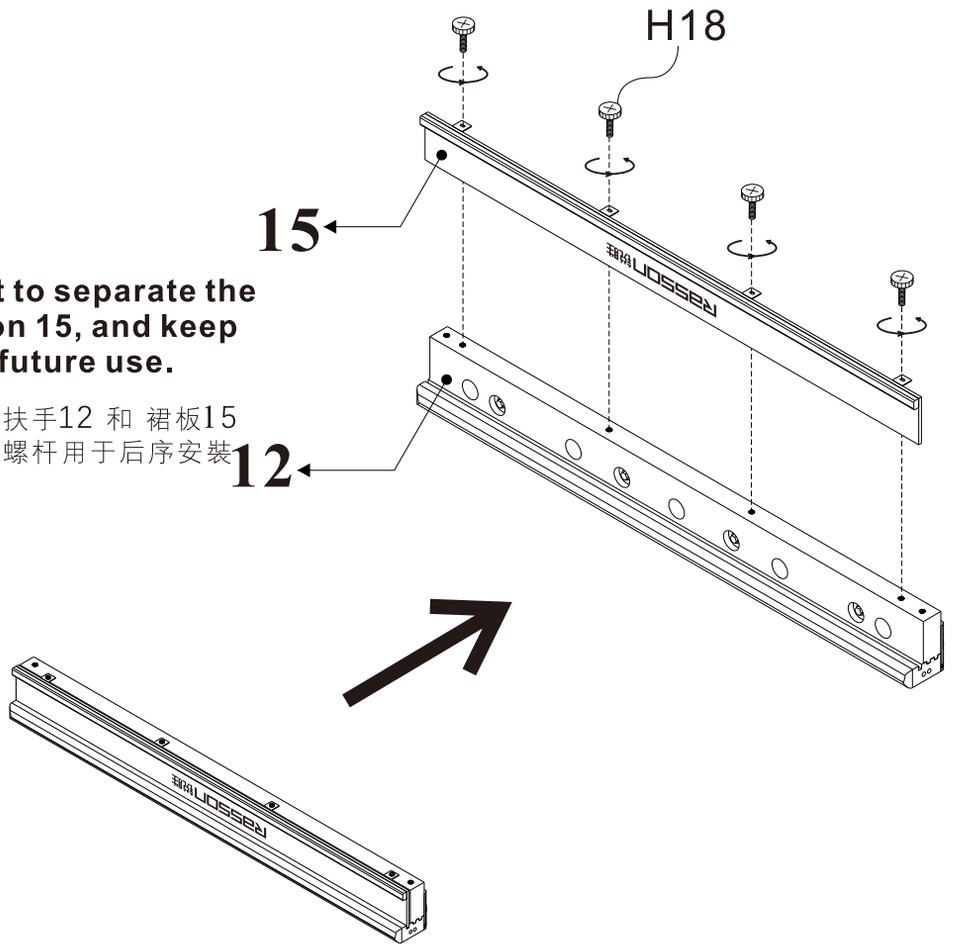

✻ **Loosen H18 bolt to separate the Rail 12 and Apron 15, and keep the H18 bolt for future use.**

✻ 擰松 H18 螺杆，將扶手12 和 裙板15 分離，并保存 H18 螺杆用于后序安装


FIG.10

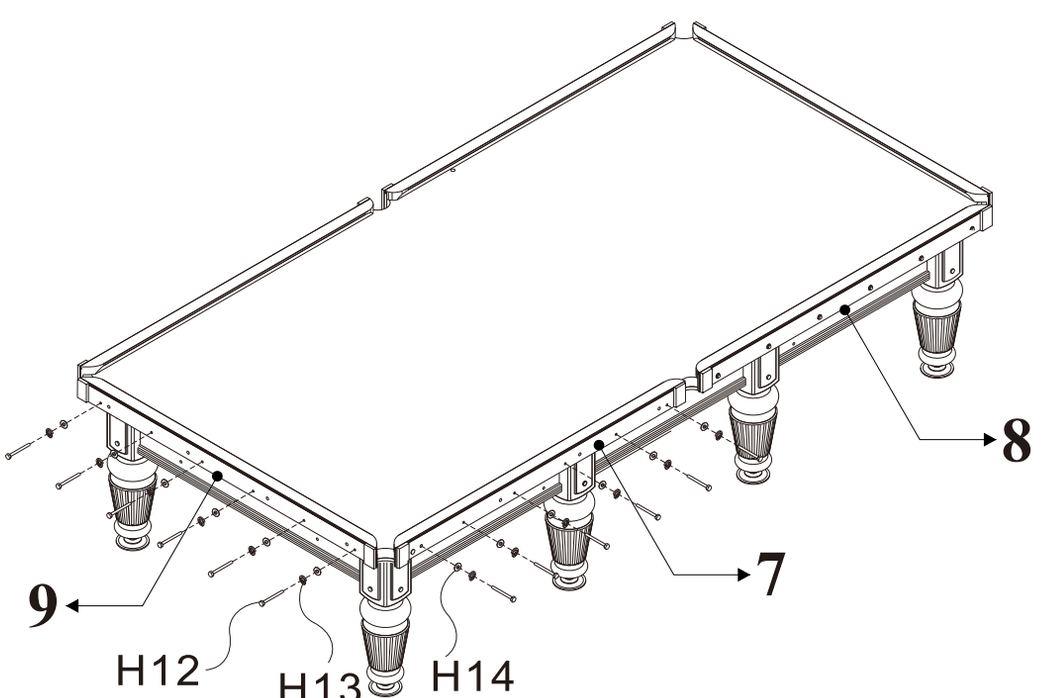

✻ **Attach H12-H14 into slate**

✻ 安装H12－H14到石板


FIG.11

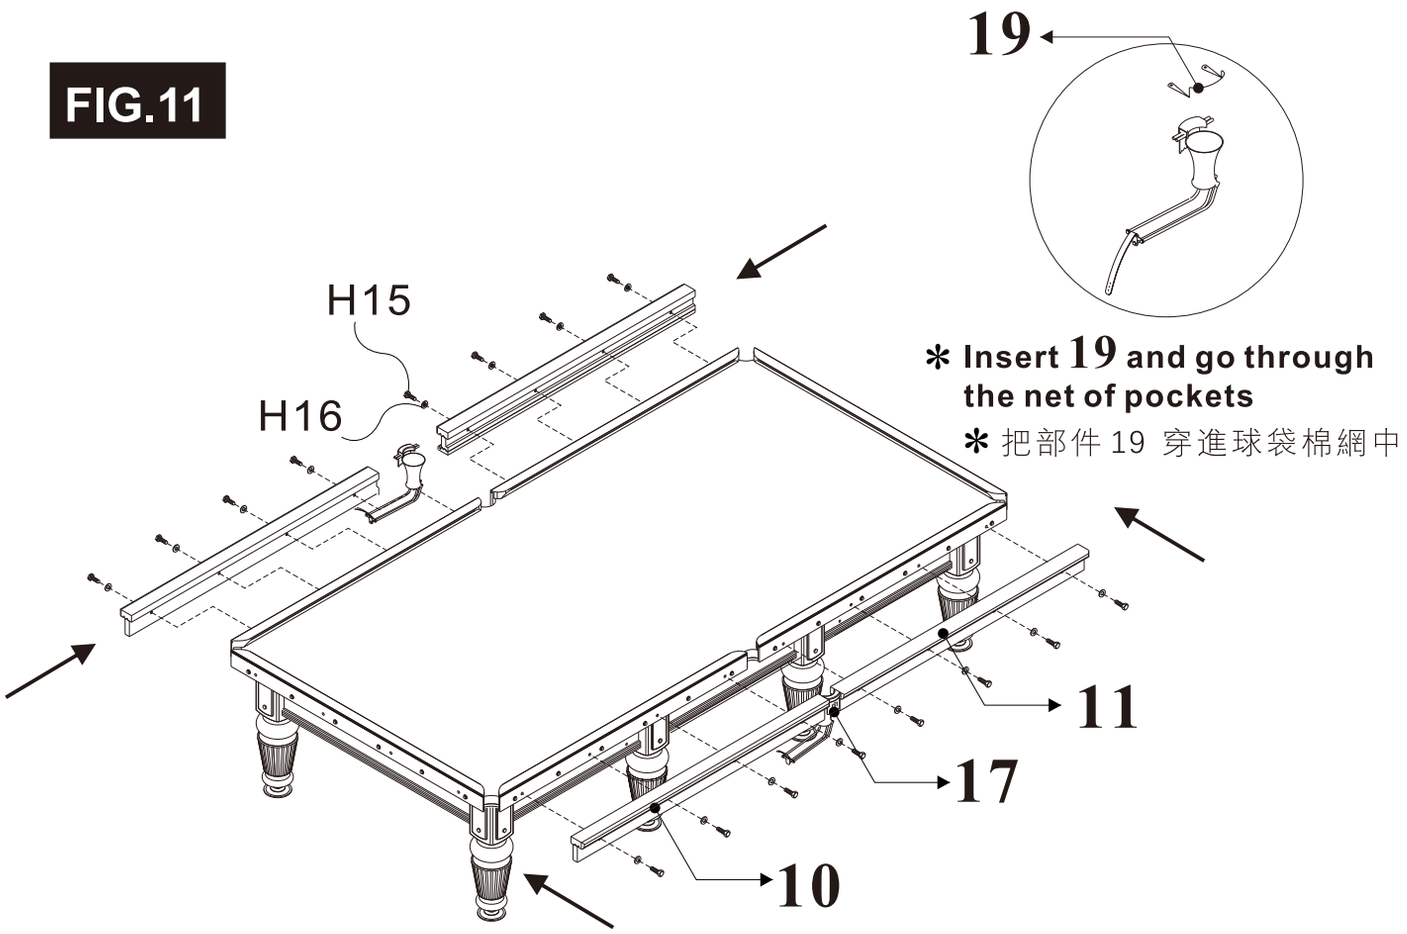

✻ **Insert 19 and go through the net of pockets**

✻ 把部件 19 穿進球袋棉網中

FIG.12

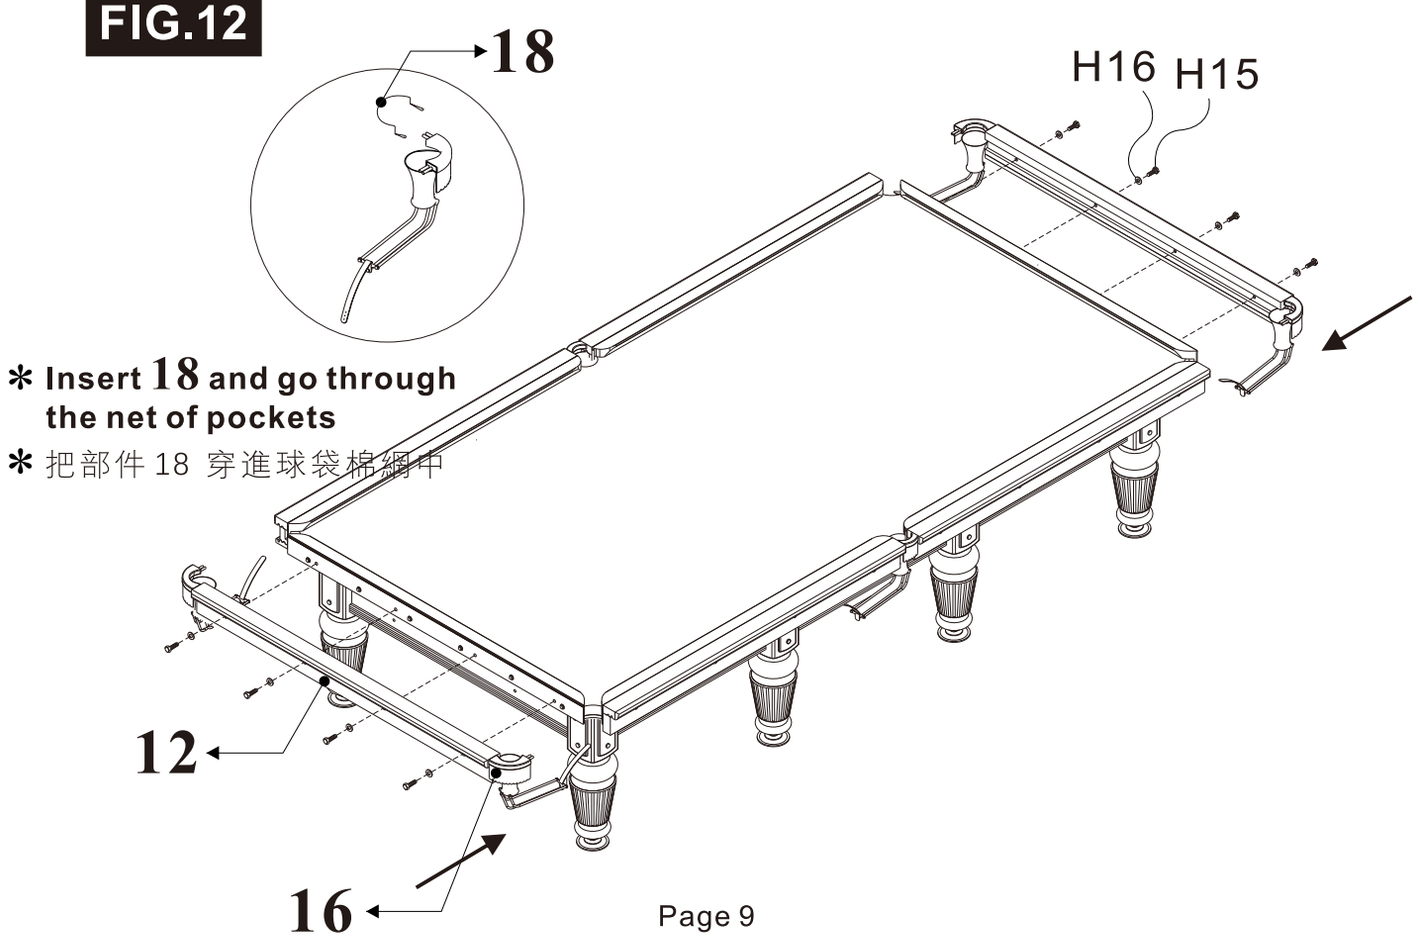


✻ **Insert 18 and go through the net of pockets**

✻ 把部件 18 穿進球袋棉網中

FIG.13

✻ **Please assemble the press frame in character order**

✻請按字符順序組裝壓框

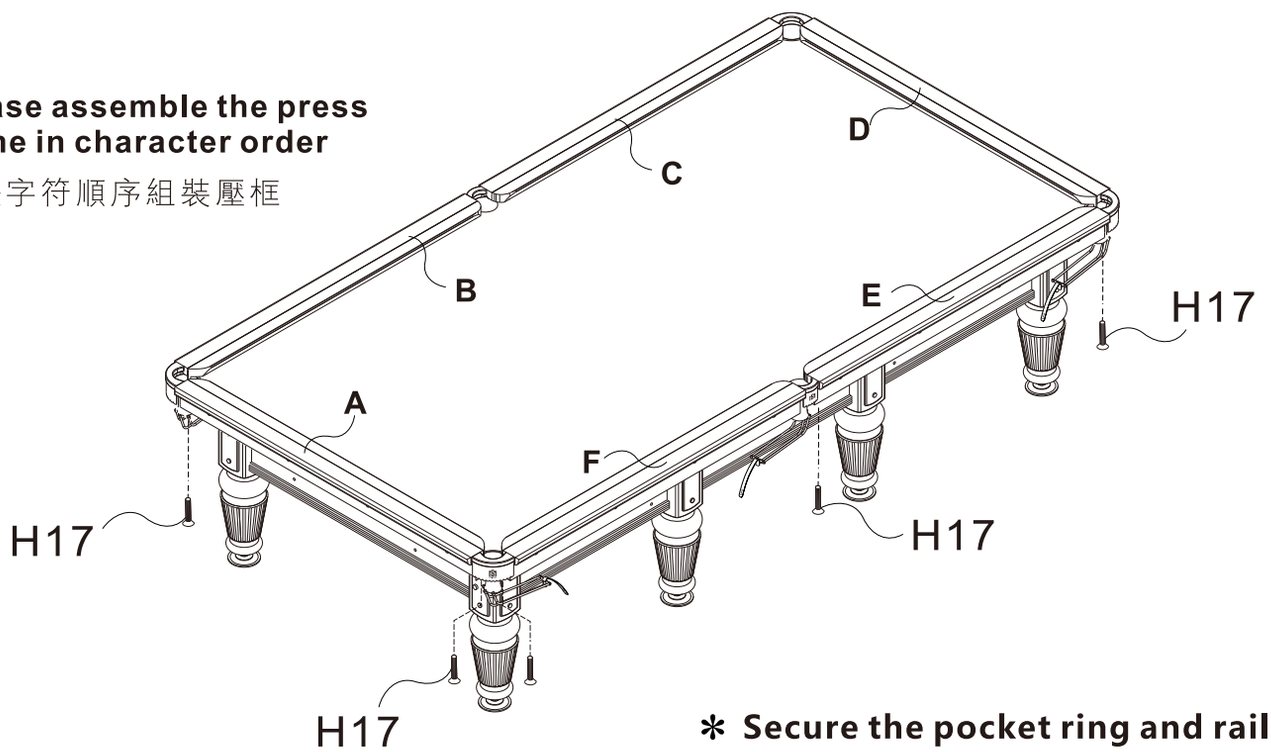

✻ **Secure the pocket ring and rails with H17**

✻ 用螺杆H17將球袋棉網環到扶手底部

FIG.14



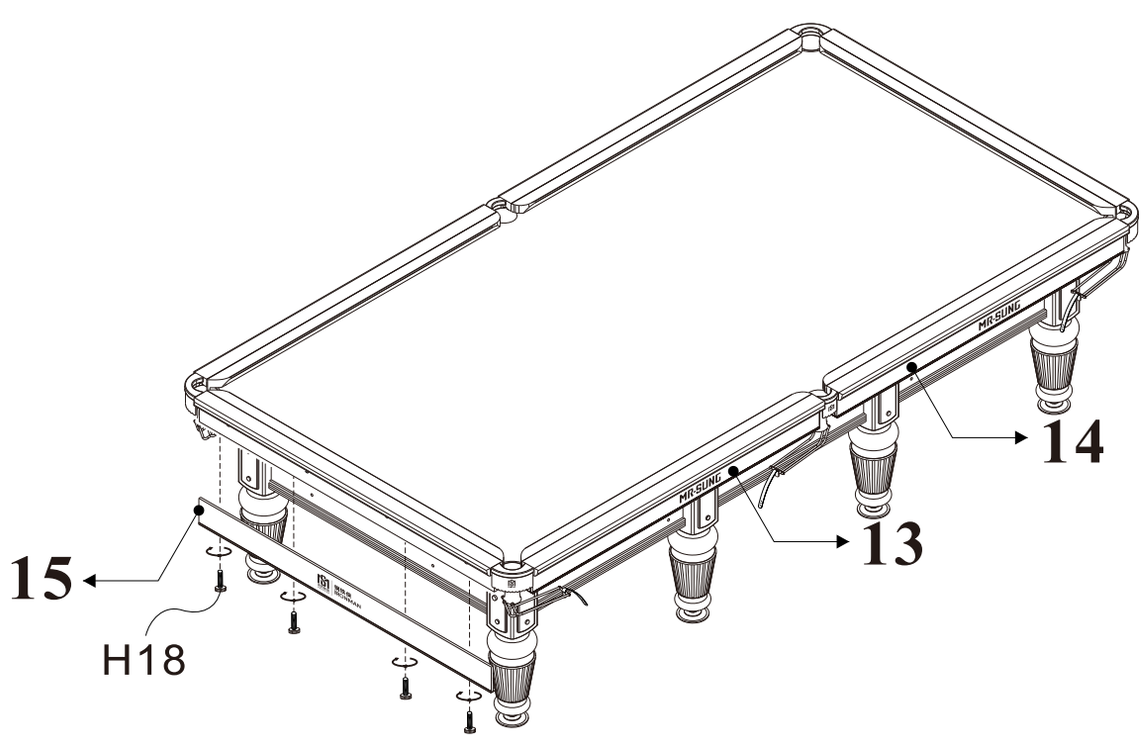


FIG.15

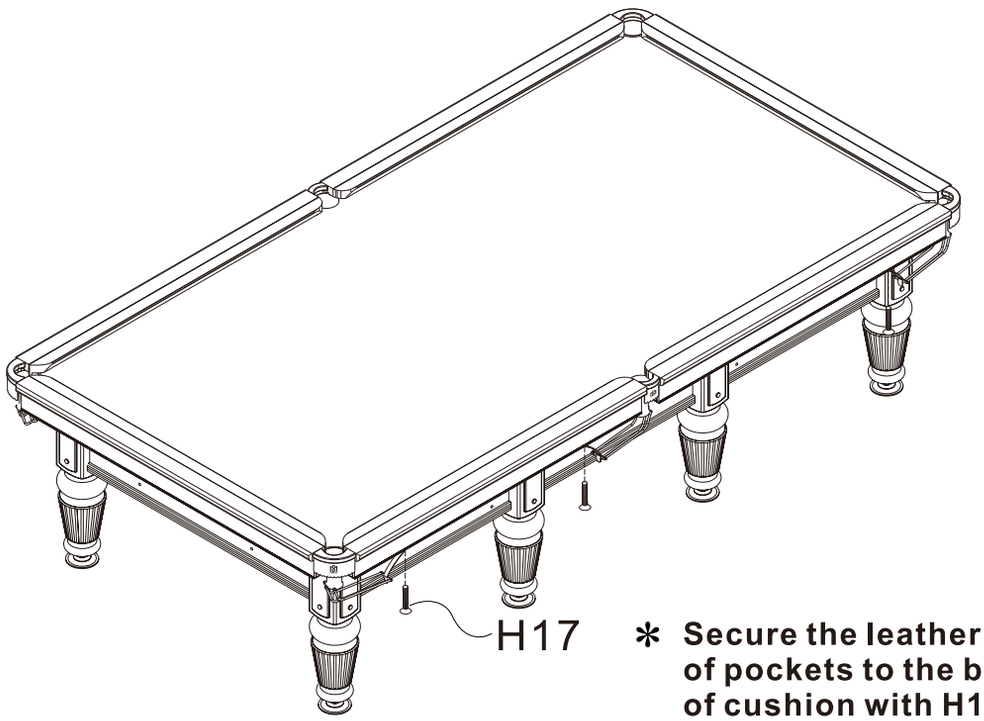

* **Secure the leather strip of pockets to the bottom of cushion with H17**
* 用螺杆H17將球袋皮帶固定在釘布板

FINISH

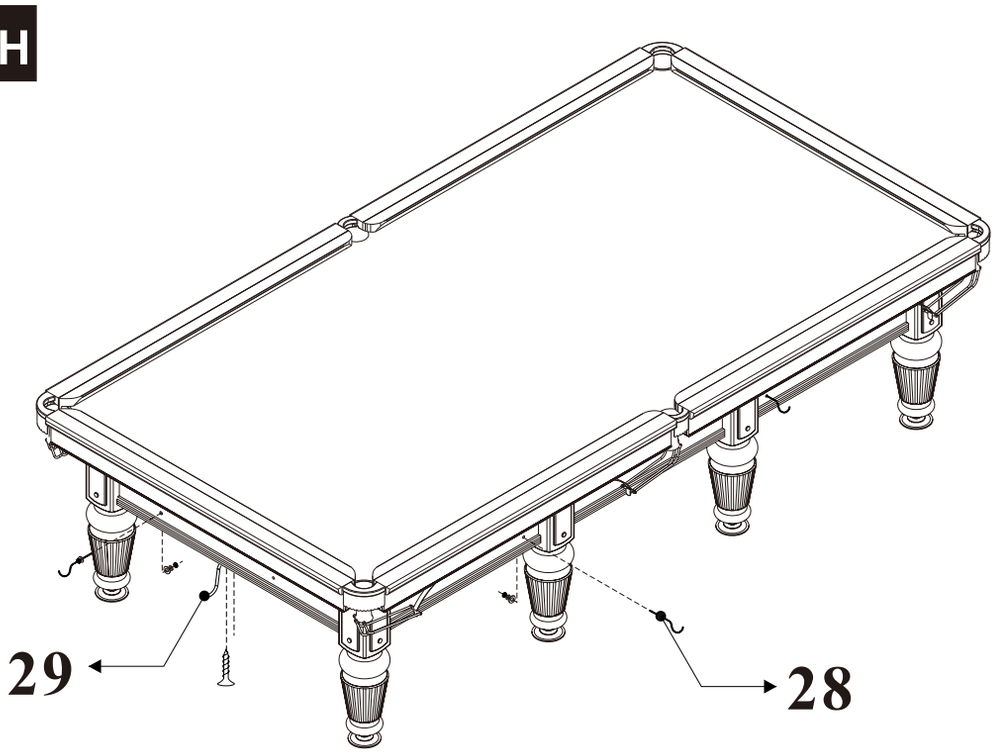

* **Install Hook 28 to the table(take off the nut that pre-attached first)**
* 將挂鈎28安裝到圍板。