Sword

劍 貳代



BILLIARDS INSTRUCTION MANUAL

臺球桌安裝說明書

12' SNOOKER



請先整體看一遍說明書，再根據步驟安裝 PLEASE READ THE INSTRUCTION MANUAL THOROUGHLY FIRST AND THEN INSTALL ACCORDING TO THE STEPS!

www.rasson.cn

JAN.2024










HARDWARE / 五金單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	H1		HEX HEAD BOLT 1/2" X 9"(M12X 230mm)	24
	H2		SPRING LOCK WASHER 1/2" I.D.	24
	H3		FLAT WASHER 1/2" I.D.	24
	H4		NUT 1/2" I.D.	24
	H5		HEX HEAD CROSS BOLT 3/8" X 4"(M10 X 100mm)	2
	H6		FLAT WASHER 3/8" I.D.	4
	H7		NUT 3/8" I.D.	2
RAIL/POCKET/FRAME/SLATE 扶手 / 球袋 / 圖板 / 石板	H8		CROSS ROUND SCREW 10# X 2-5/32"(M5X55mm 白色)	50
	H9		HEX HEAD CROSS BOLT PRE-ASSEMBLED IN SLATE	/
	H10		SPRING LOCK WASHER PRE-ASSEMBLED IN SLATE	/
	H11		FLAT WASHER PRE-ASSEMBLED IN SLATE	/
	H12		CROSS BOLT-COLOR 1/4" X 3/4"(D6-20G X 18MM 彩鋅)	18
	H13		HEX HEAD BOLT (built-in rails)	/
	H14		FLAT WASHER (built-in rails)	/
	H15		ADJUST BOLT 調整器螺杆	28
	H16		WOOD JOINT 木梢	24

PARTS LIST / 配件單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌脚	1		CORNER LEG 底脚	4
	2		MIDDLE LEG 中脚	4
CABINET/FRAME 大框 / 圍板	3		SIDE APRON 長圍板	2
	4		END APRON 短圍板	2
	5		LEG BEAM FOR MIDDLE LEGS 中脚板	2
	6		CENTER BEAM 中長梁	1
TOP RAIL 扶手	7		LEFT STEEL CUSHION 左鋼庫	2
	8		RIGHT STEEL CUSHION 右鋼庫	2
	9		END STEEL CUSHION 端鋼庫	2
	10		TOP RAIL LEFT SIDE 左扶手	2
	11		TOP RAIL RIGHT SIDE 右扶手	2
	12		TOP RAIL END 端扶手	2
POCKET 球袋	13		CORNER POCKET 角袋	4
	14		SIDE POCKET 中袋	2
	15		RING FOR CORNER POCKETS 角袋棉網環	4
	16		RING FOR SIDE POCKETS 中袋棉網環	2
	17		SLATE (END) 石板（端邊）	2

PARTS LIST / 配件單

表2




PACKAGE 包装	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
SLATE 石板	18		SLATE (MDDLE) 石板（中間）	2
	19		SLATE (CENTER) 石板（中心）	1
WOOD FRAME 釘布板	20		WOOD FRAME (END) 釘布板（端邊）	2
	21		WOOD FRAME (SIDE) 釘布板（長邊）	4
	22		WOOD FRAME (SIDE POCKET) 釘布板（中袋）	4
	23		WOOD FRAME (CORNER POCKET) 釘布板（底袋）	2
APRON 裙板	24		SIDE APRON(IN RAIL) 長邊裙板	4
	25		END APRON(INRAIL) 端裙板	2
	26		CLOTH 臺尼	1
HOOK 挂鈎	27		HOOK 挂钩	8
	28		ACCESSORY HOOK 三角框挂鈎	1
	29		LEG COVER 腳蓋板	12
	30		PLASTIC CAP 圍板孔蓋	24

FIG 1

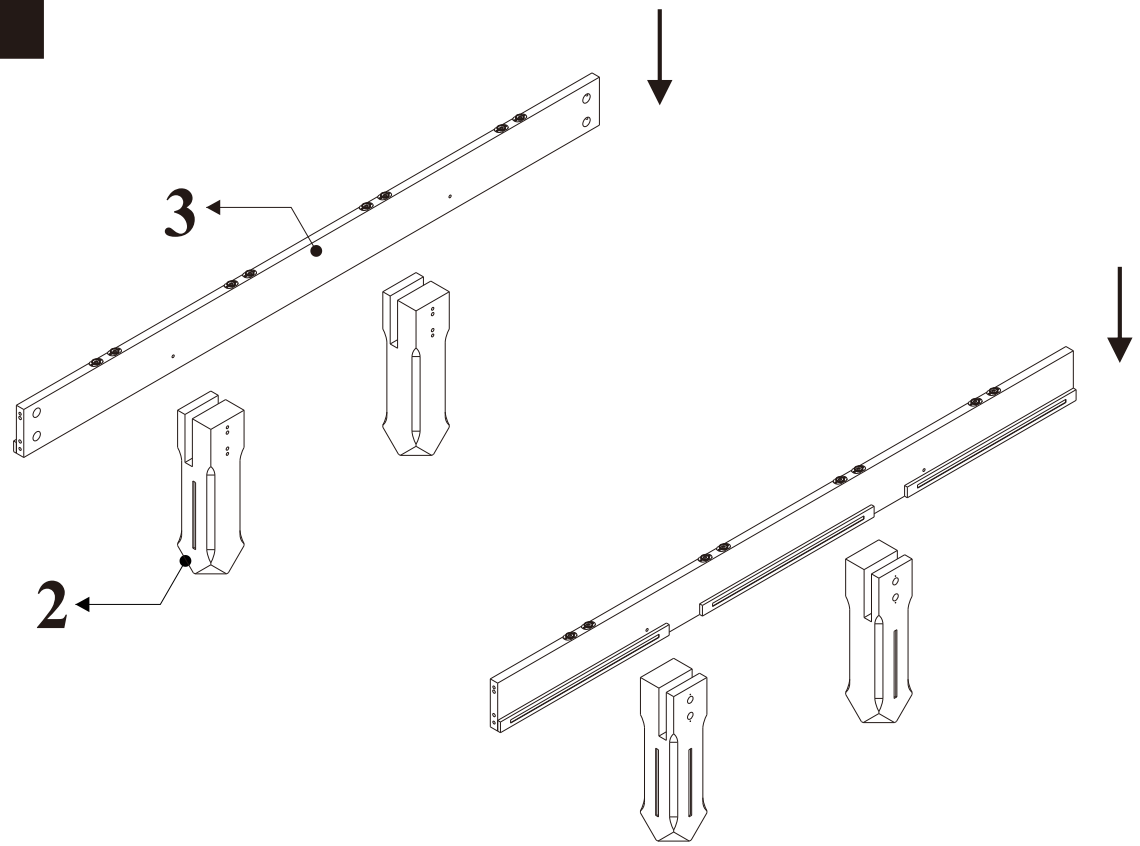


FIG 2

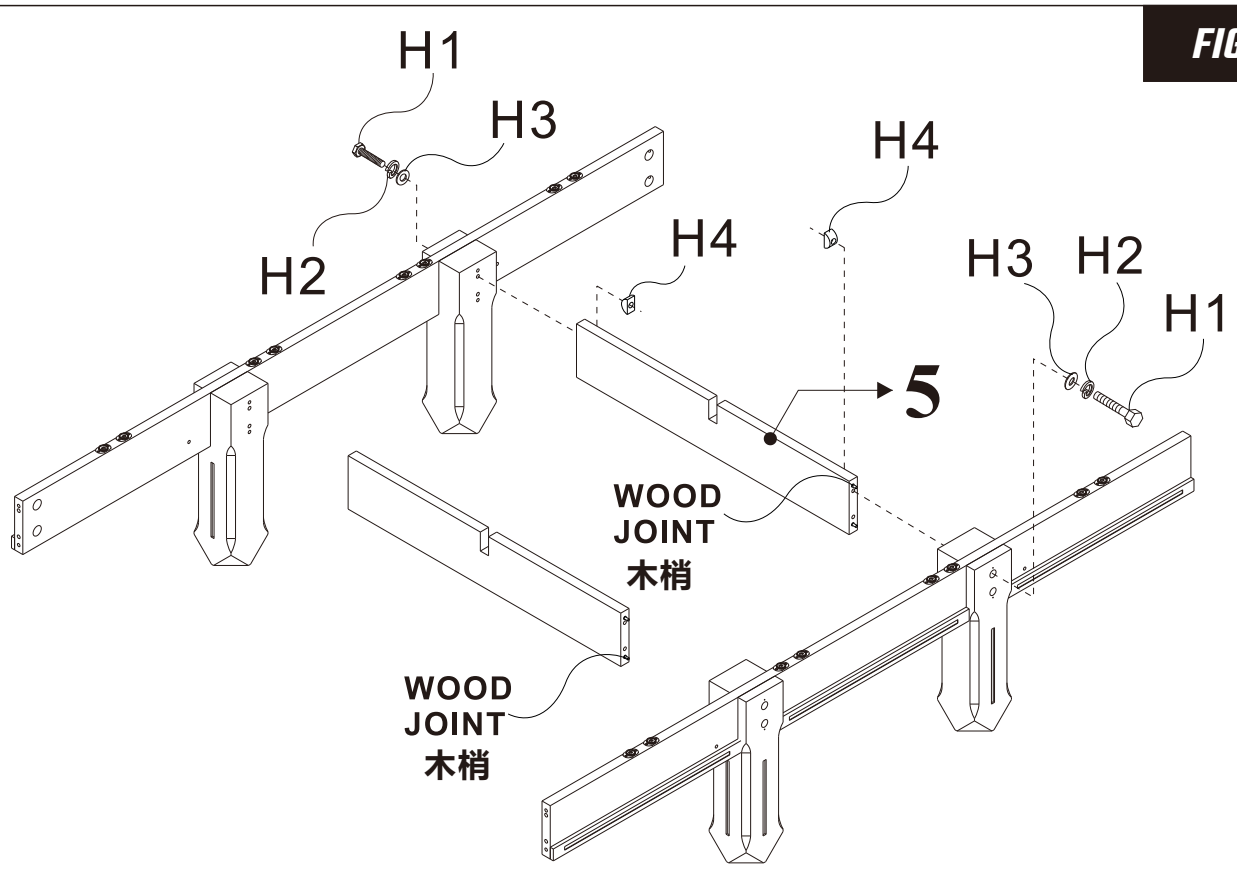


FIG 3

* Insert WOOD JOINT into frame, then connect with H1
圍板插入木梢，然後用H1螺杆連接。


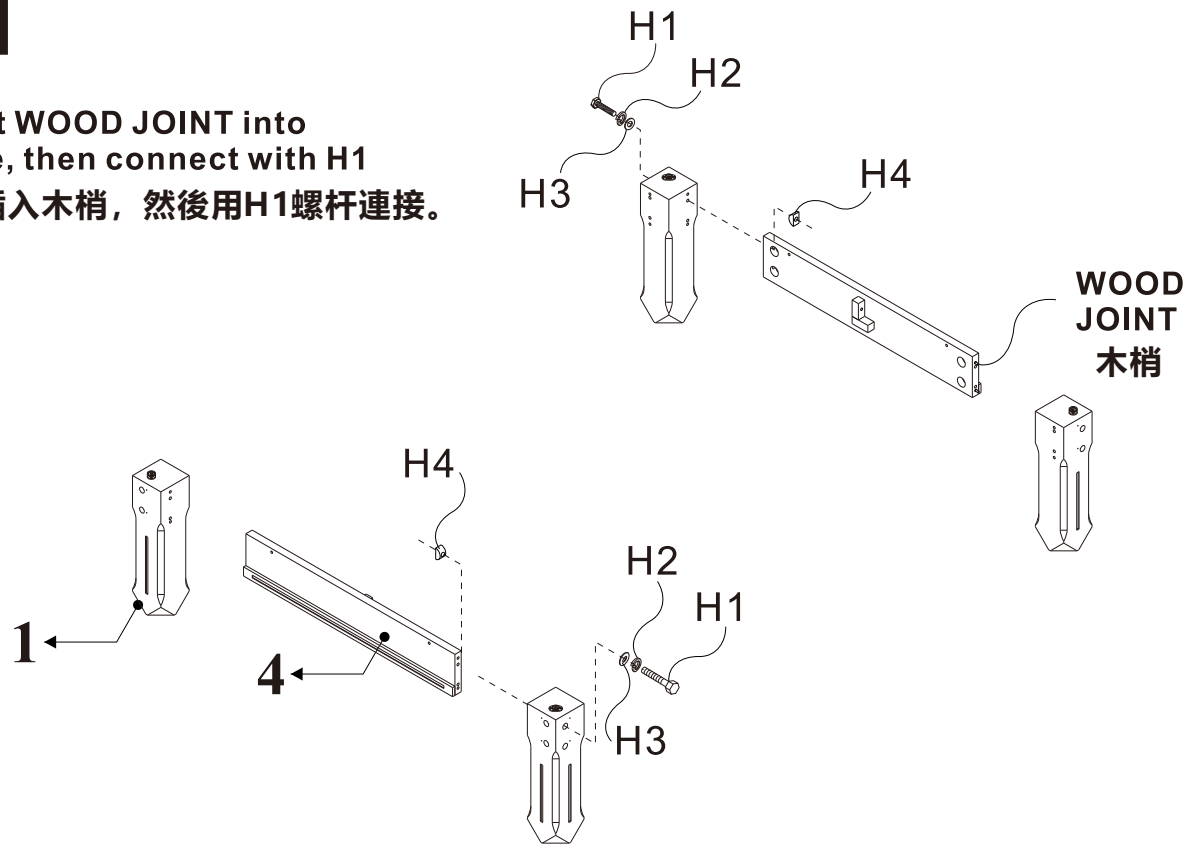


FIG 4

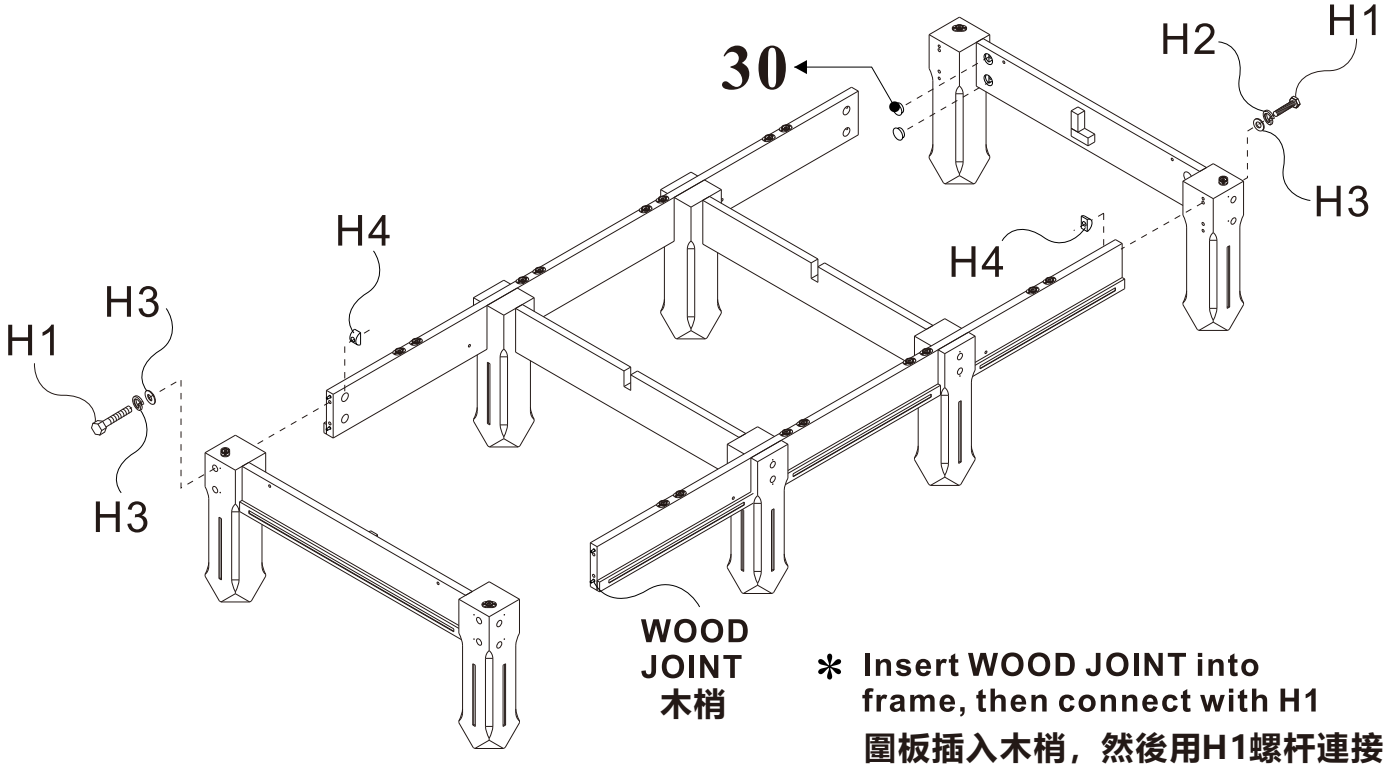

* Insert WOOD JOINT into frame, then connect with H1
圍板插入木梢，然後用H1螺杆連接。

FIG 5

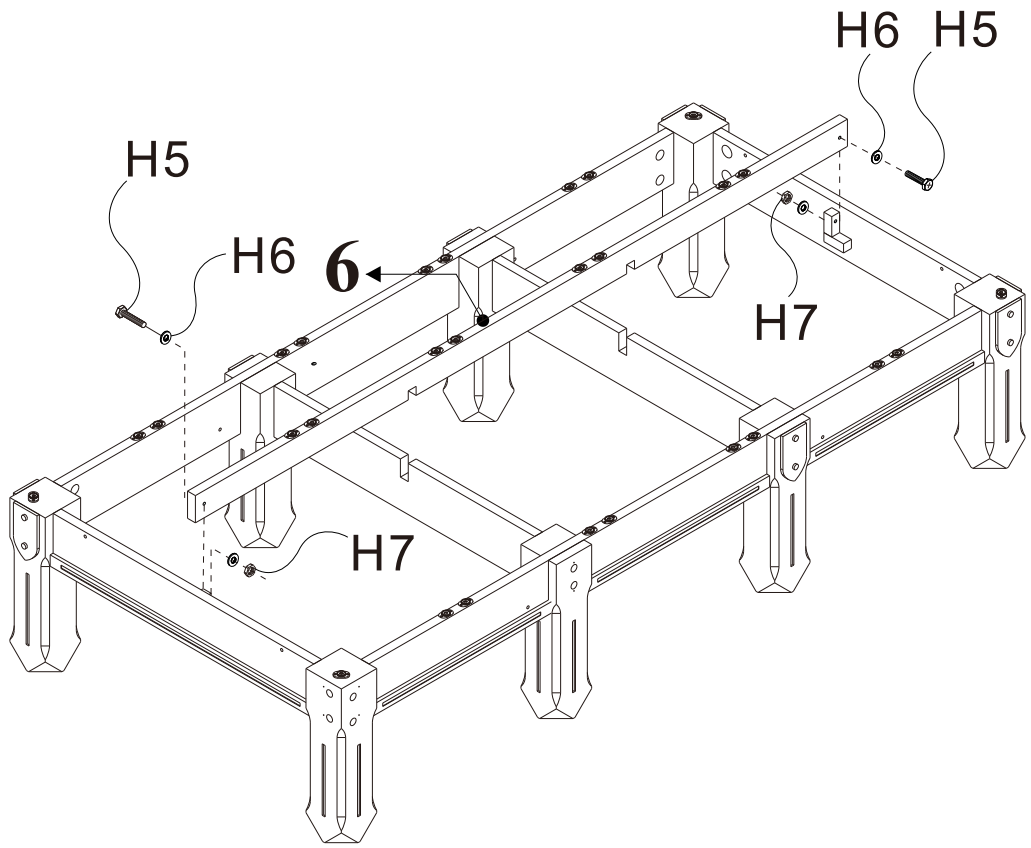


FIG 6


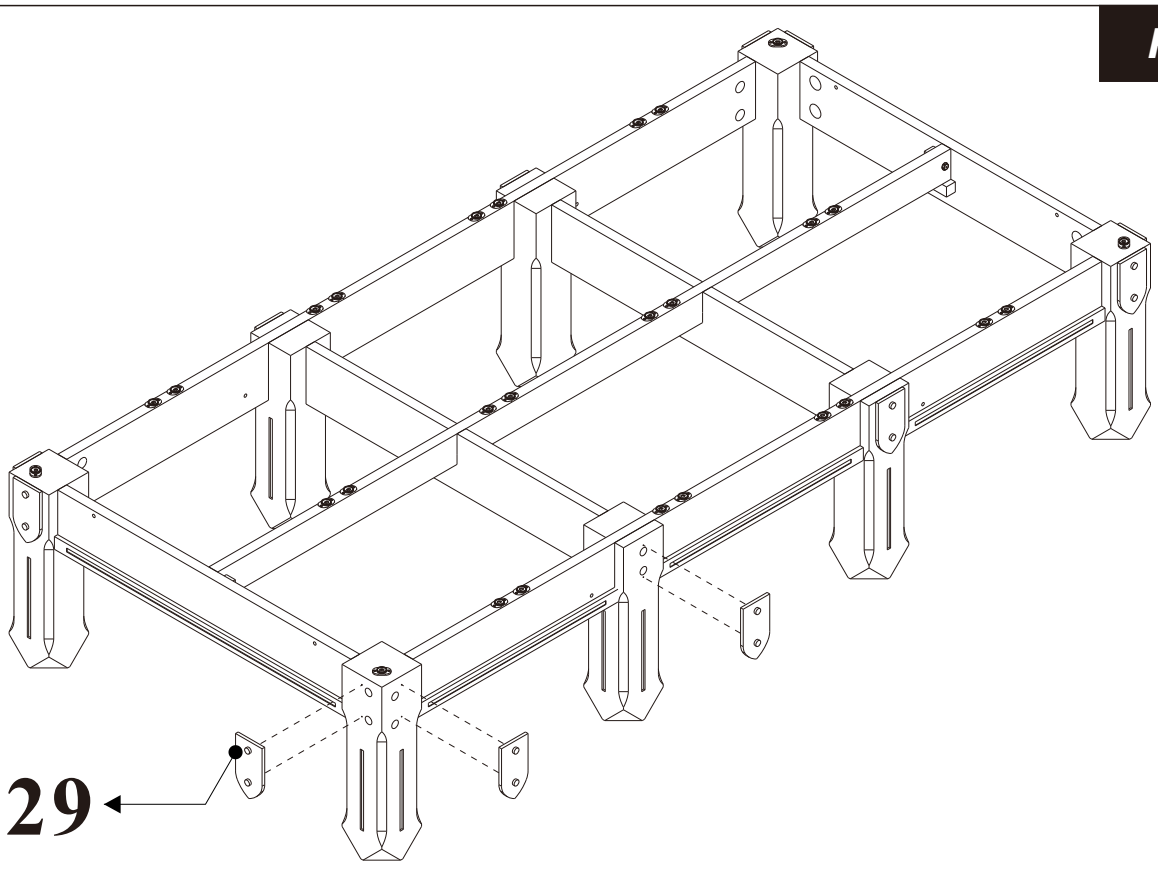


FIG 7

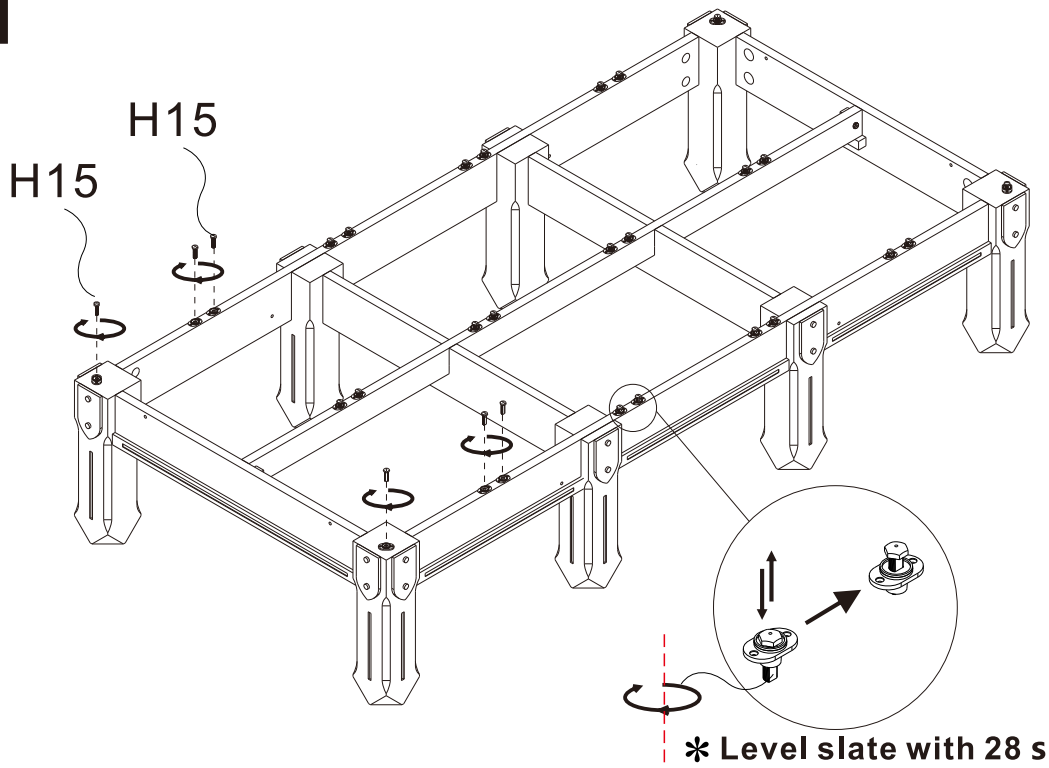

✻ Level slate with 28 slate leveller adjusters
用28個石板調節螺杆調平石板

FIG 8

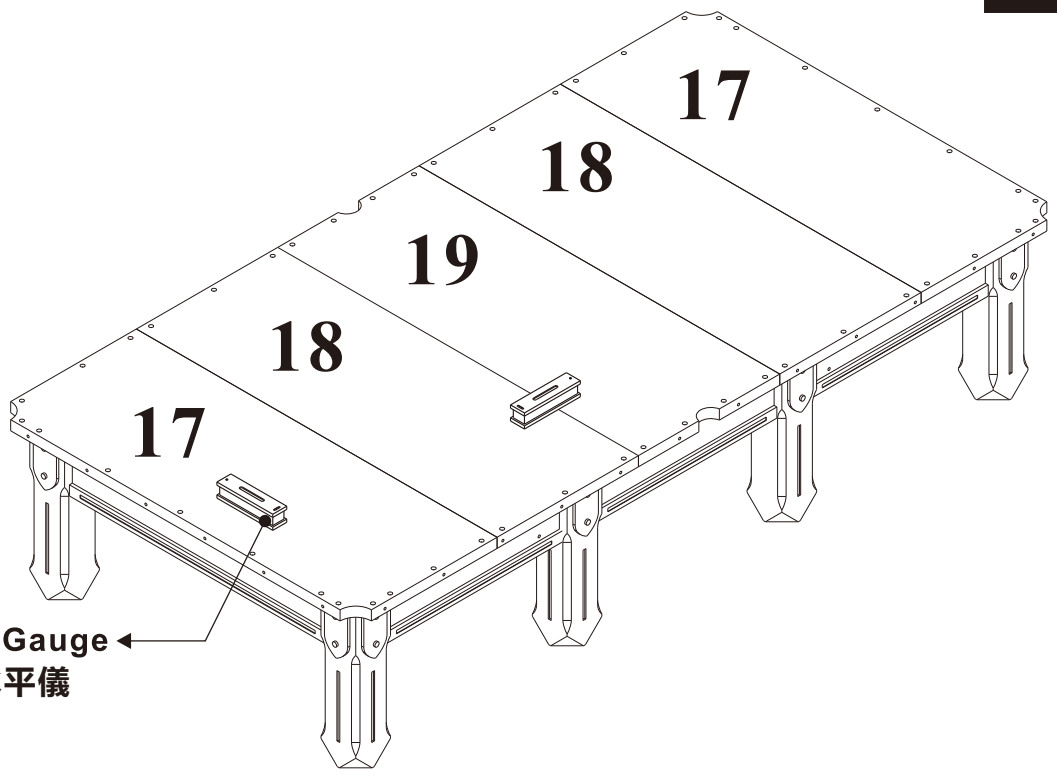


FIG 9

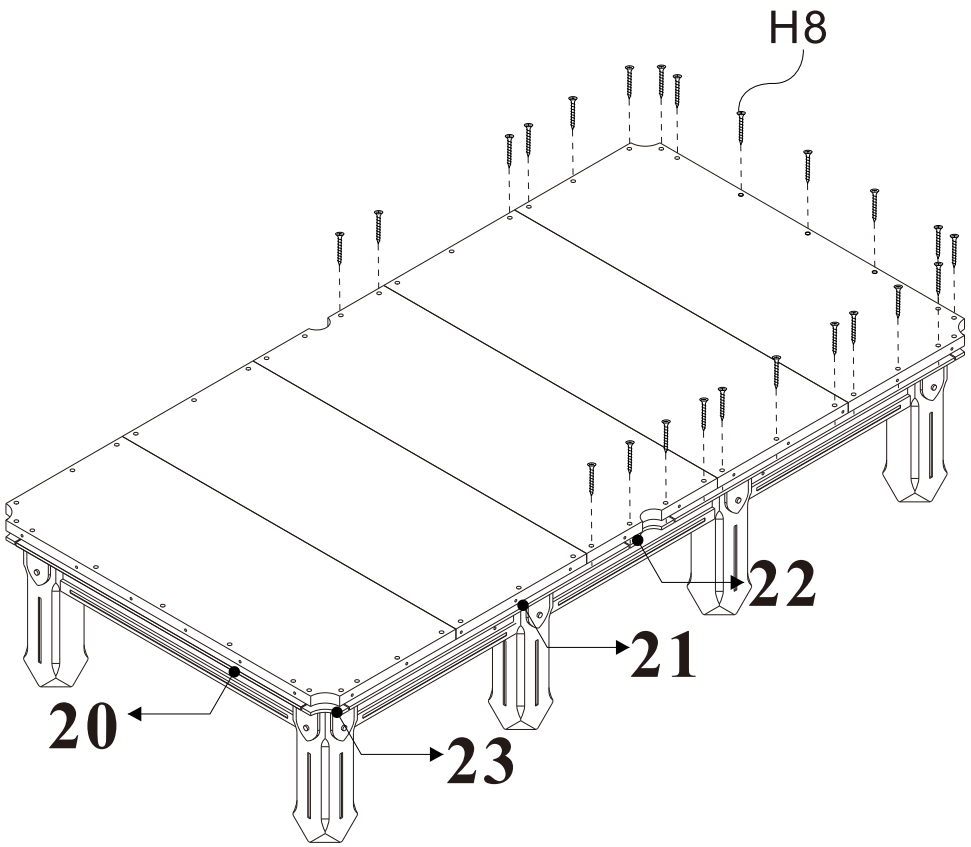



FIG 10

Cut holes in cloth at rail both locations.

石板螺杆孔開洞



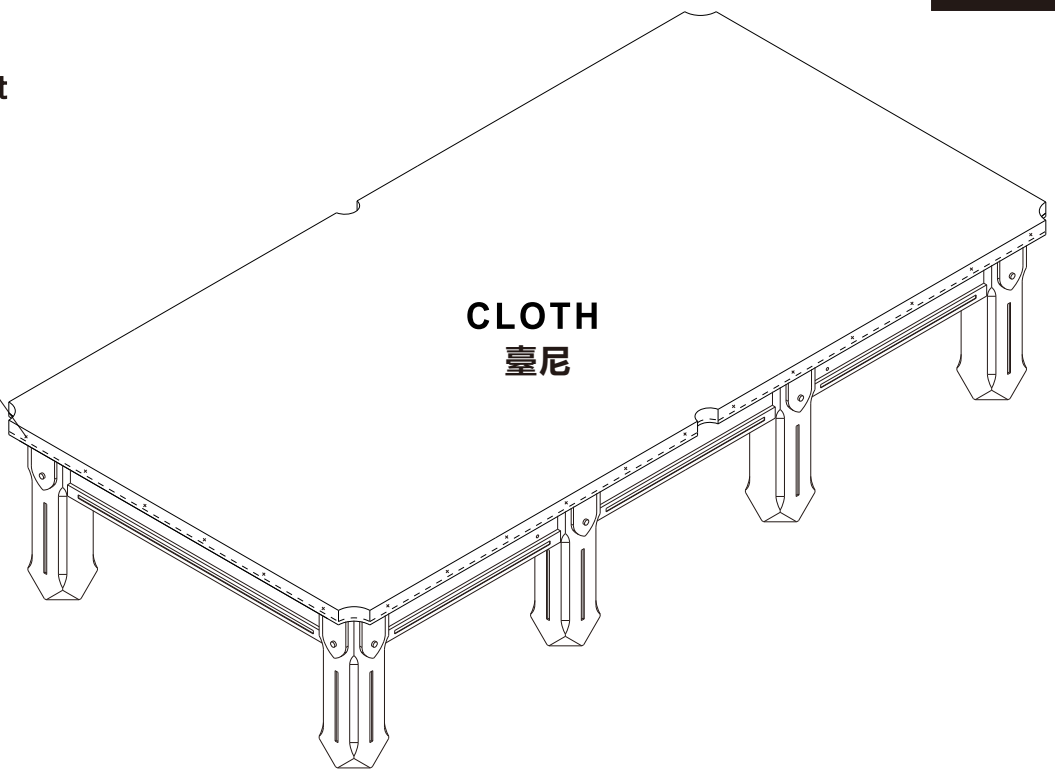


FIG 11

✻ Attach H9-H11 into slate
安装H9-H11到石板



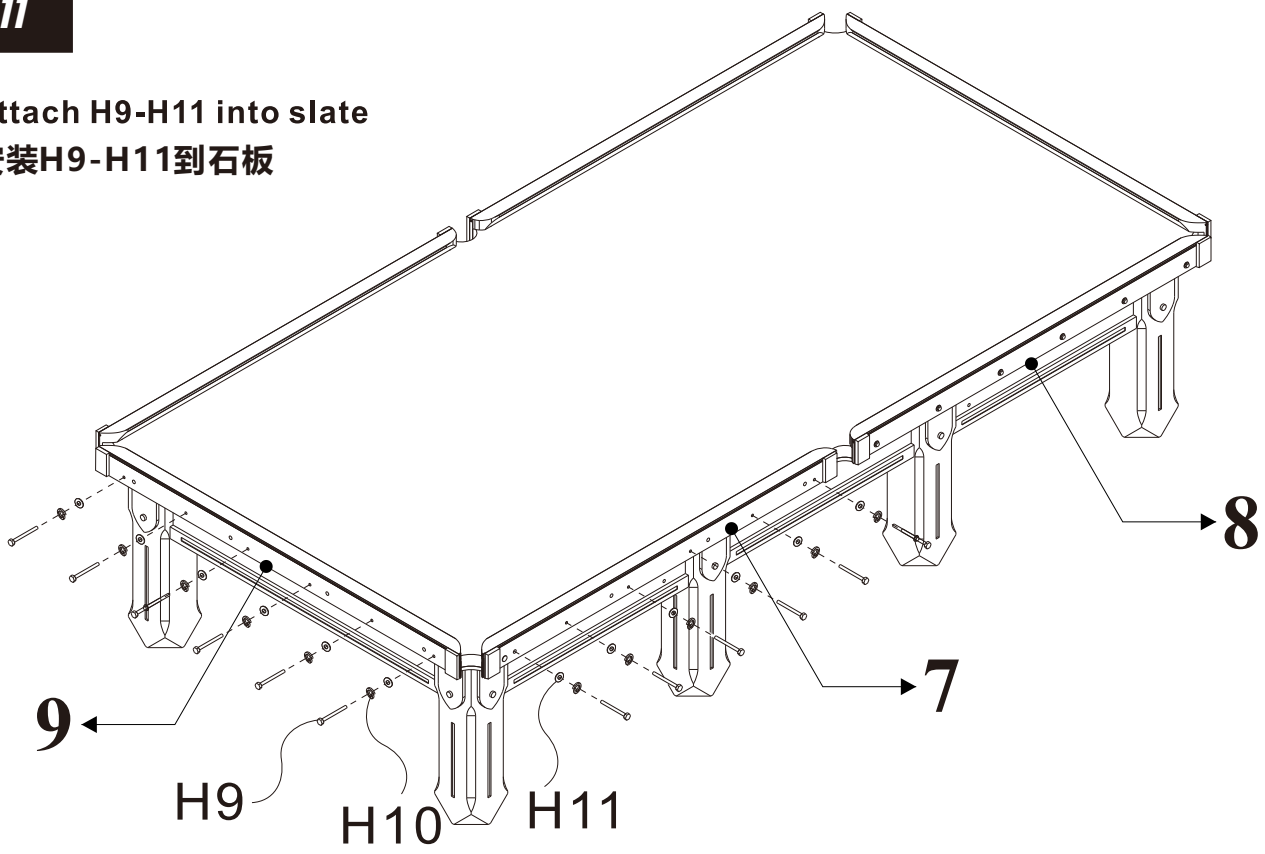


FIG 12

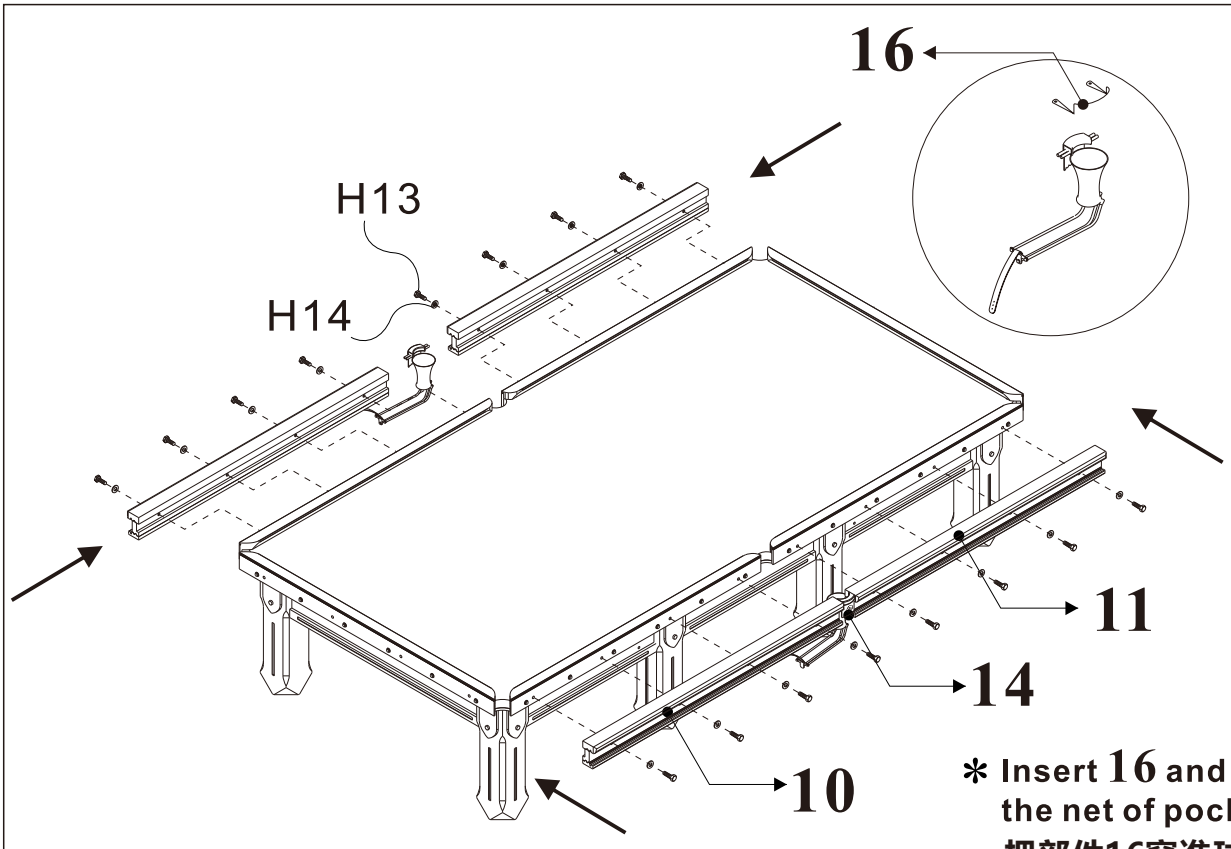

✻ Insert 16 and go through the net of pockets
把部件16穿進球袋棉網中


FIG 13

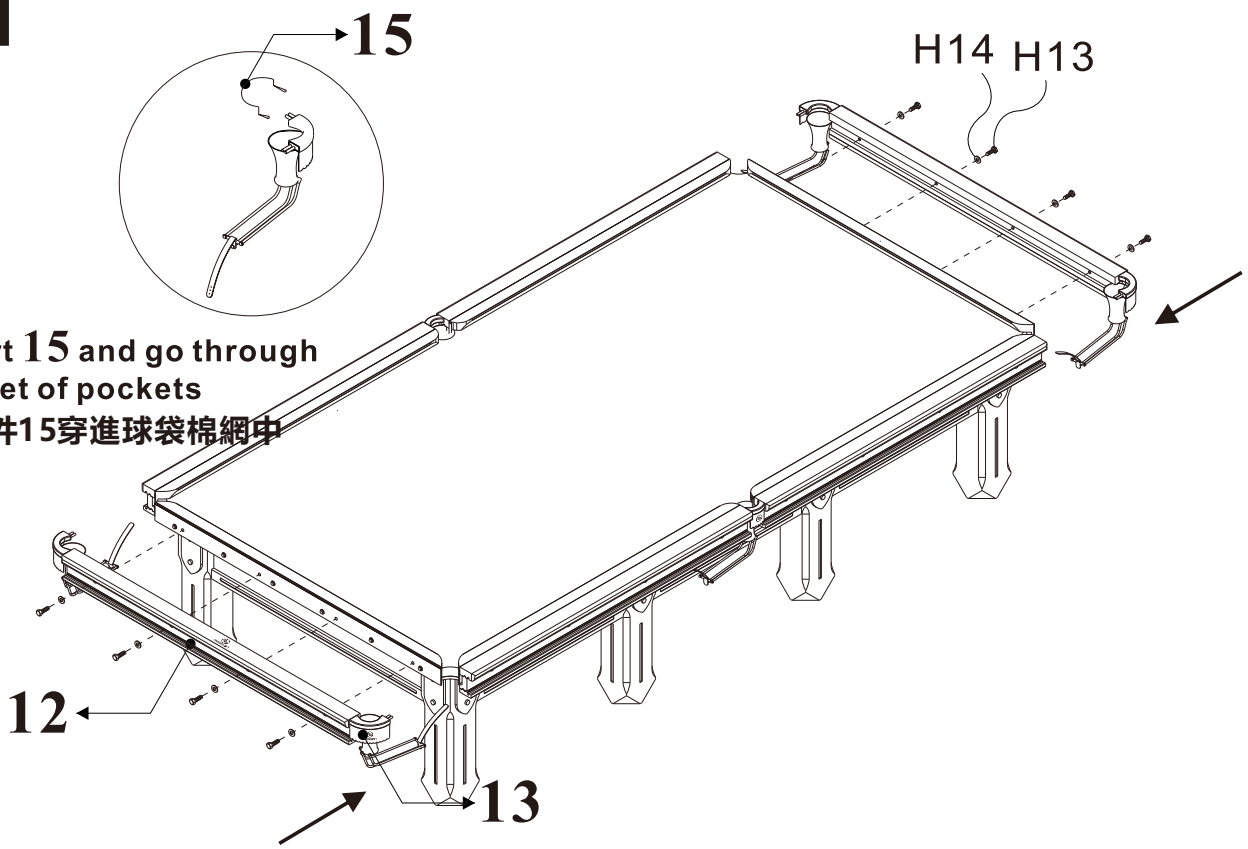

* Insert 15 and go through the net of pockets
把部件15穿進球袋棉網中


FIG 14

* Please assemble the press frame in character order
請按字符順序組裝壓框

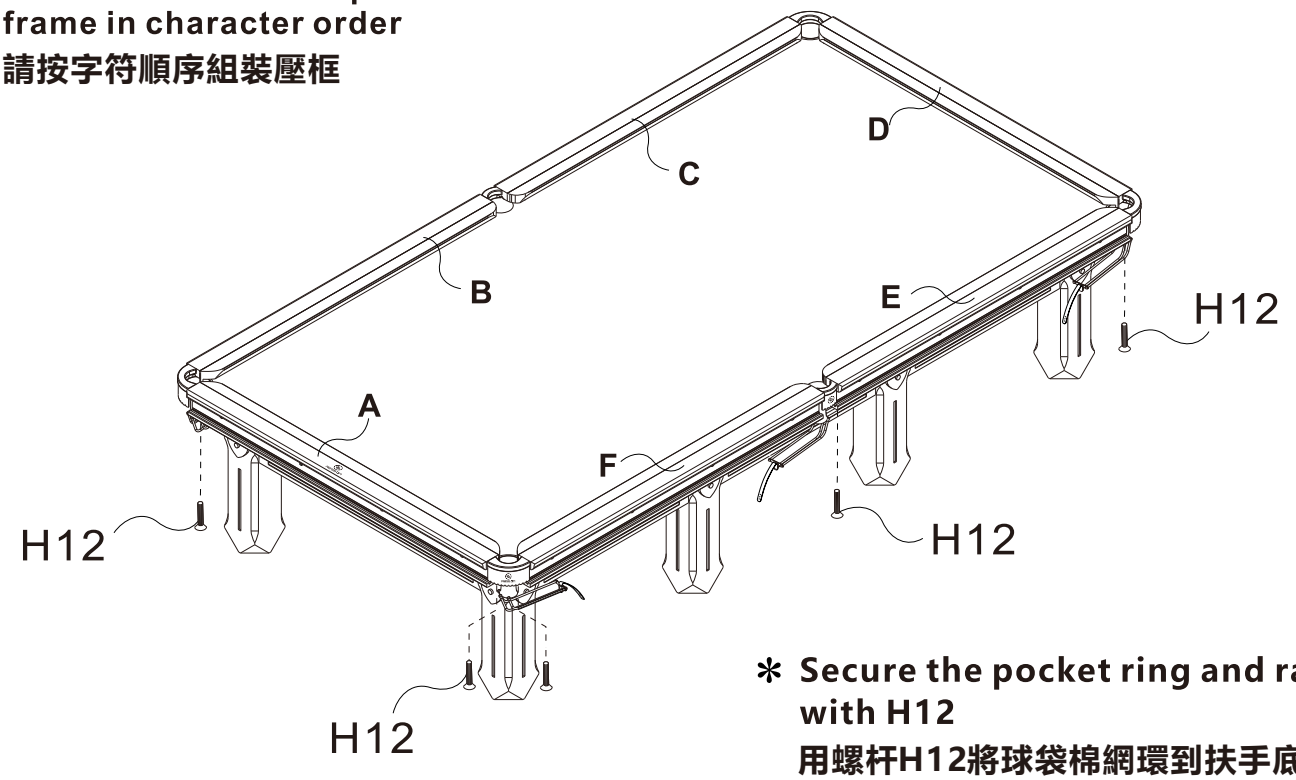

* Secure the pocket ring and rails with H12
用螺杆H12將球袋棉網環到扶手底部


FIG 15

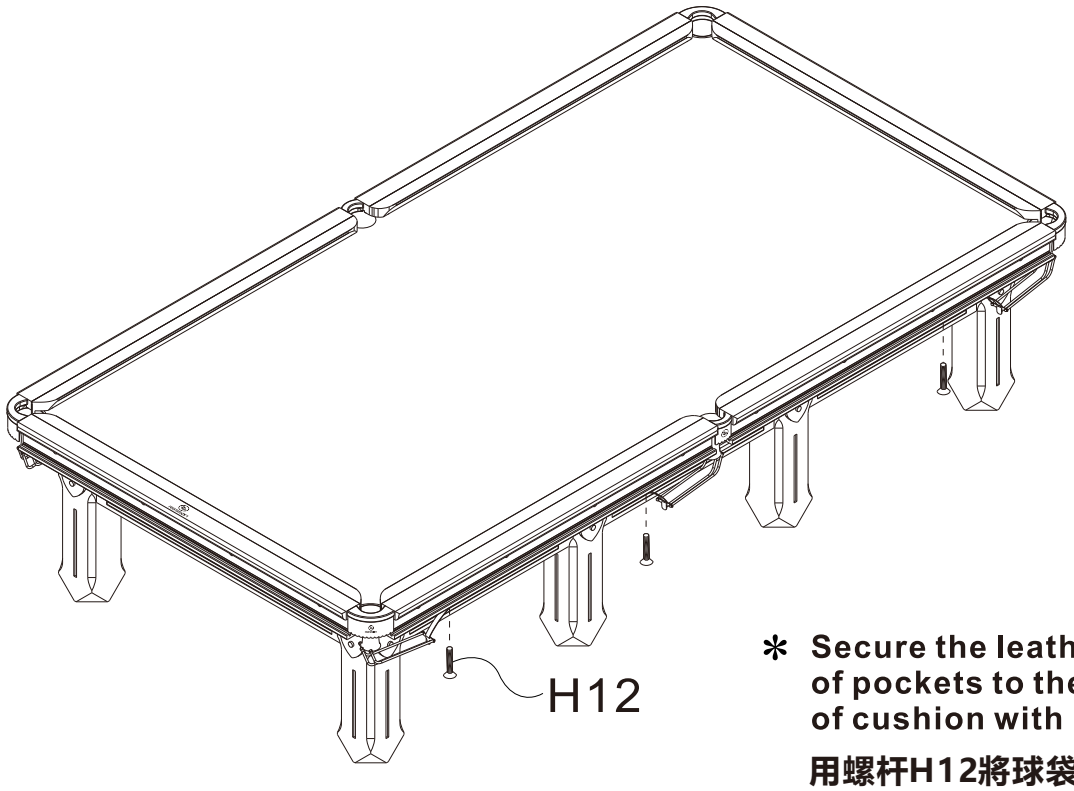

* Secure the leather strip of pockets to the bottom of cushion with H12

用螺杆H12將球袋皮帶固定在釘布板


FIG 16

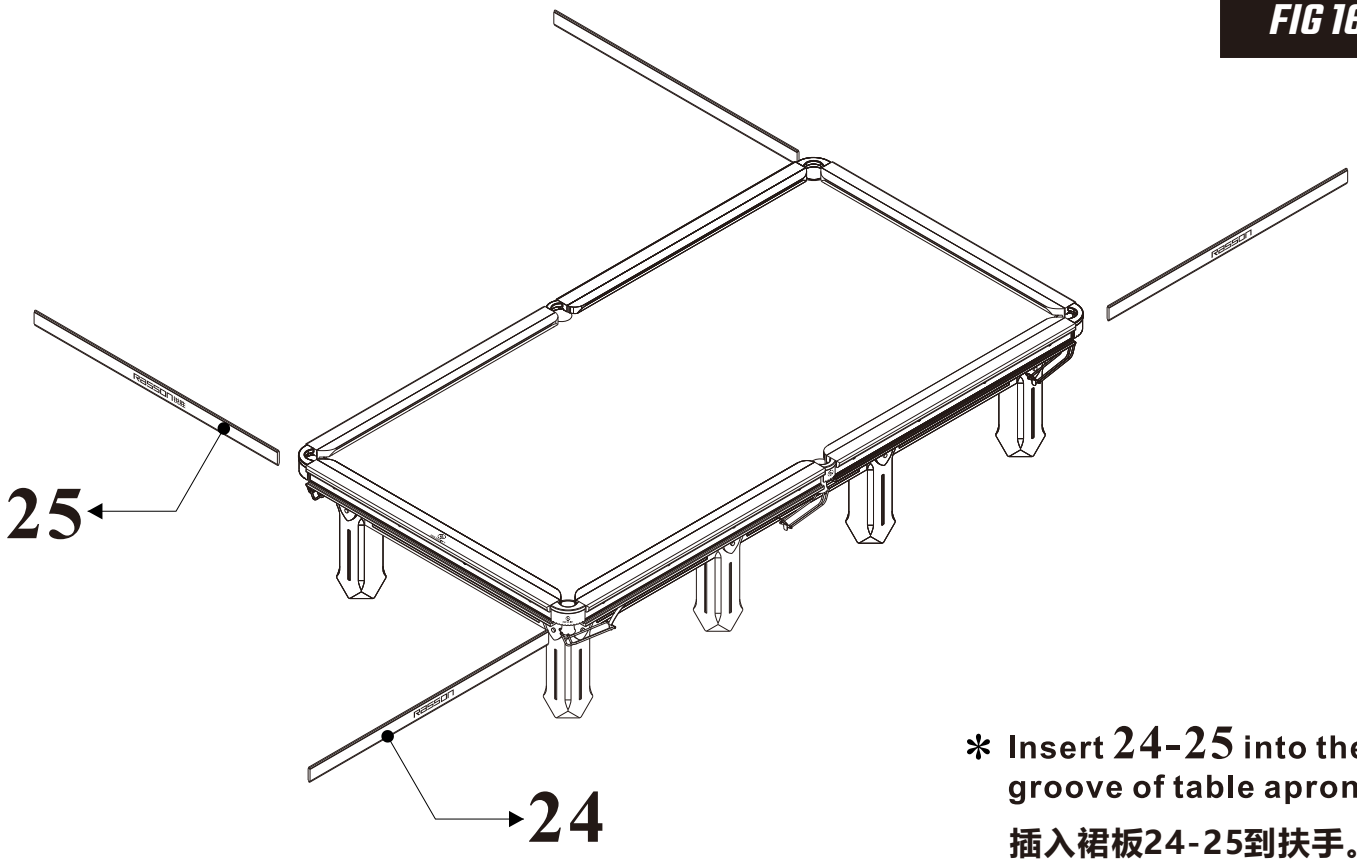

* Insert 24-25 into the groove of table apron

插入裙板24-25到扶手。

FINISH

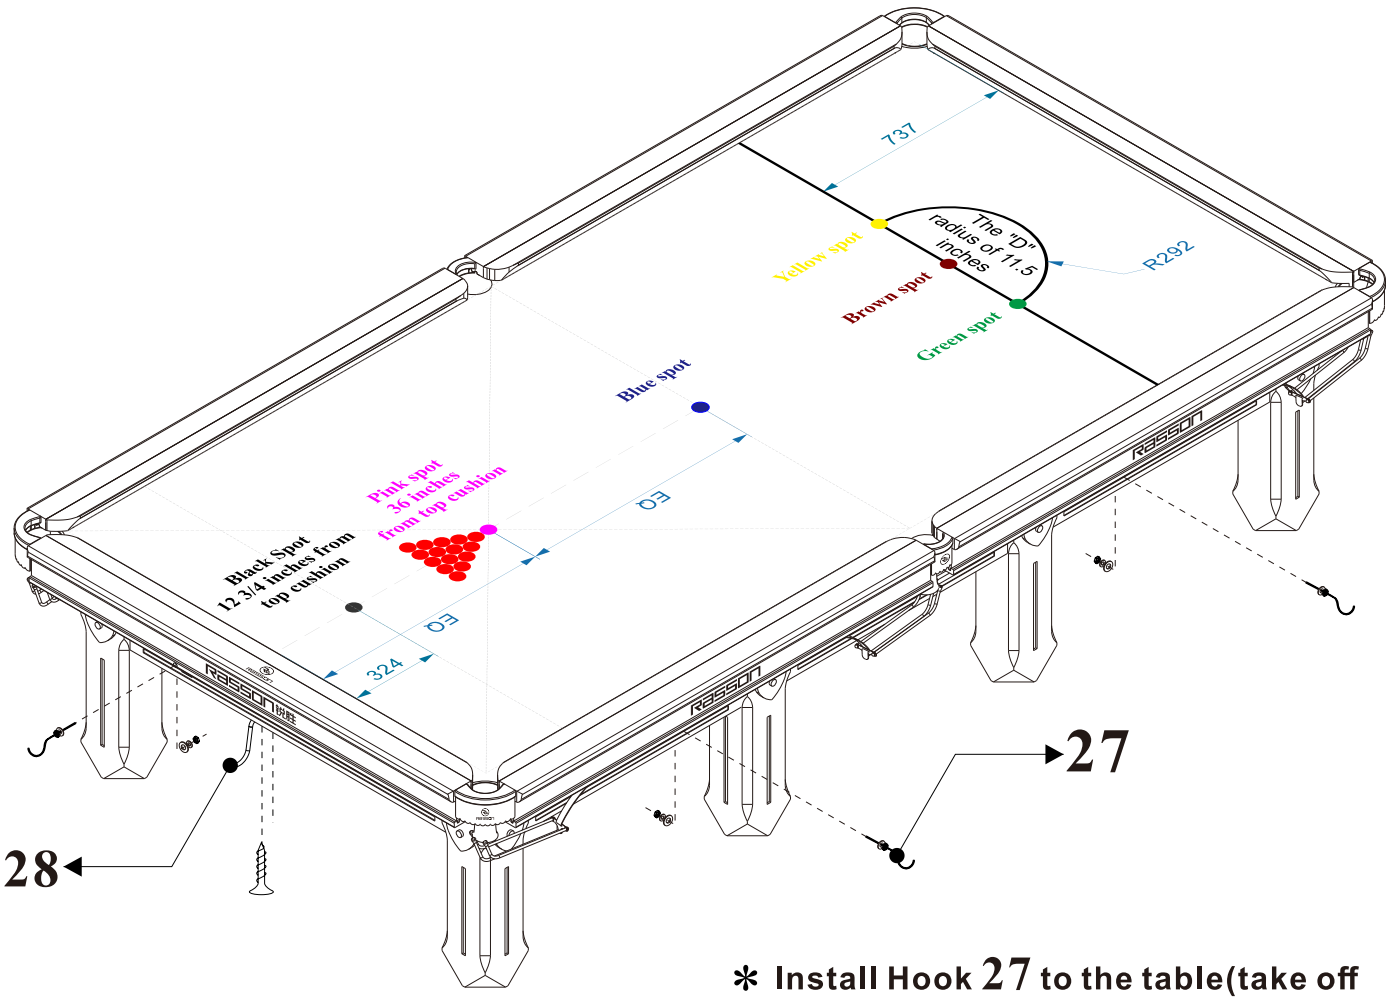

* Install Hook 27 to the table(take off the nut that pre-attached first)
將挂鈎27安裝到圍板





No.18th Floor, Weiyangyipin Building, Leying Plaza, Bali Lake New District, Jiujiang City, Jiangxi Province, China

kevina@rasson.cn

+86-792-898-6880

RASSON





